
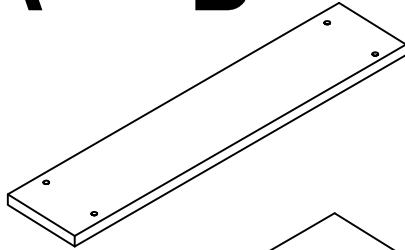
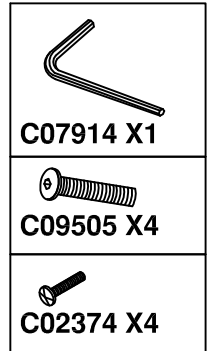


A




B

PAG.2-9




C

PAG.10-16

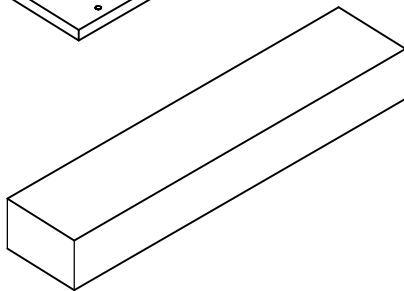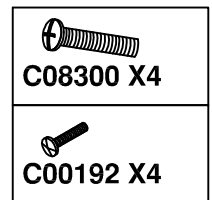

D

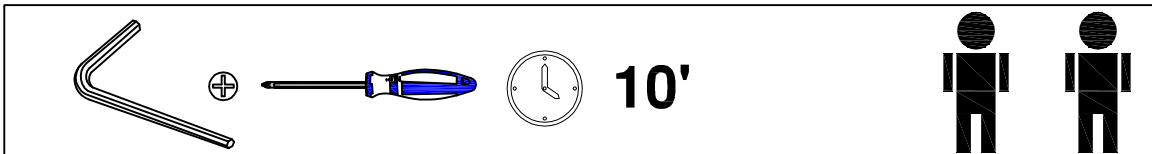

Complemento Cuna de 120X60 CP-1774 KIT GEMELAR Instrucciones de Montaje

Fabricado en Valencia, España

-IMPORTANTE: A CONSERVAR PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.

EN -IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE.READ CAREFULLY.

FR -ATTENTION: CONSERVER POUR CONSULTER AU FUTUR.

IT -IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONE.TENERE PER FUTURE CONSULTACIONE.



PT -IMPORTANTE: MANTENHA PARA FUTURAS CONSULTAS.LÉASE ANTENTAMENTE.

R -ВАЖНО: СОХРАНИТЕ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ . ВНИМАТЕЛЬНО ПРОЧТИТЕ .





A - ماه. ظرفح اةعج ارملل. أرقا اءي ج لبق لامع تسالال

CN -重要事项: 保留以备将来参考, 请仔细阅读。




1

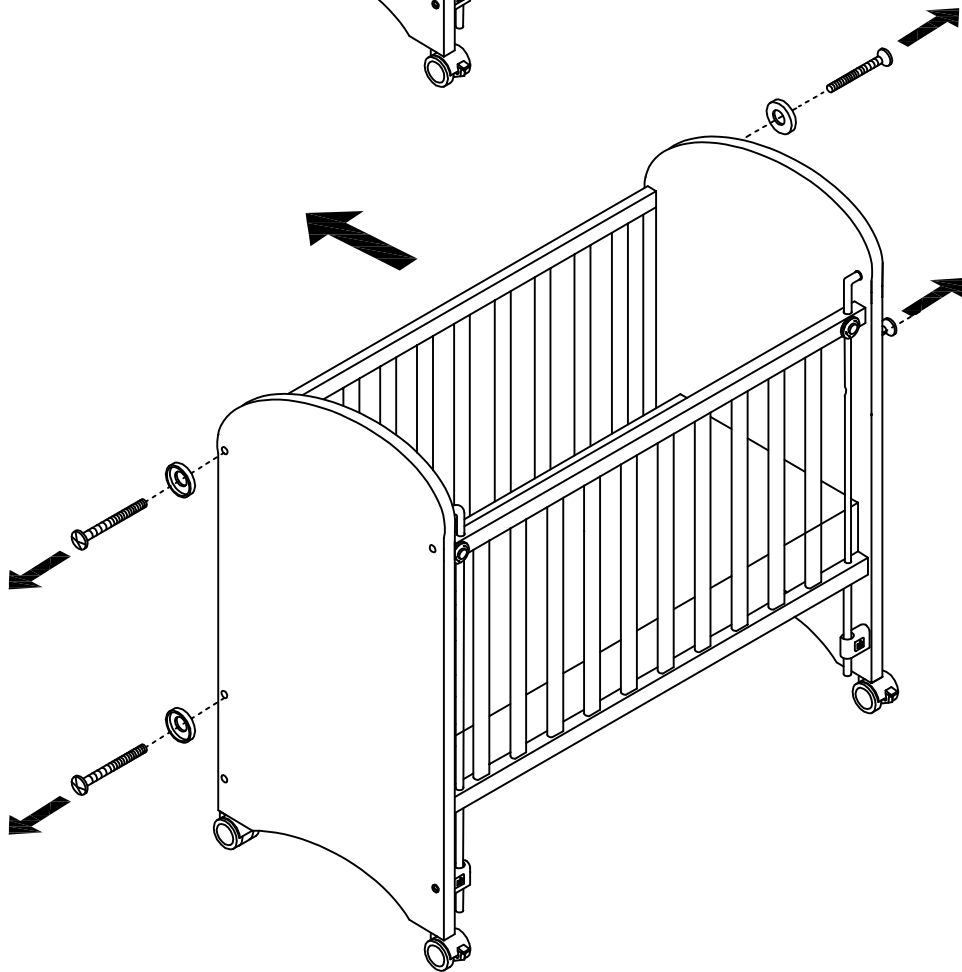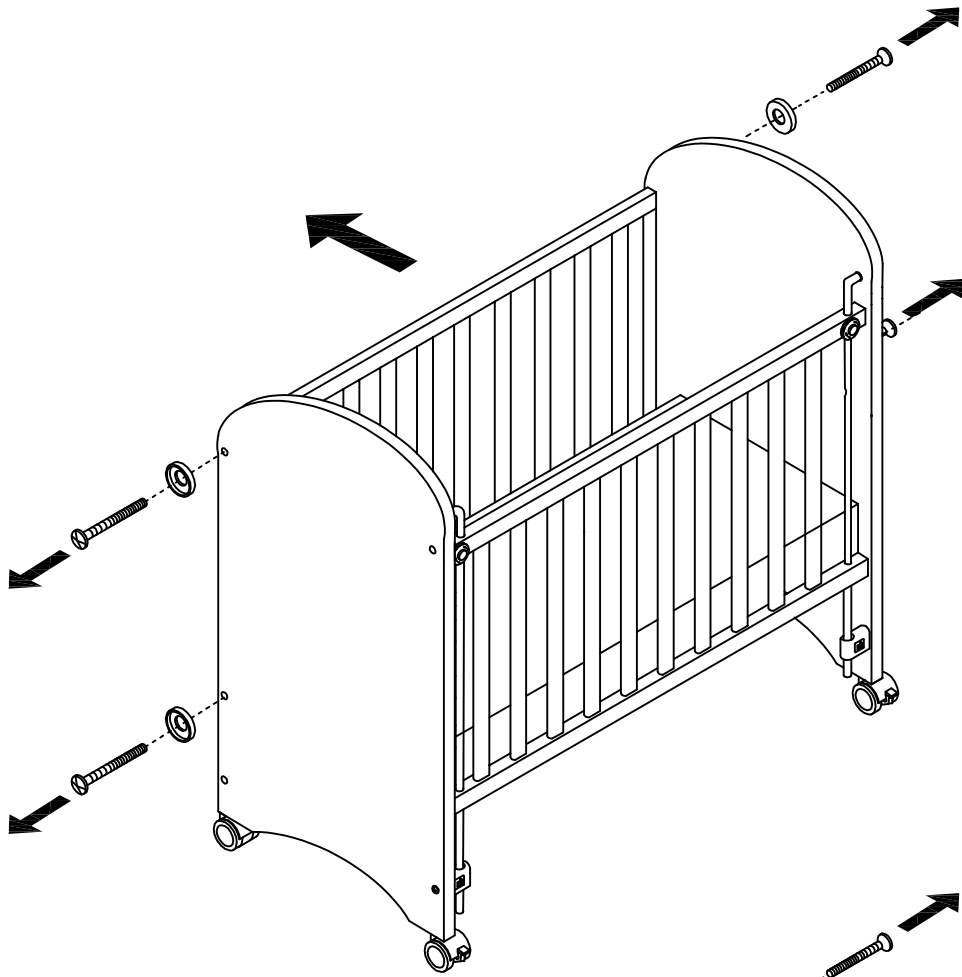


2

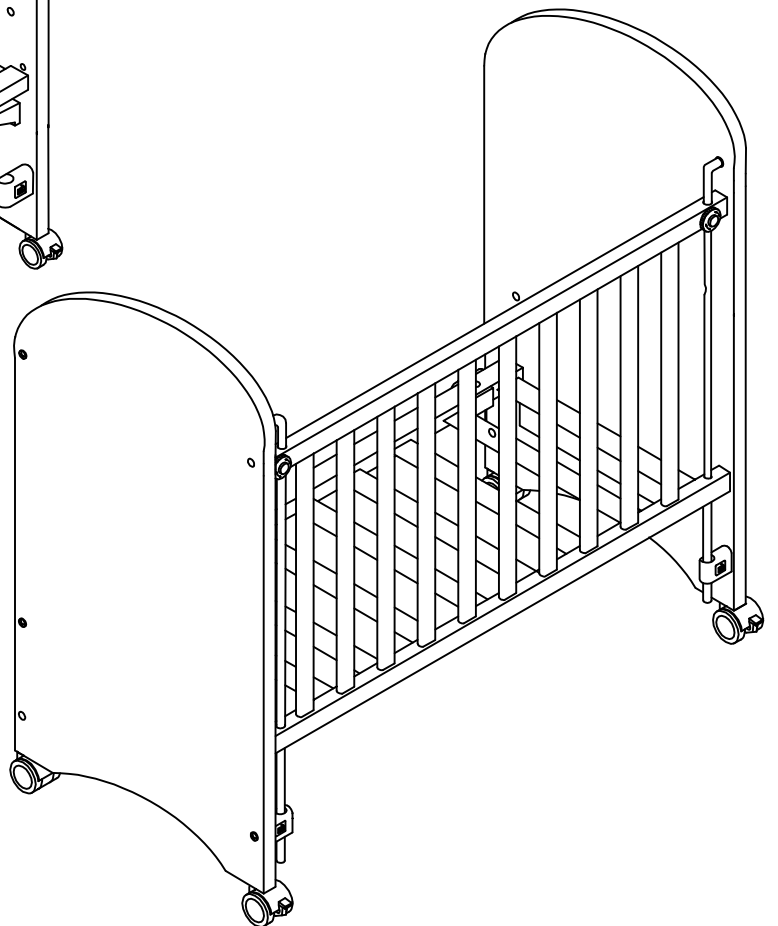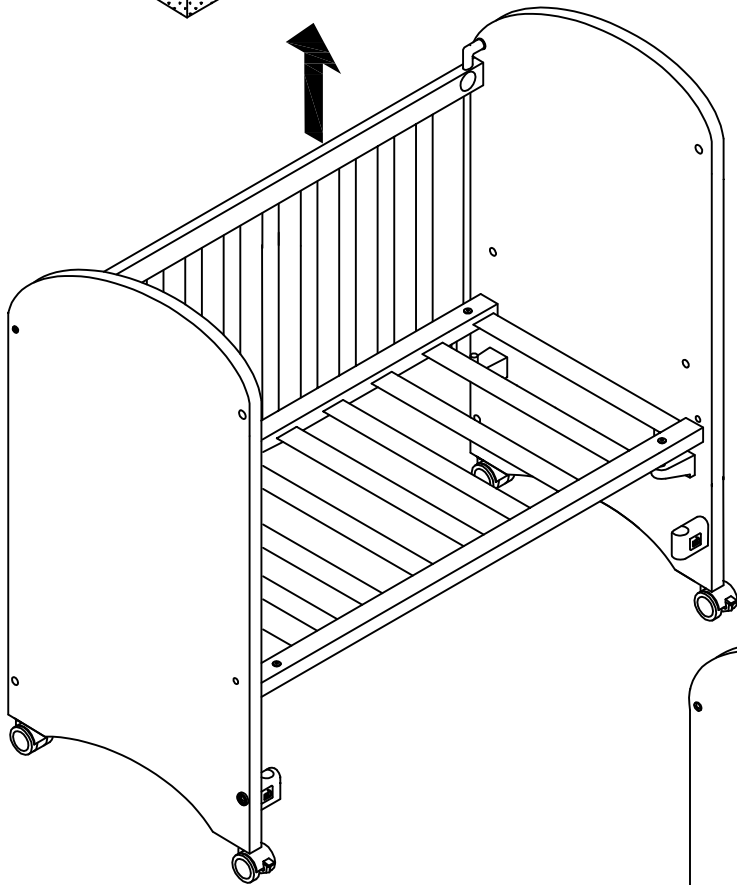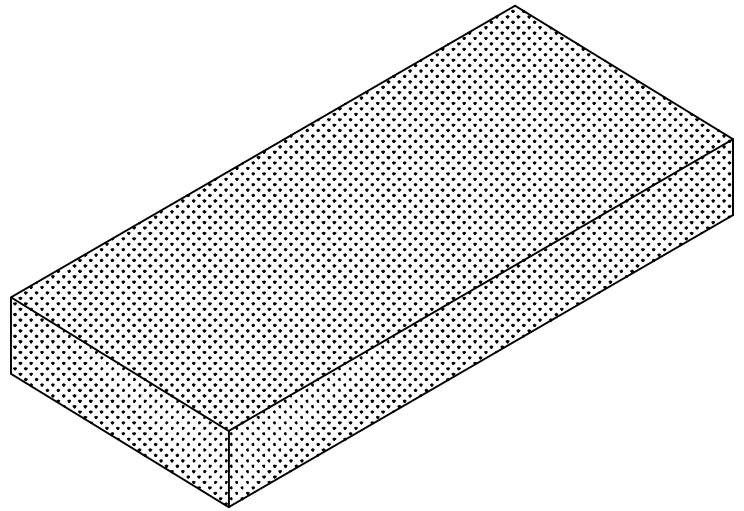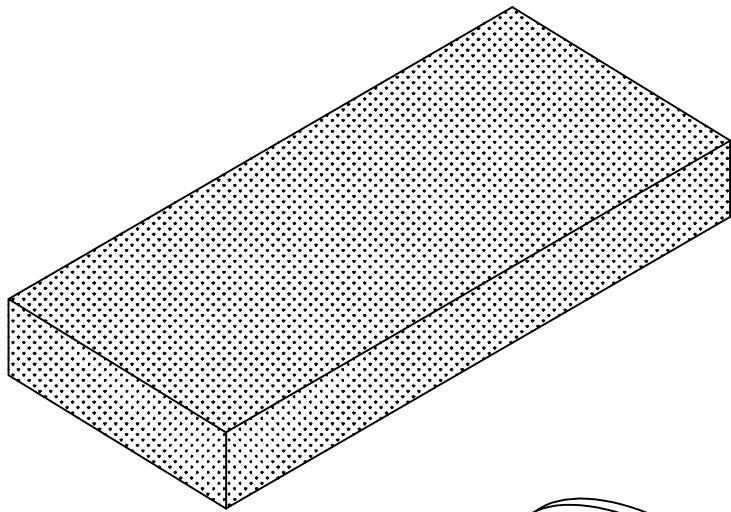


3

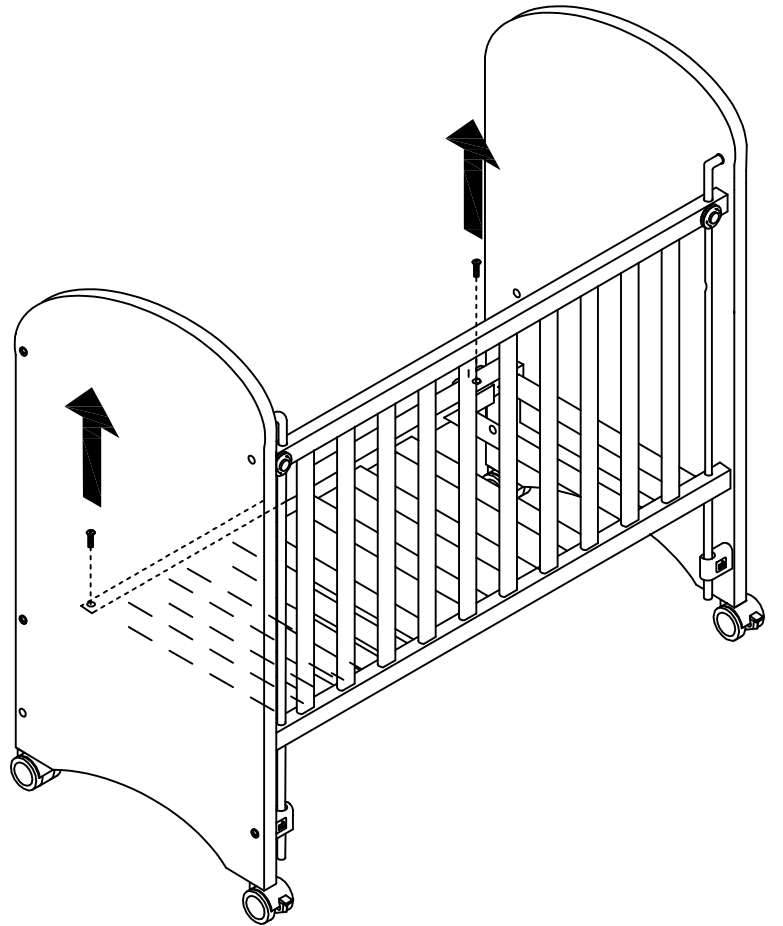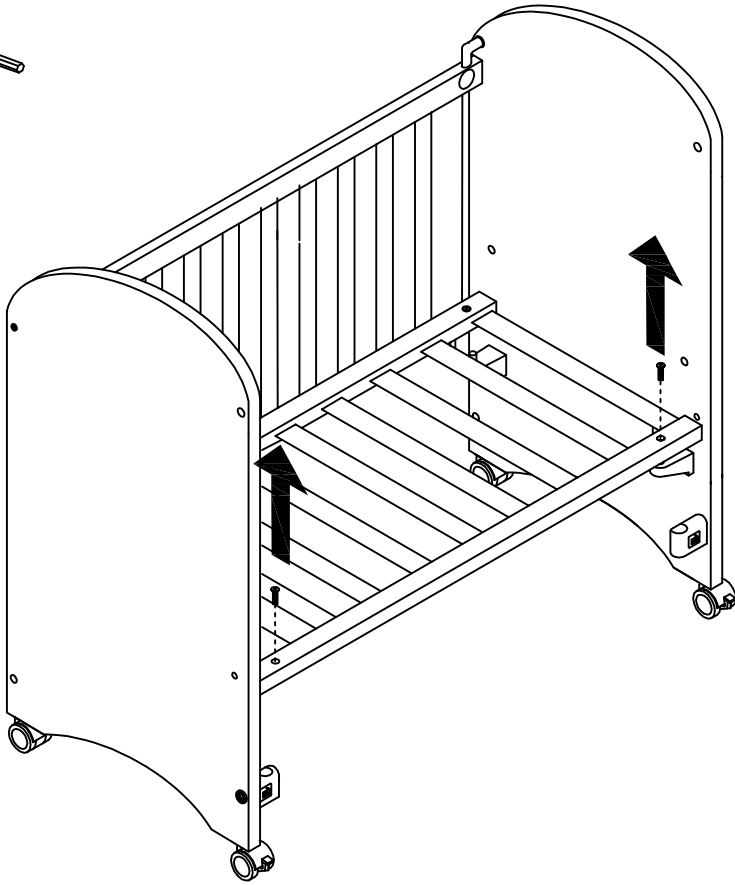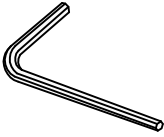



4

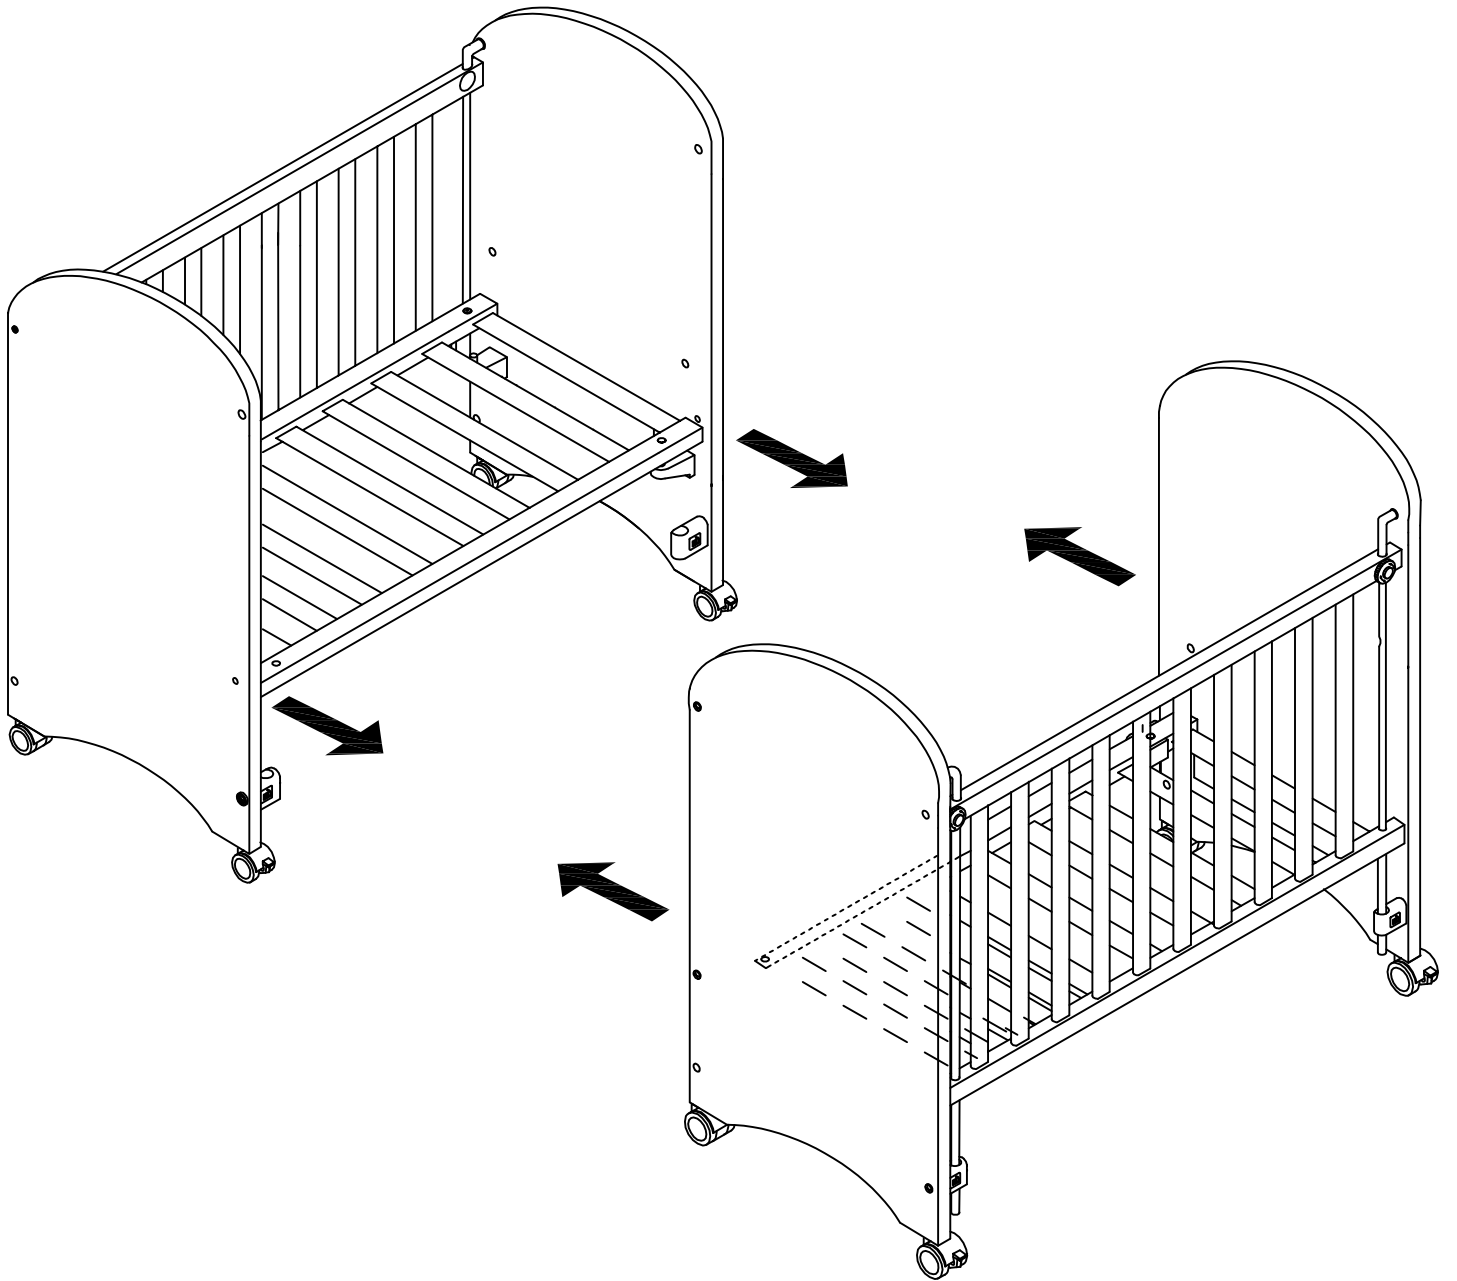






5

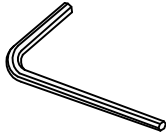


C09505 X4

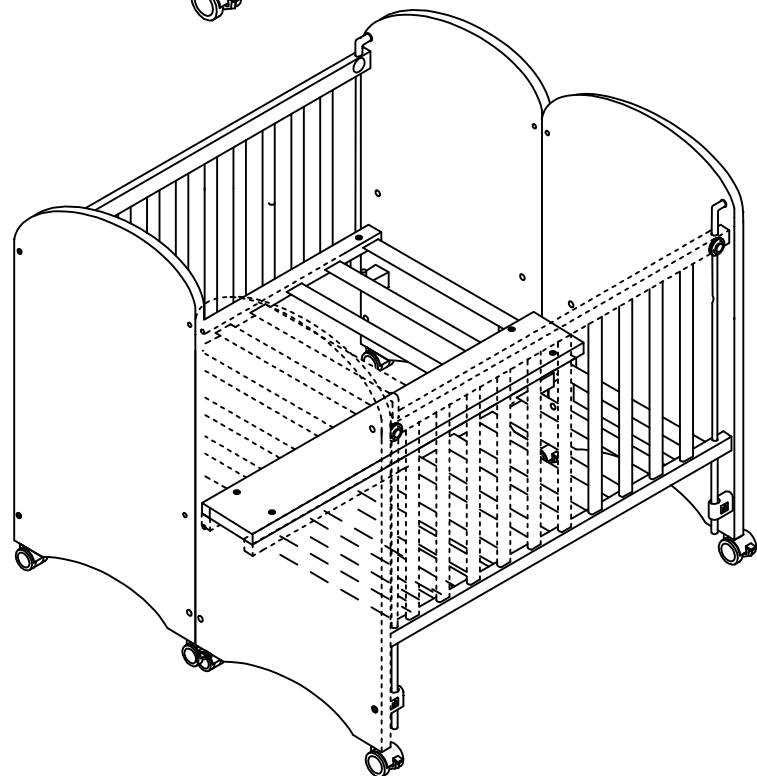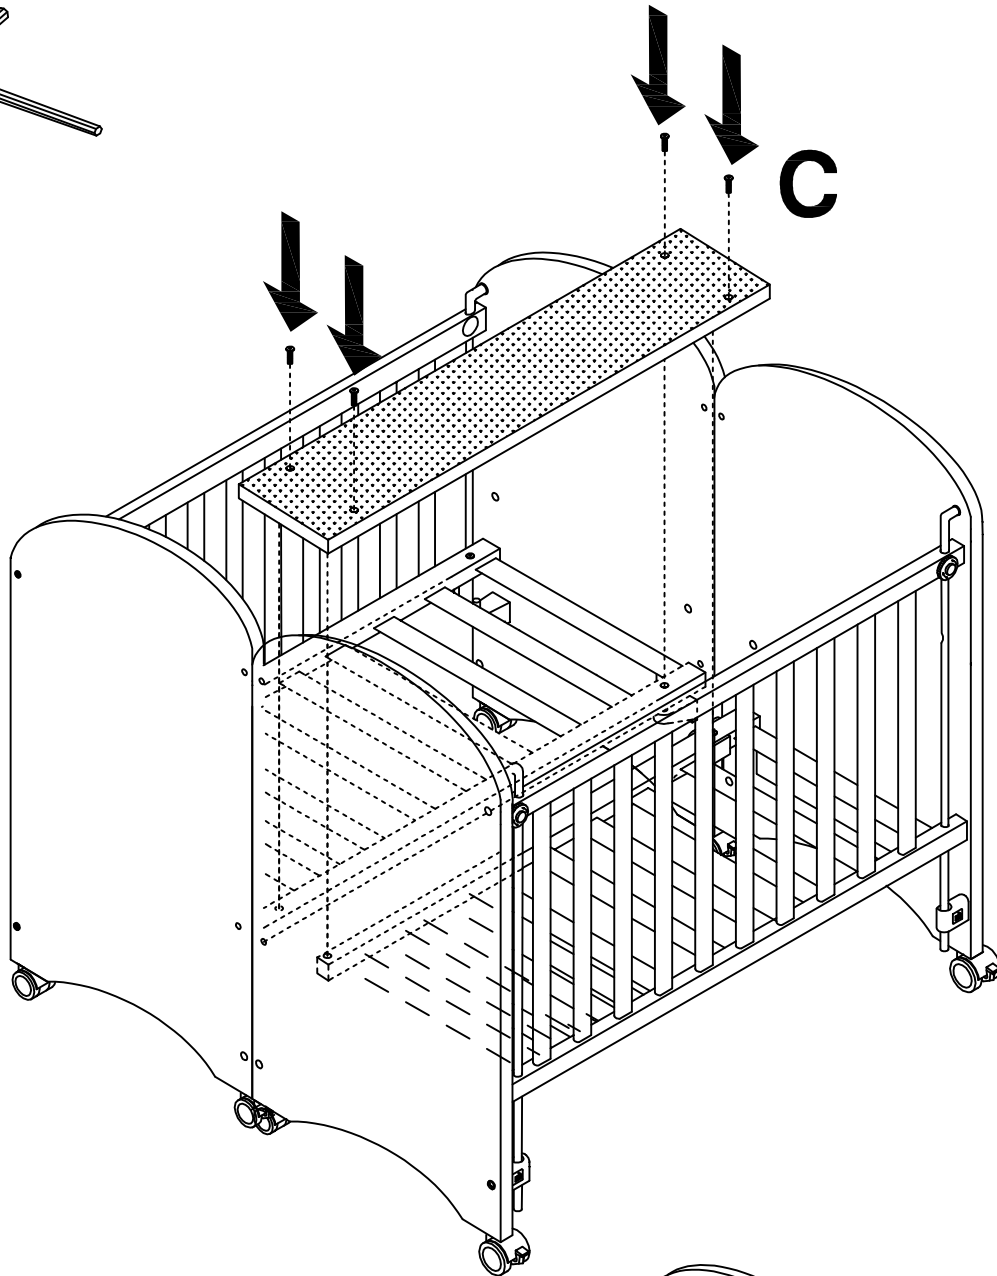


6

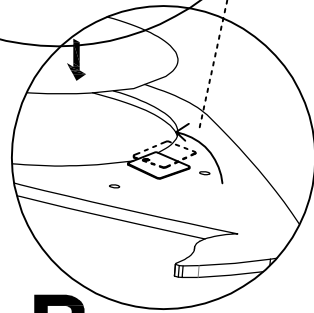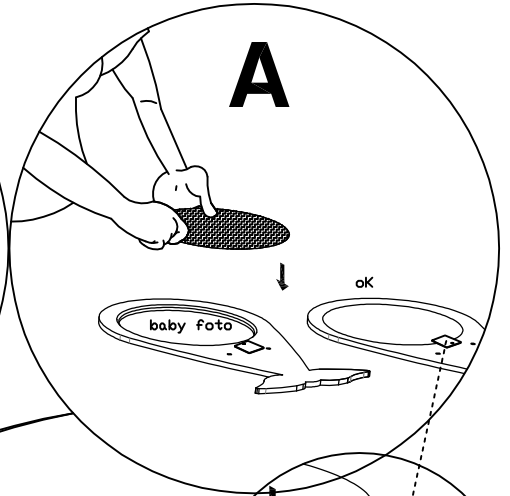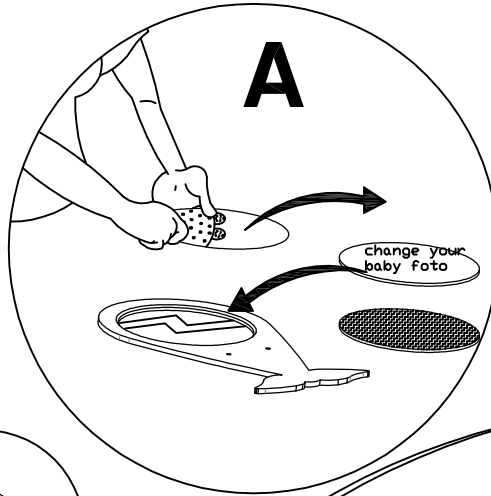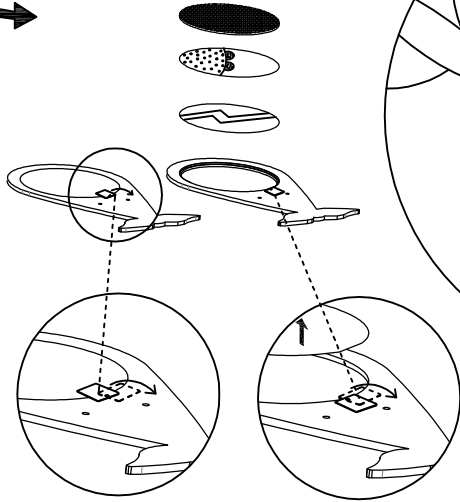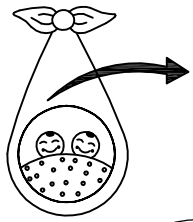


7





C02374 X4

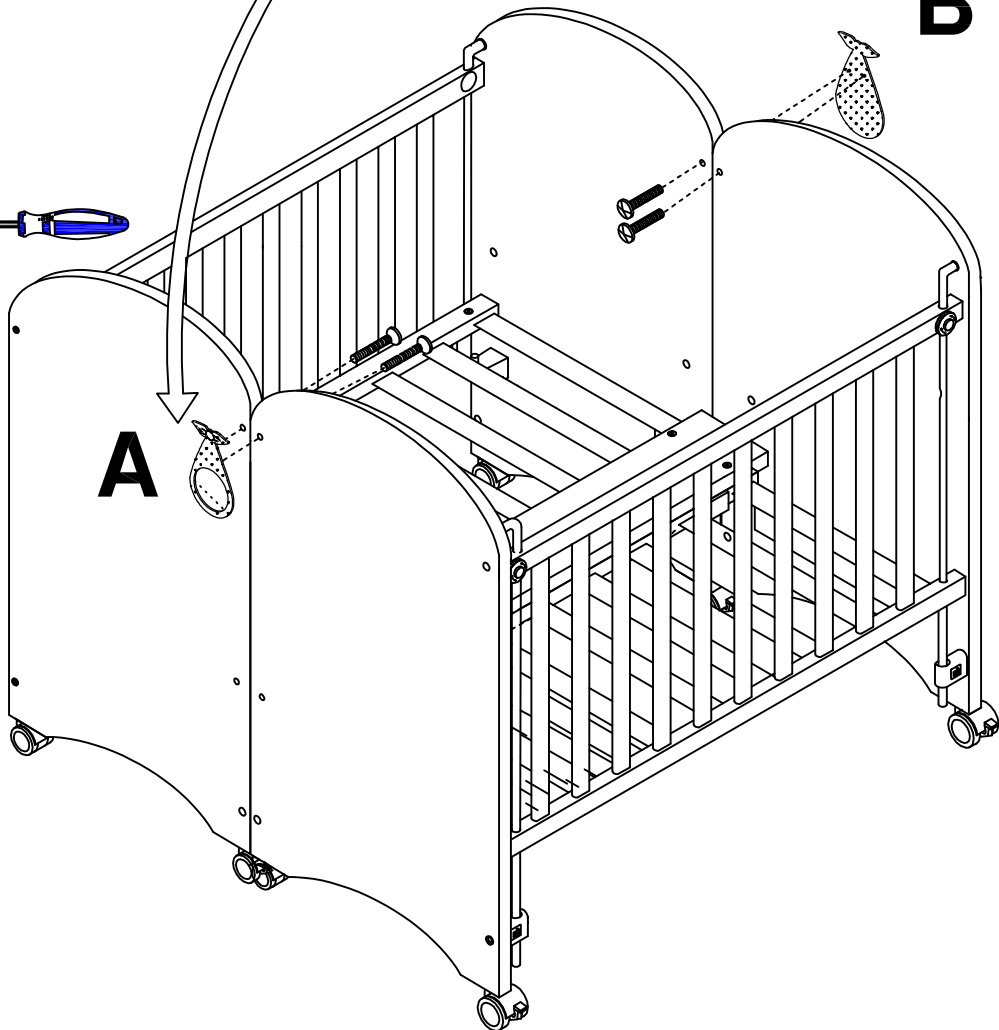


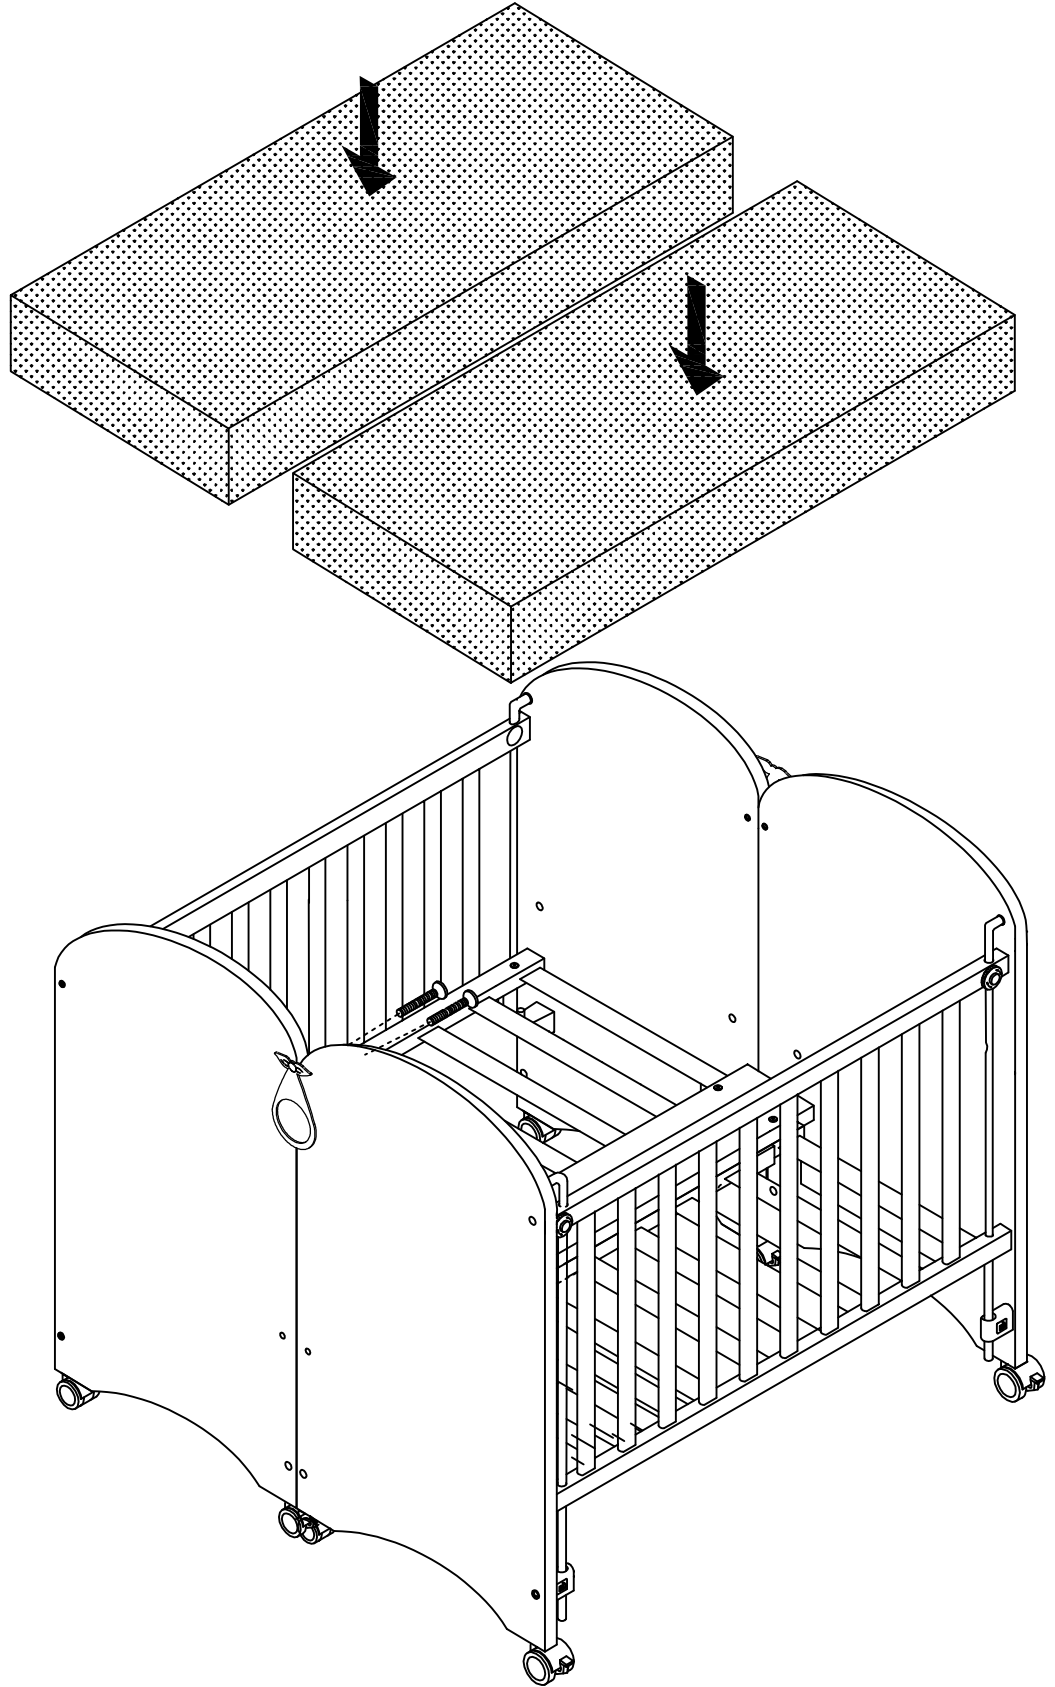

9

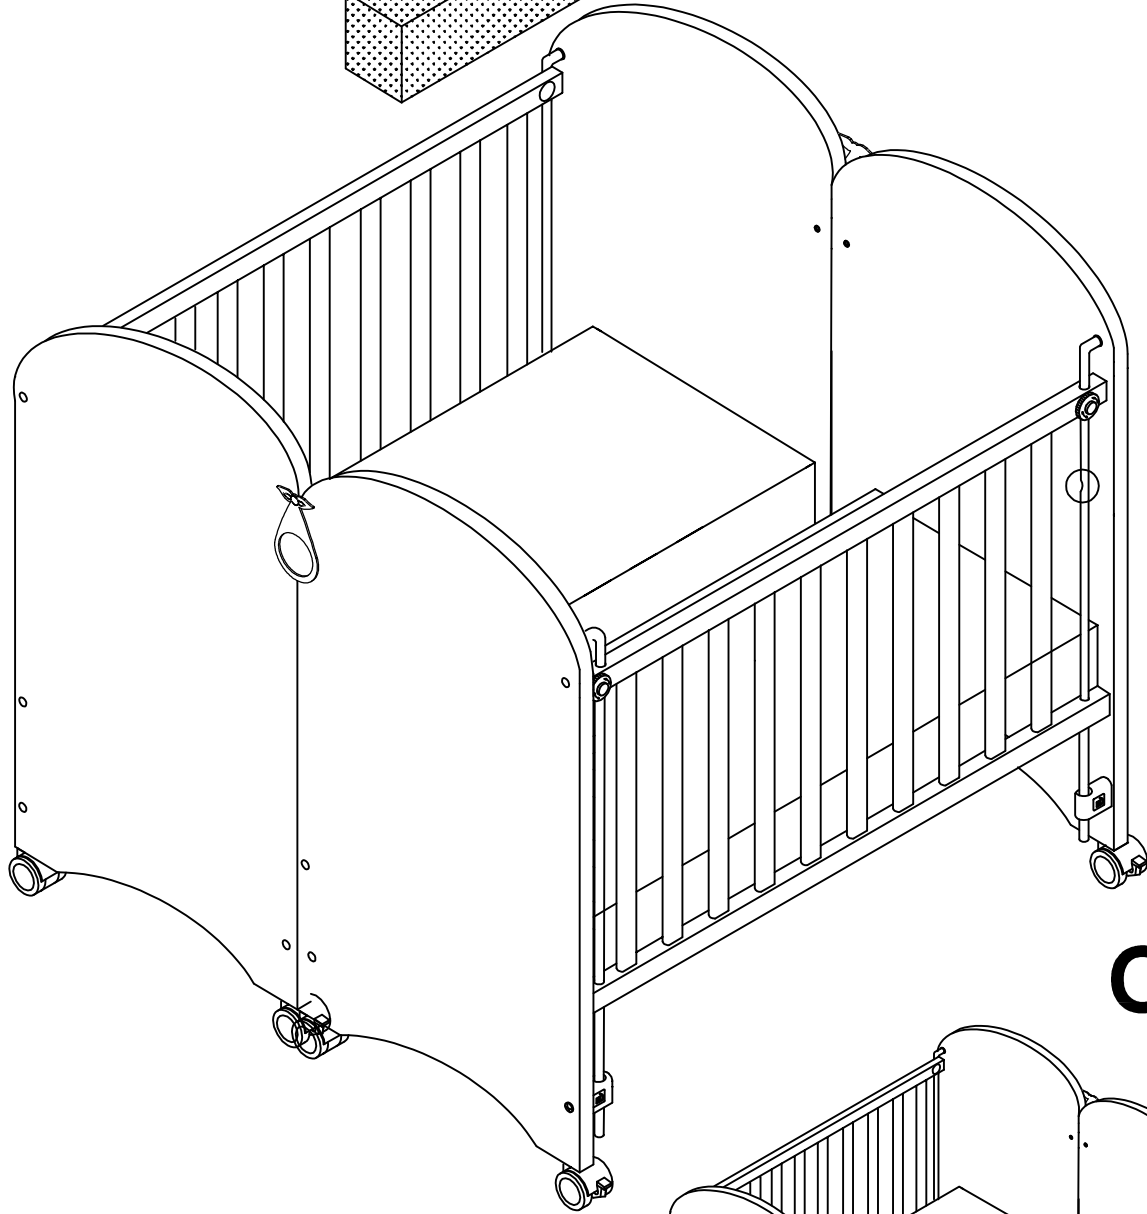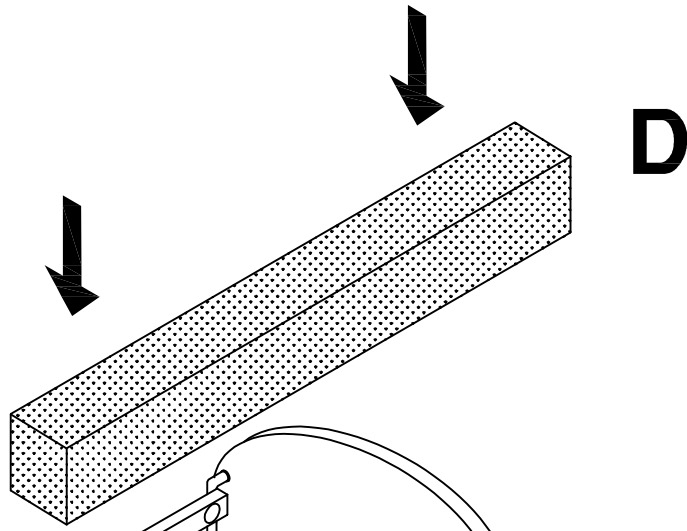



OK

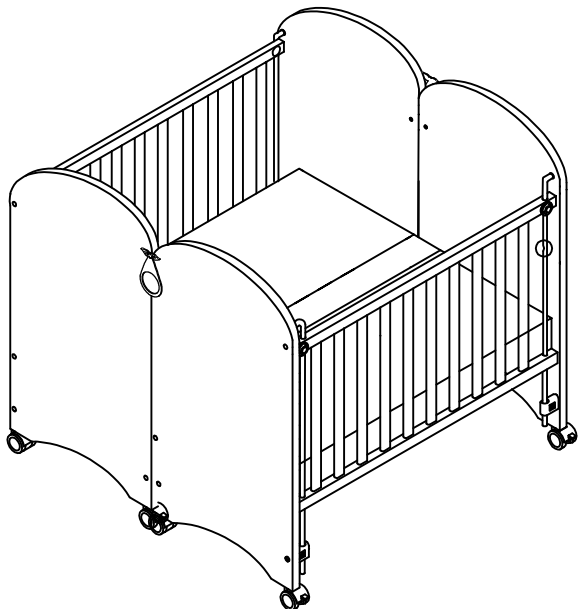


CP-1775 KIT + CP-1774 KIT = NO
RELAX GEMELAR

WARNING !!!


1

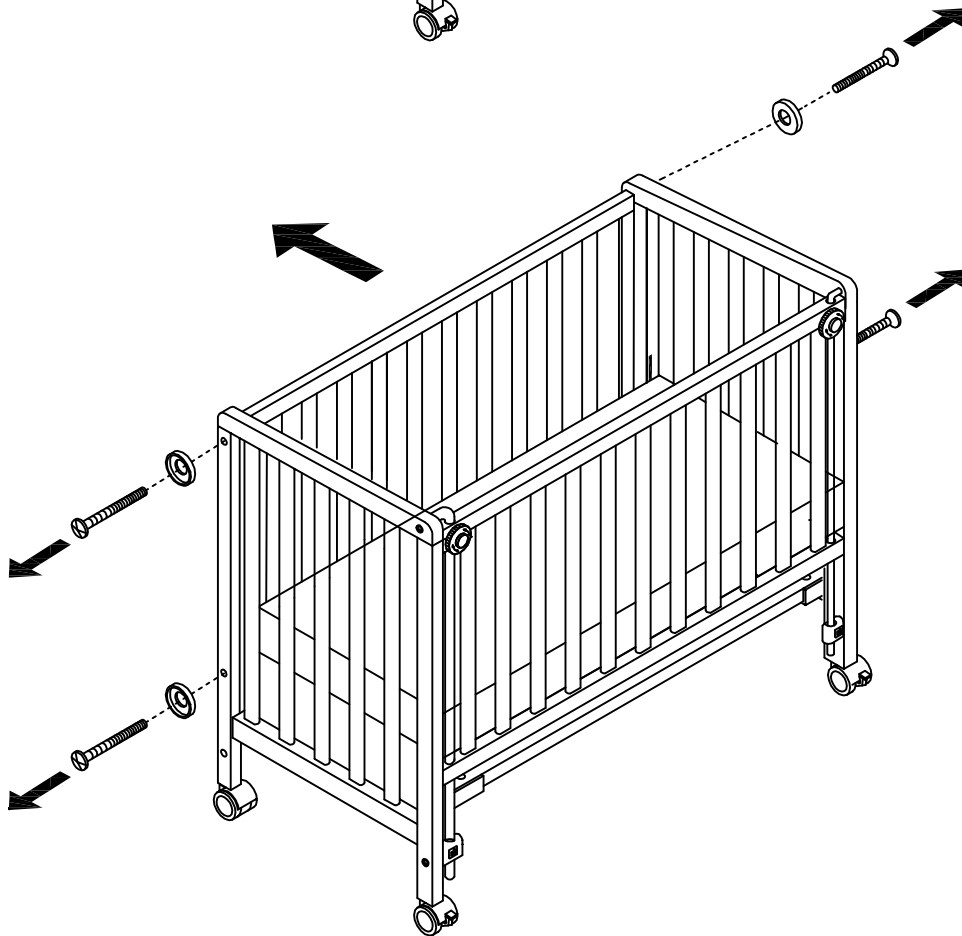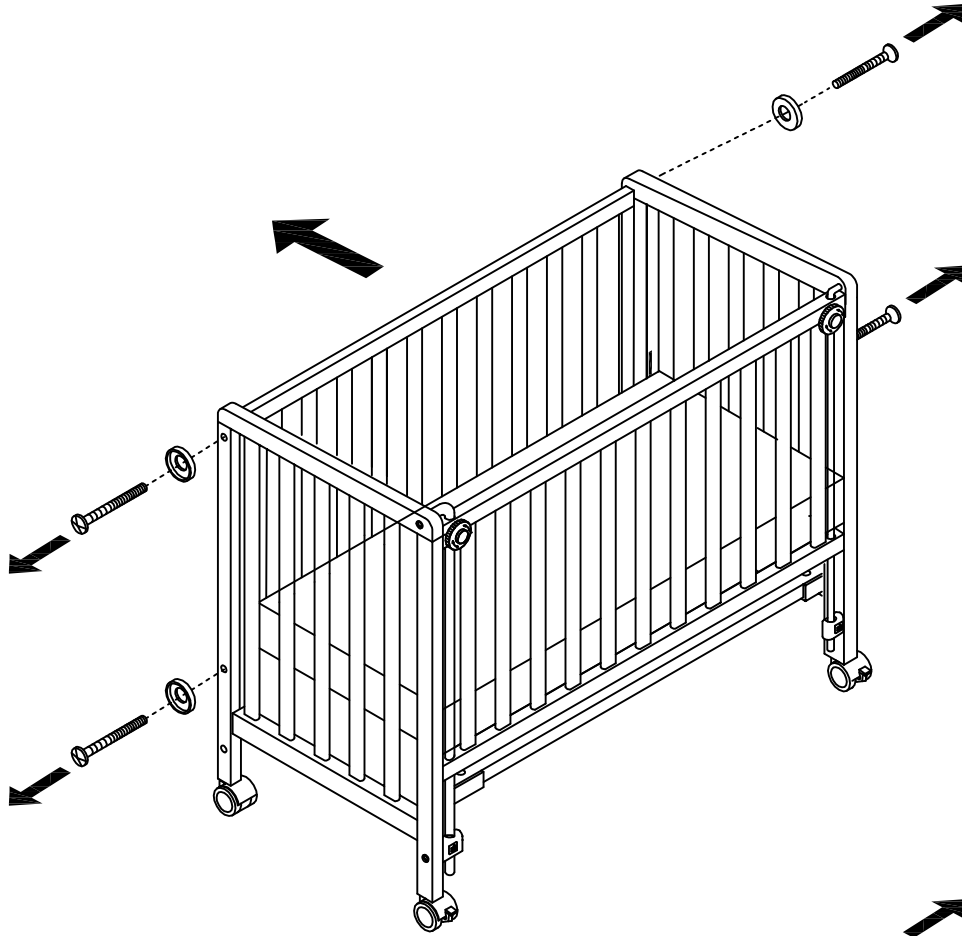


2

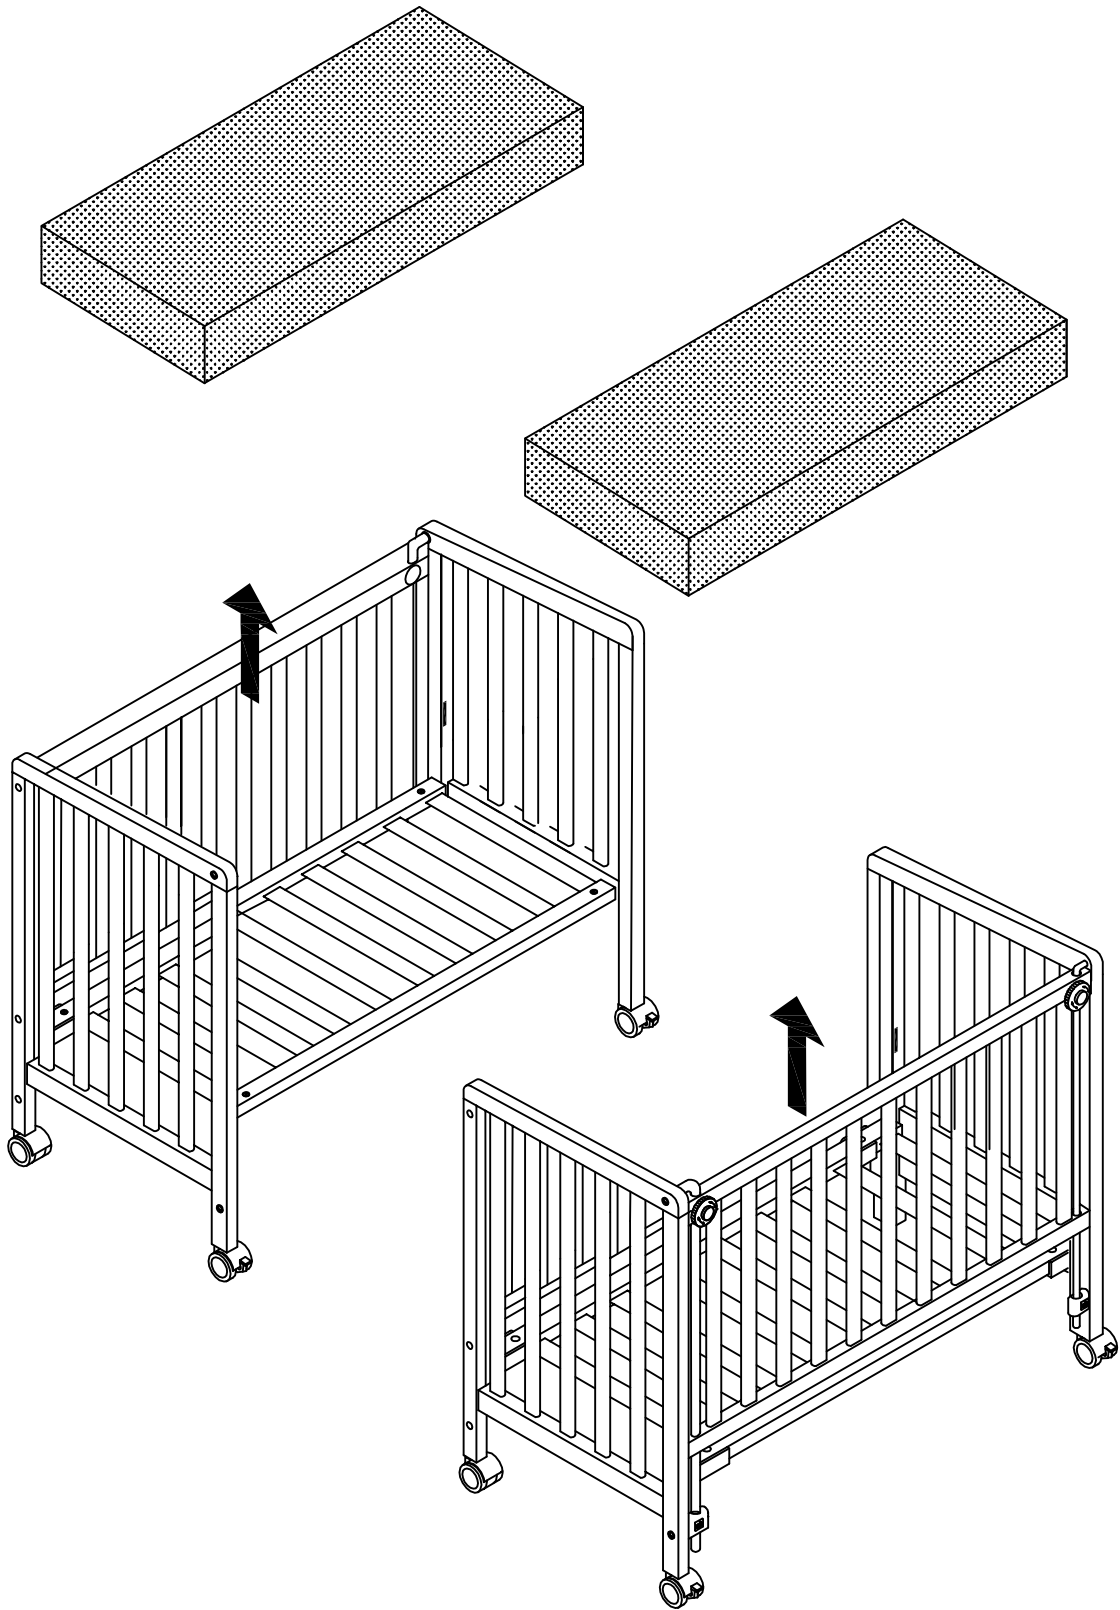


3

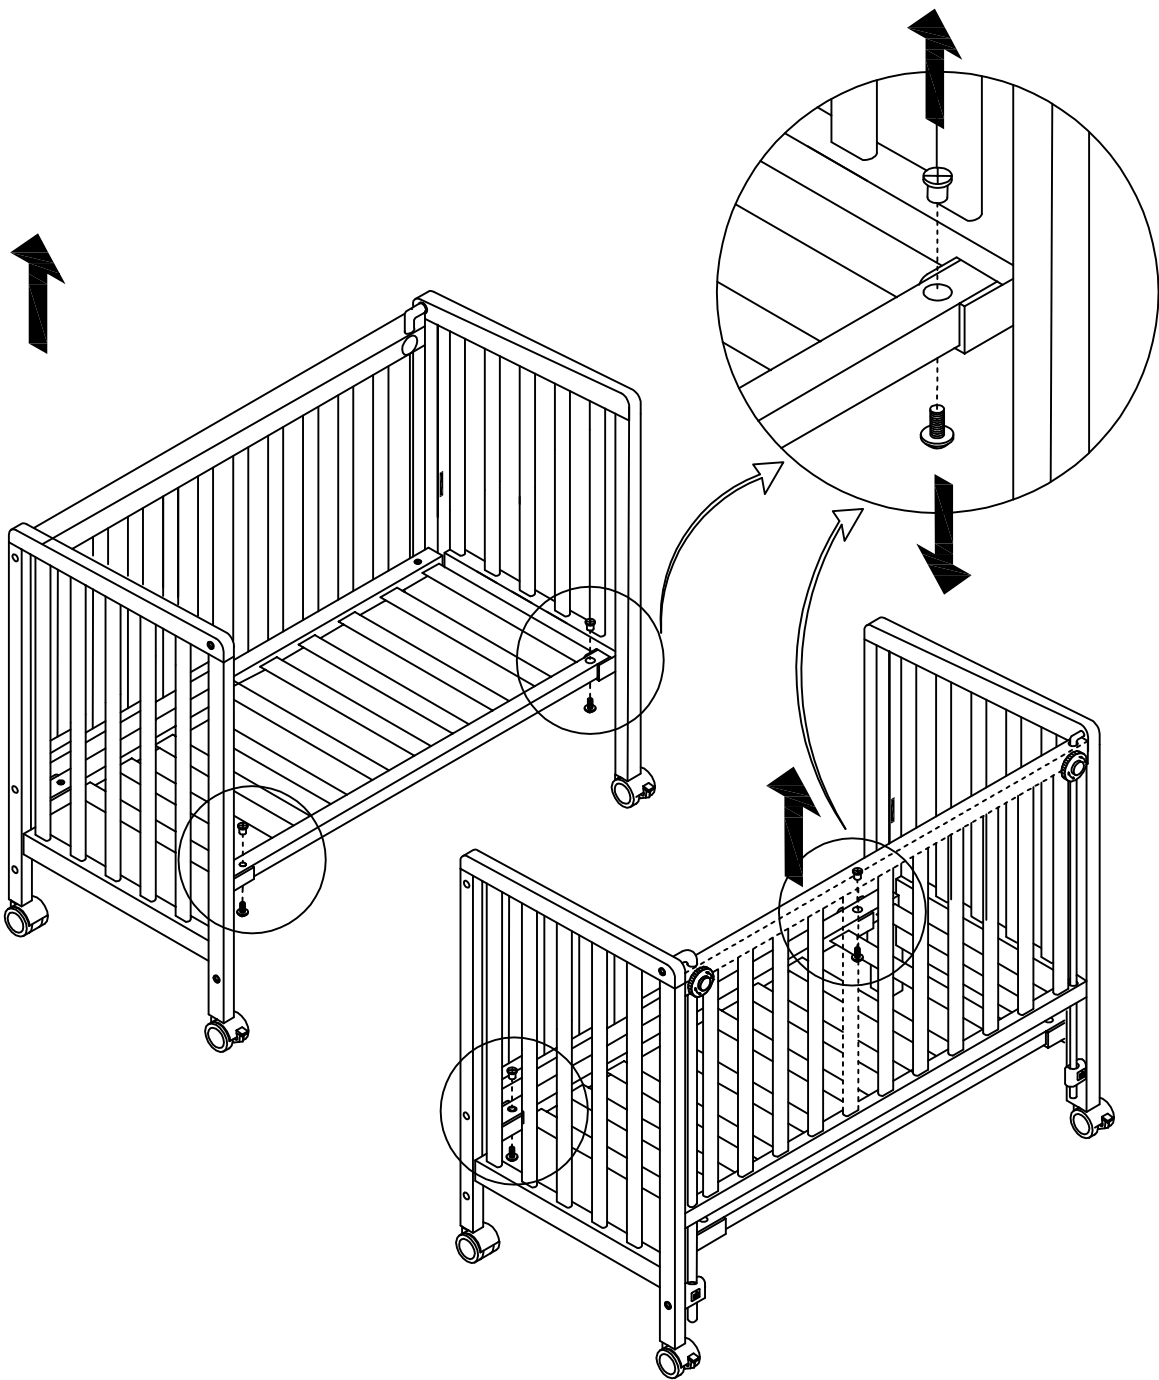

4

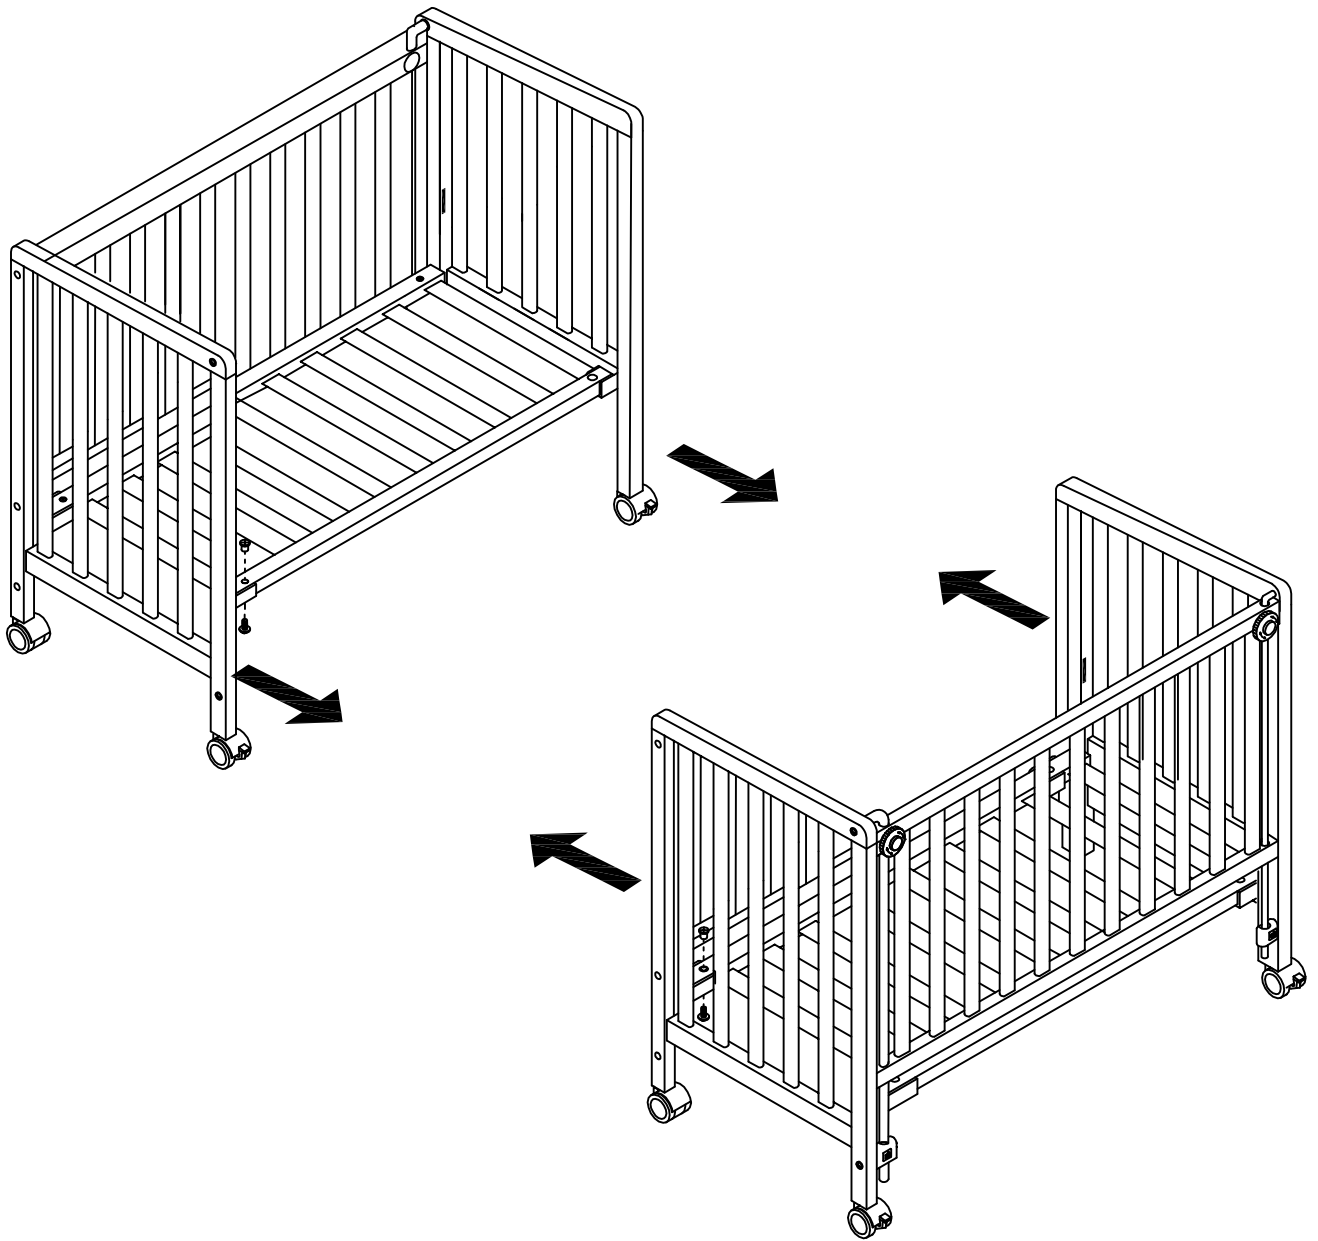


5









C08300 X4


PAG.12 X4

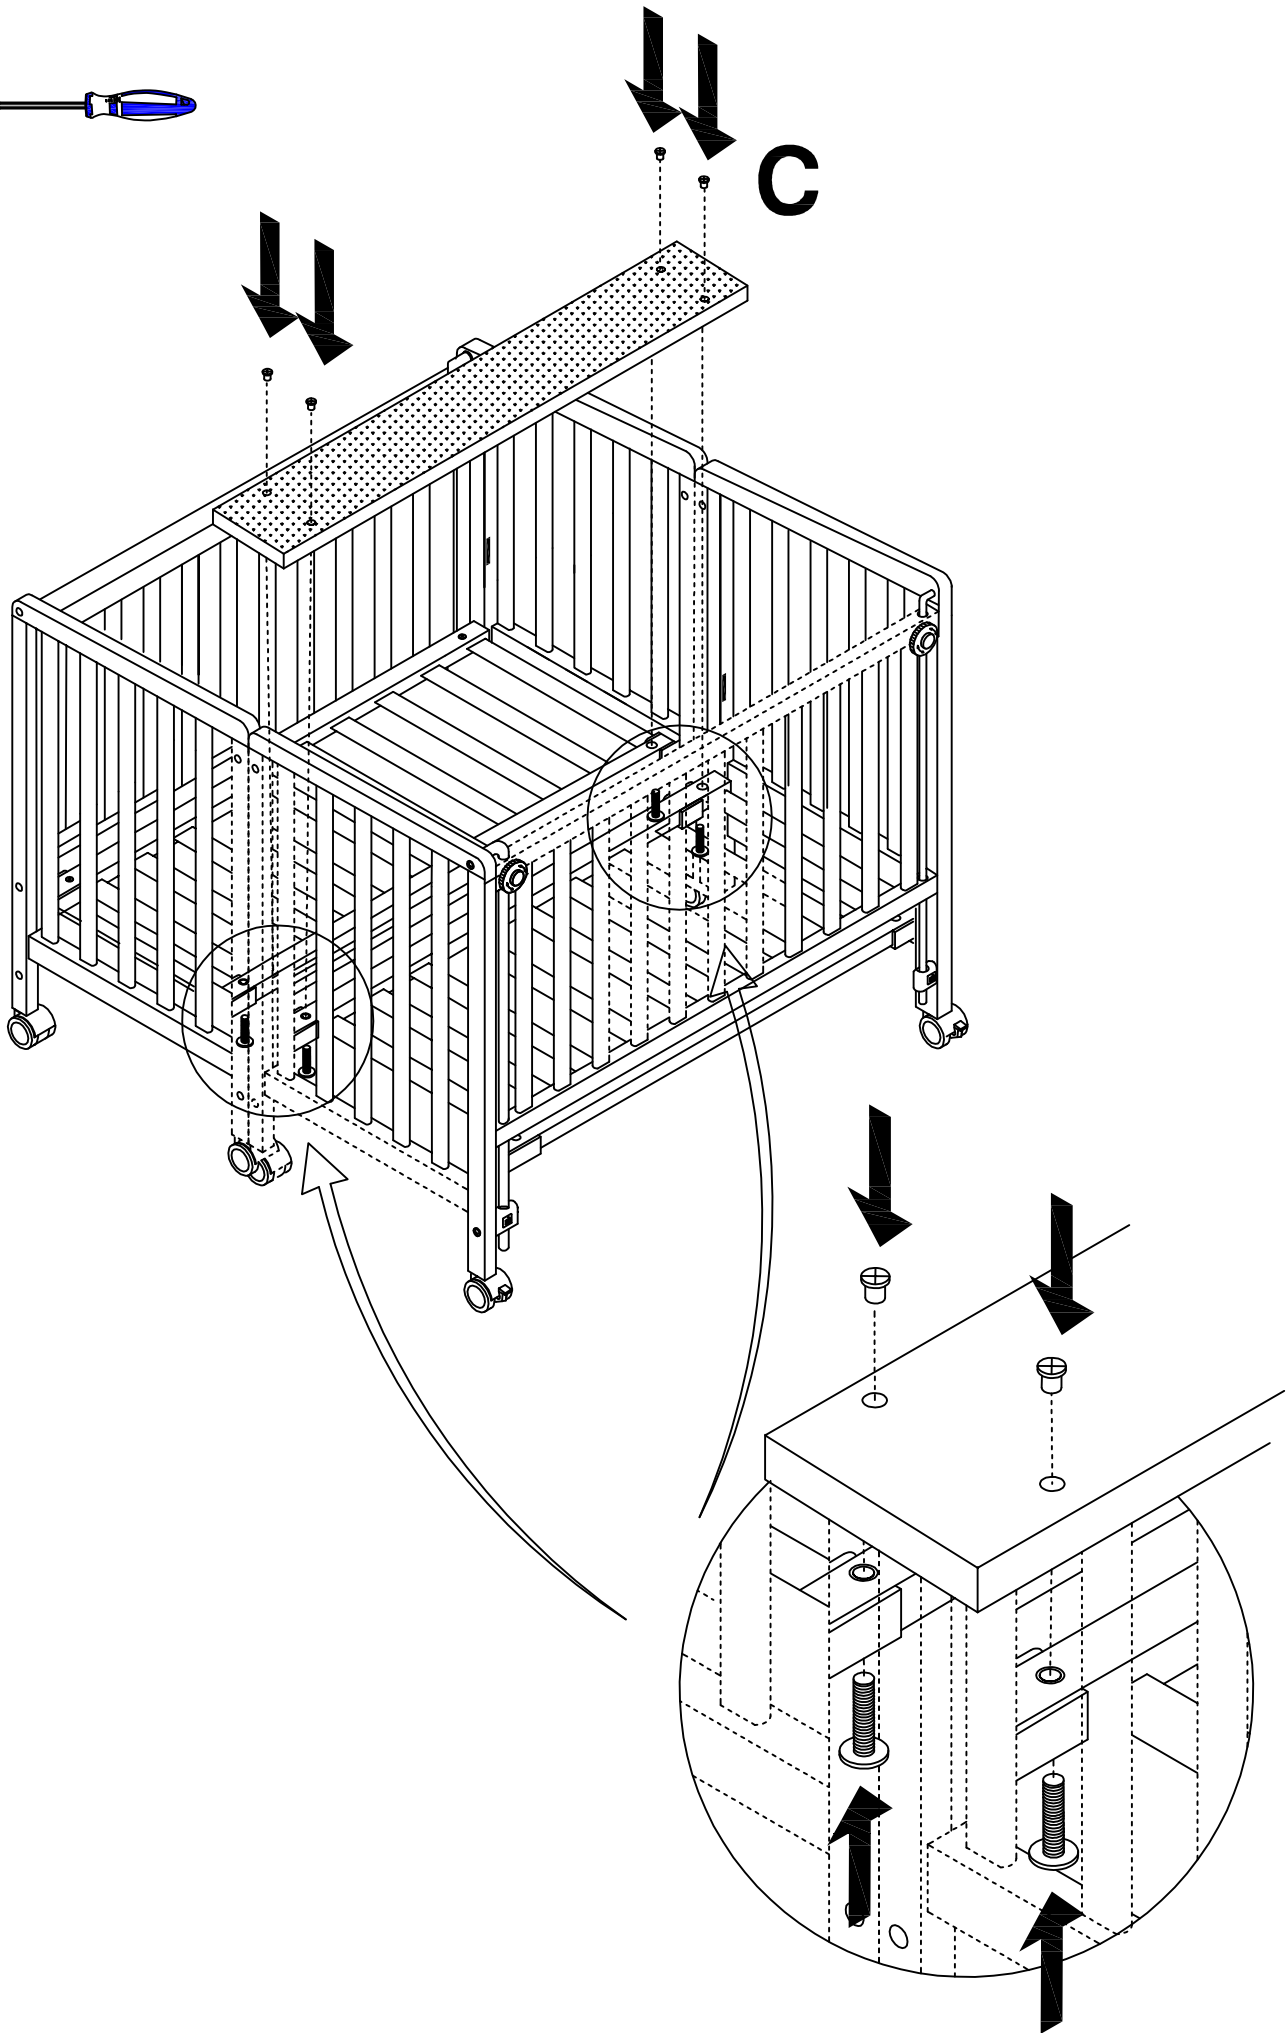


6

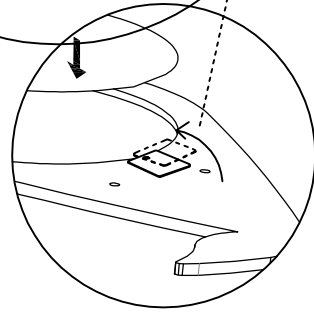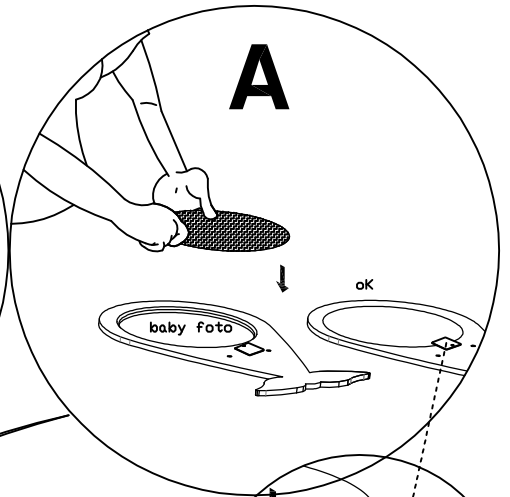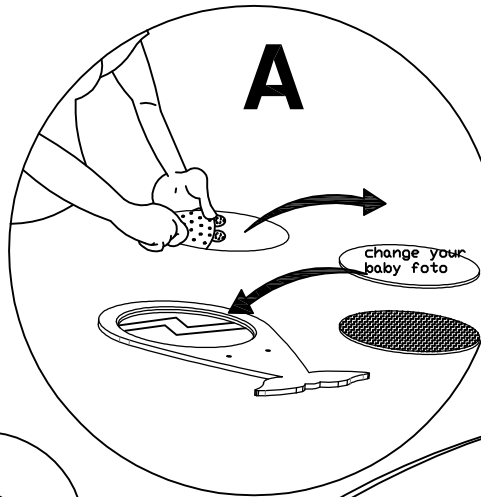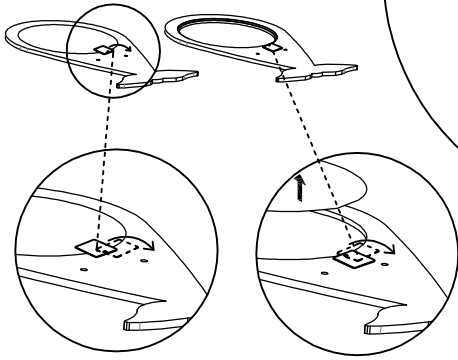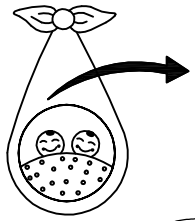


7





C00192 X4

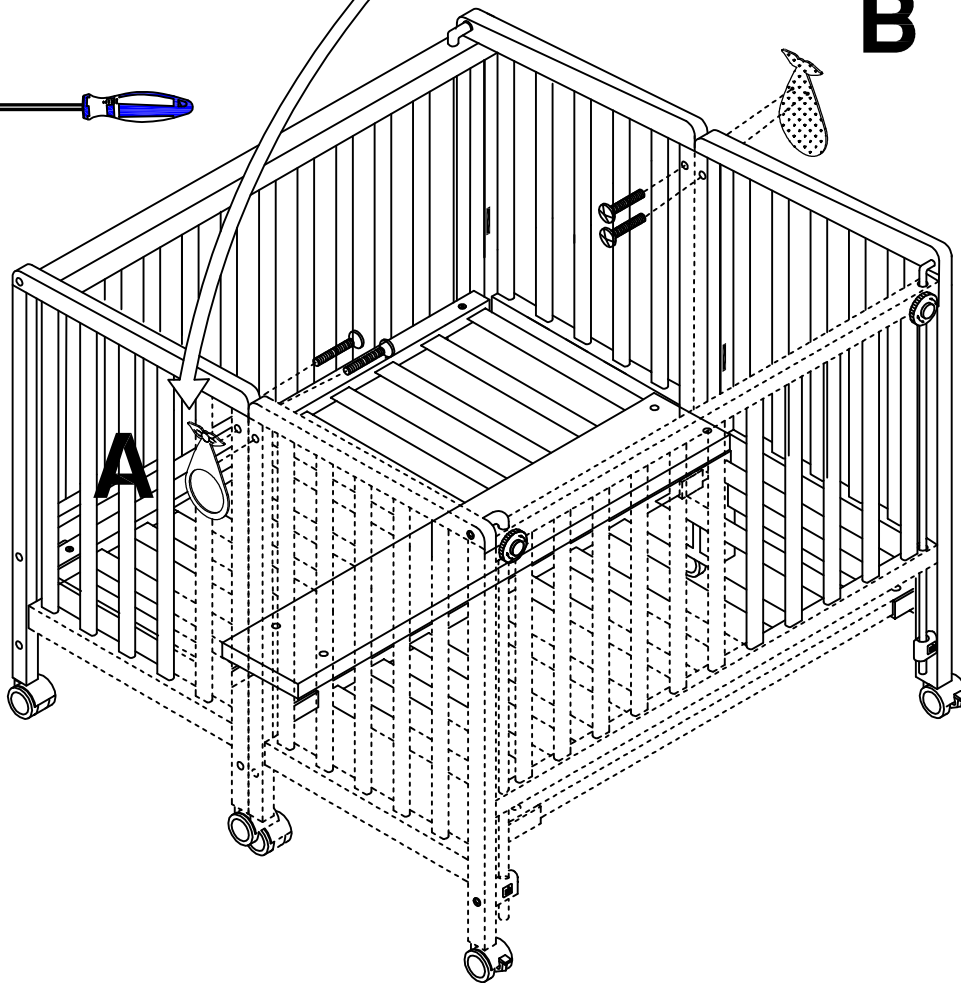

8

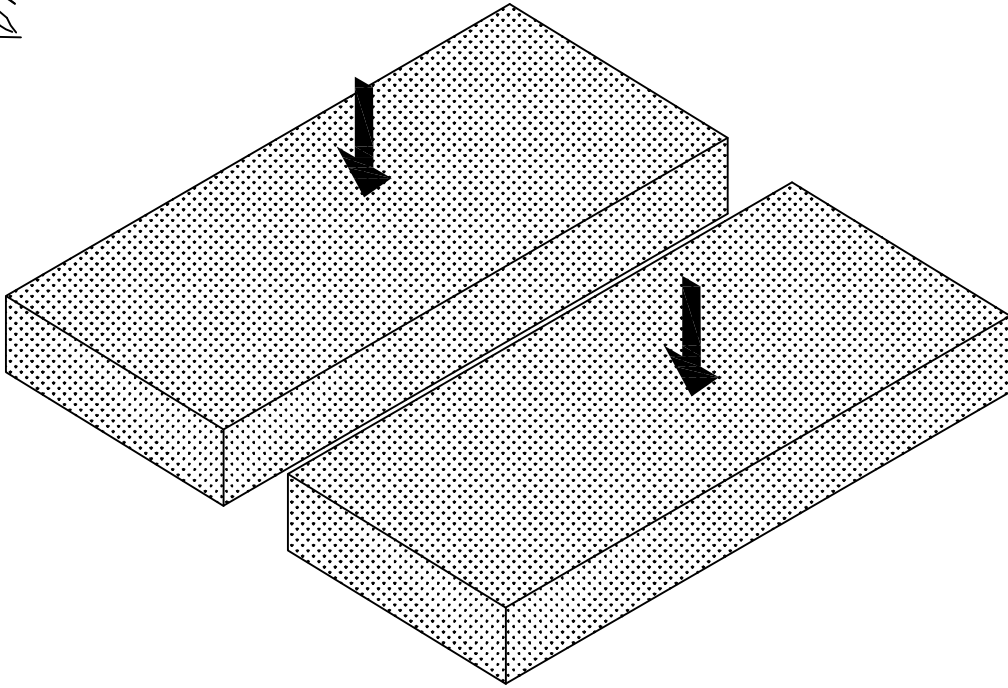


9

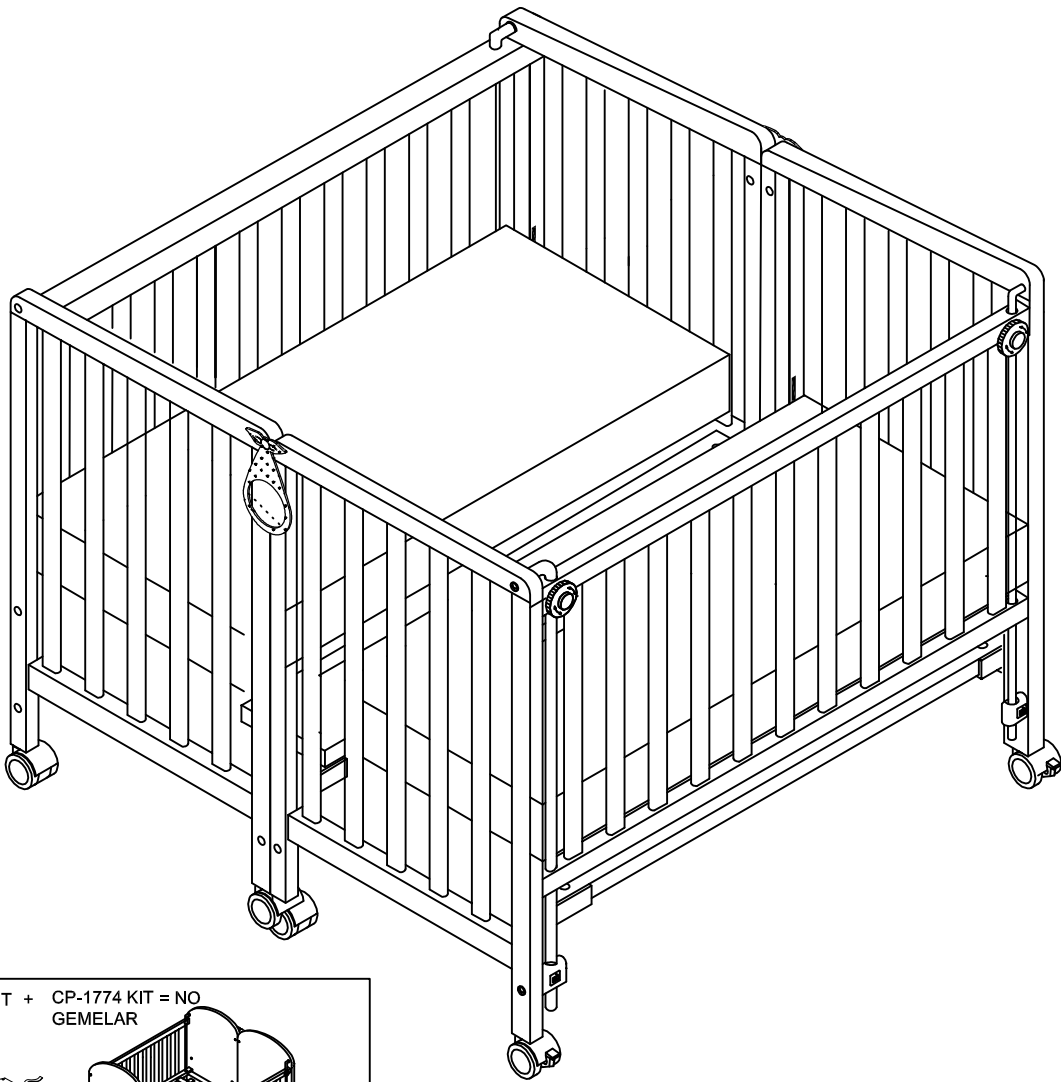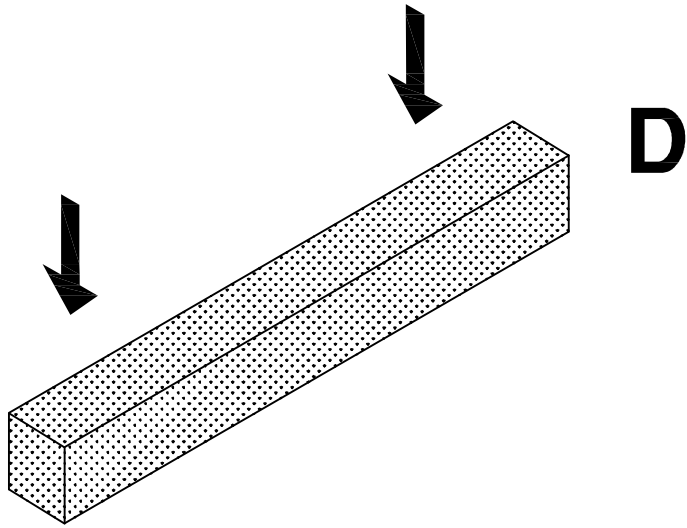

CP-1775 KIT + CP-1774 KIT = NO
RELAX GEMELAR

WARNING !!!

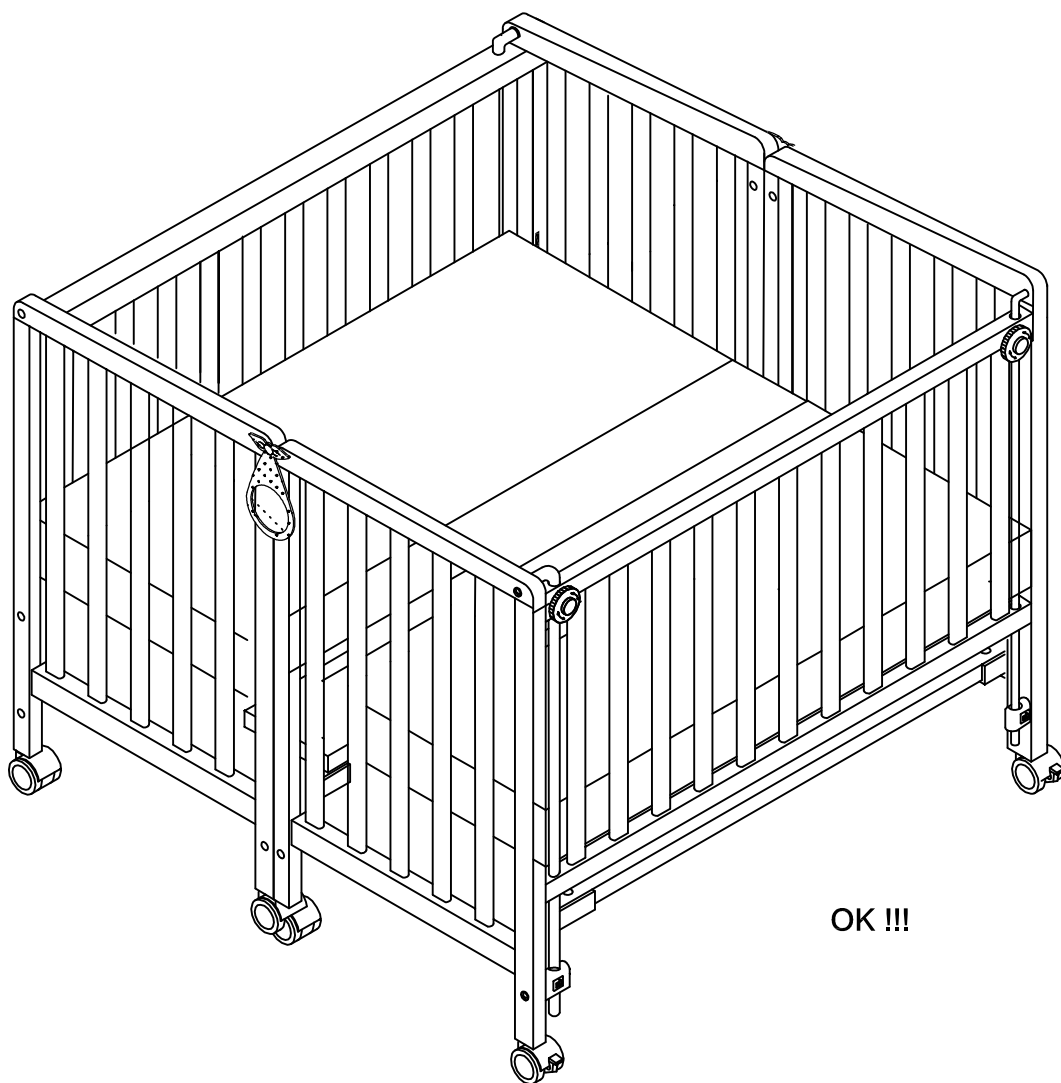

OK !!!