

Instrucciones de montaje · Assembly Instructions

## Cómoda Trevi

### 5032906



**ES** · IMPORTANTE: A CONSERVAR PARA FUTURAS CONSULTAS.

**LÉASE ATENTAMENTE.**

**EN** · IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

**FR** · ATTENTION: CONSERVER POUR CONSULTER AU FUTUR.

**IT** · IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONE. TENERE PER FUTURE CONSULTAZIONE.

**PT** · IMPORTANTE: MANTENHA PARA FUTURAS CONSULTAS. LÉASE ANTENTAMENTE.


**R** · ВАЖНО: СОХРАНИТЕ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ. ВНИМАТЕЛЬНО ПРОЧИТИТЕ.

**A** · الامعت سالا لابق اادي ج أرقا. عة ج ارم لل ظفح ا. ماه


**CN** · 重要事项：保留以备将来参考，请仔细阅读。



**x1**
**30 min.**



C07914 x1



C05503 x8  
(M6x40)




C05366 x8




C01537 x20



C11092 x1




C10392 x1



C00326 x1



C01419 x12




C01538 x20




C01235 x12



C14464 x2




C00329 x1



C11360 x4




C00192 x4  
(M4x25)



**L**






C09061 x2





**R**




C04790 x8

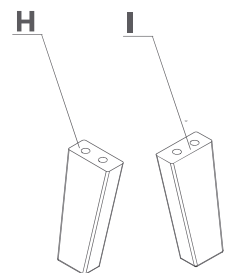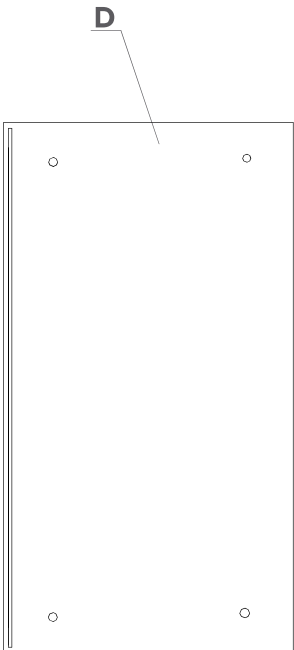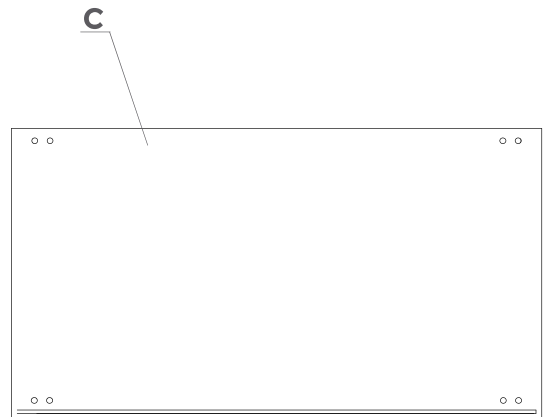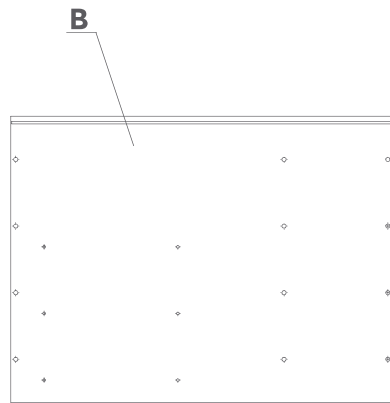
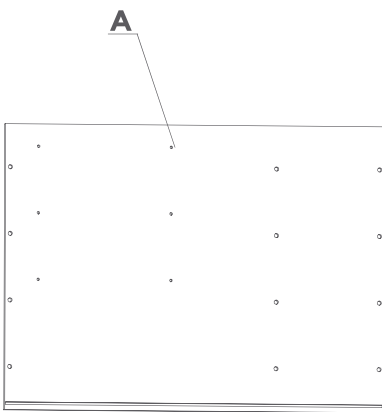



# 1

-  C05503  
x8
-  C05366  
x8

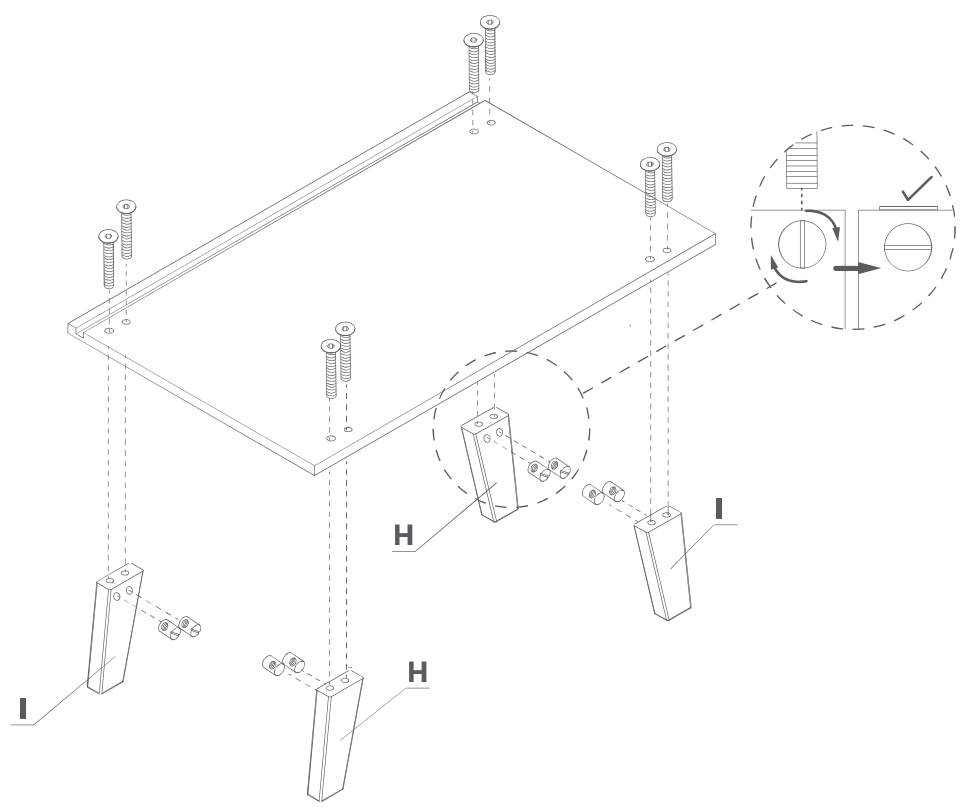

# 2


-  C011419 x6
-  C01538 x6

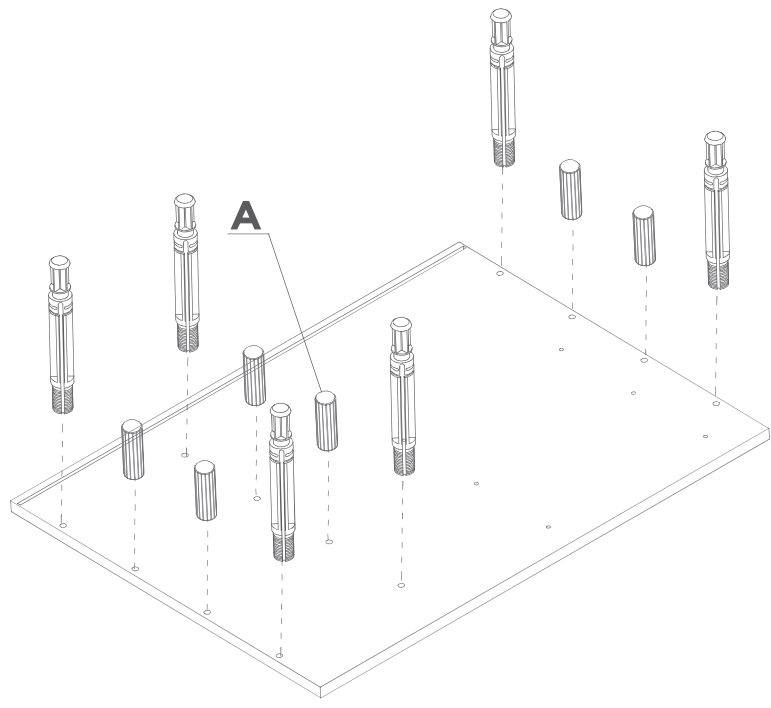

# 3

 C011419 x6


 C01538 x6

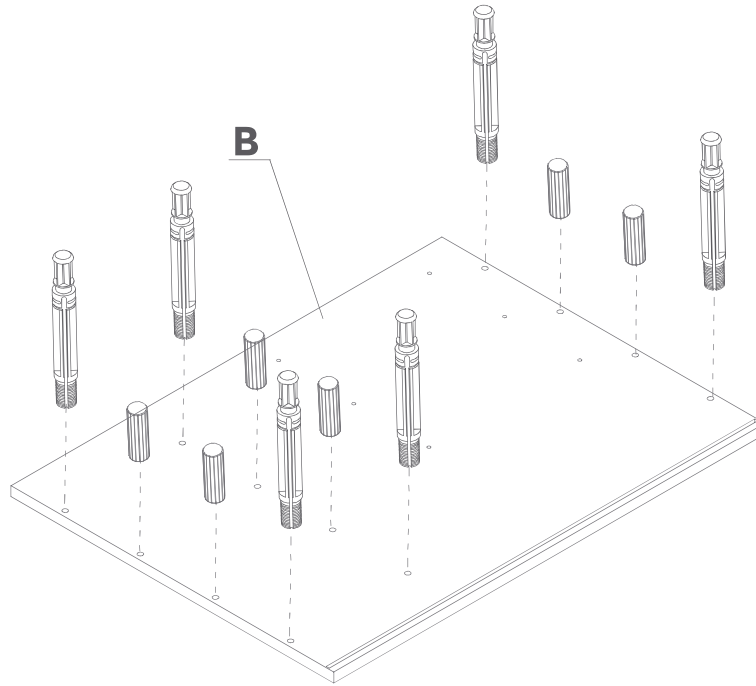


# 4



 C01537 x6

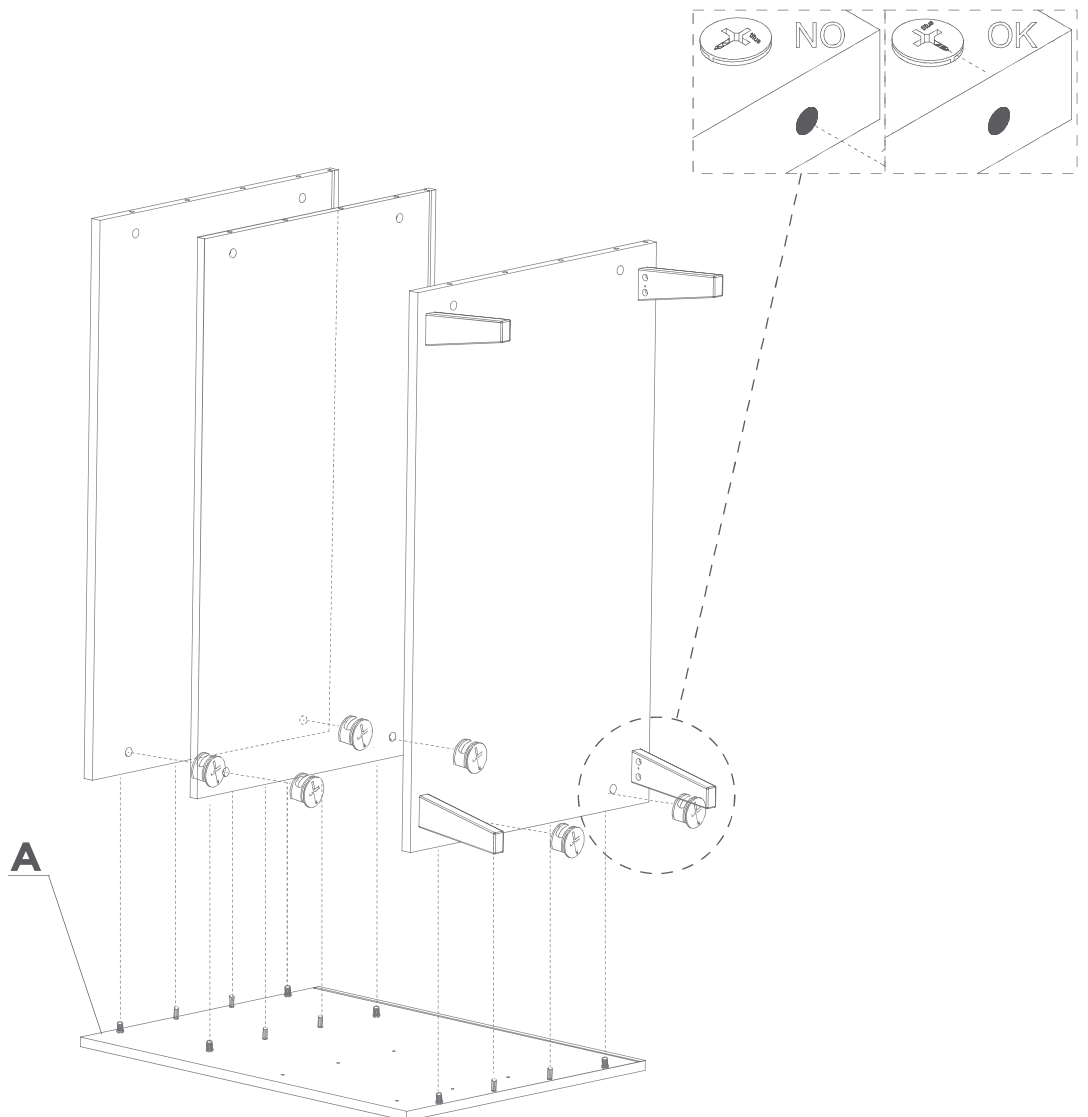


5

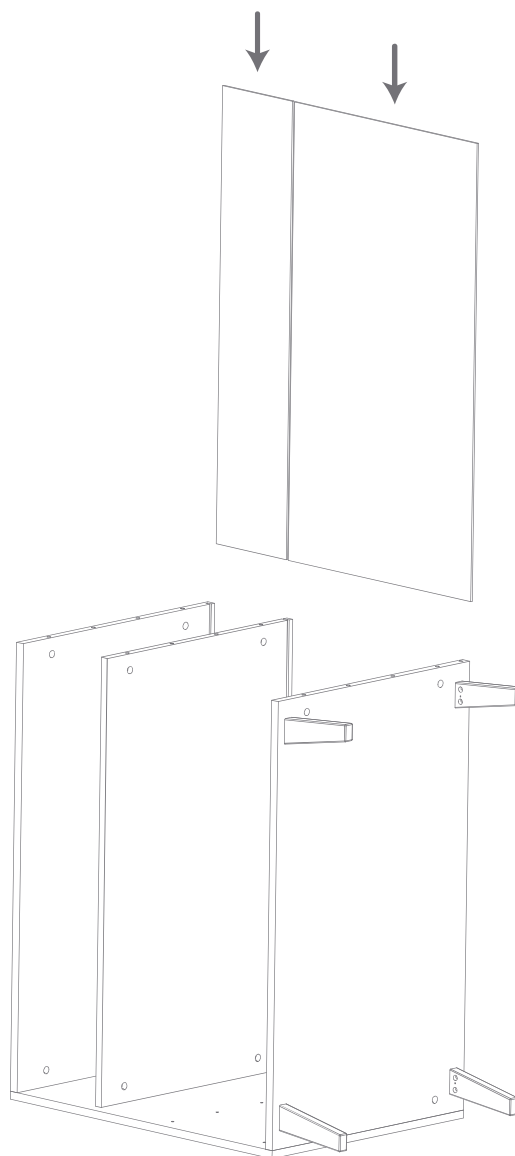


6




C01537 x6

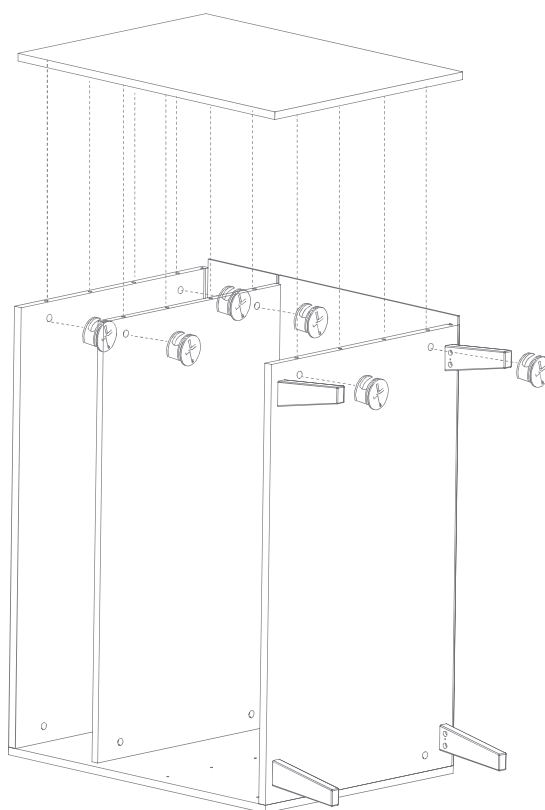




7

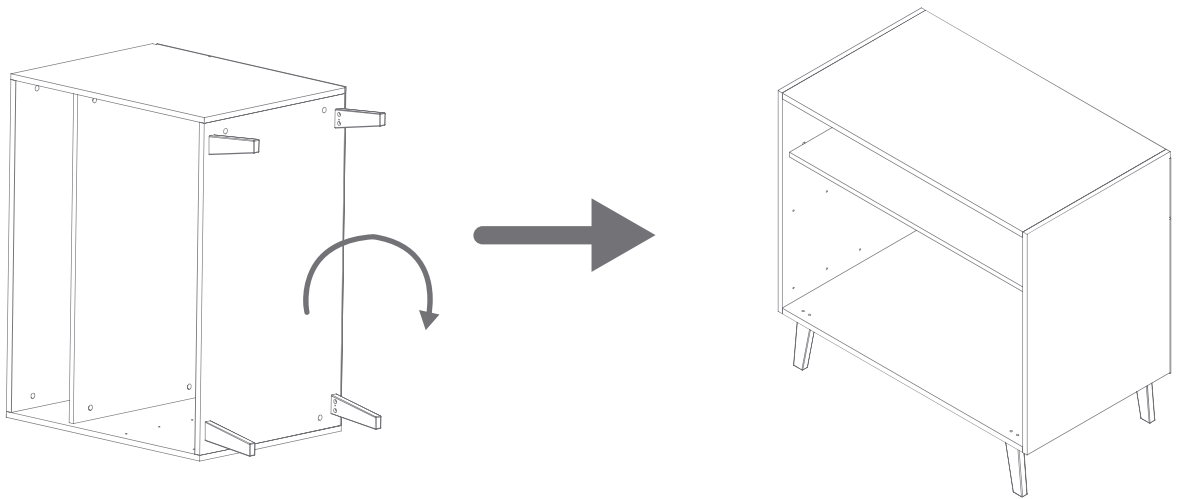


8




R

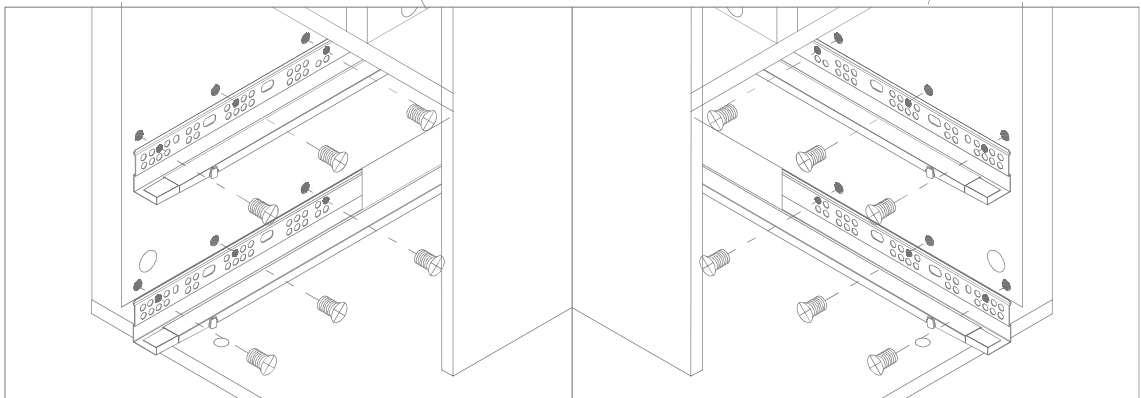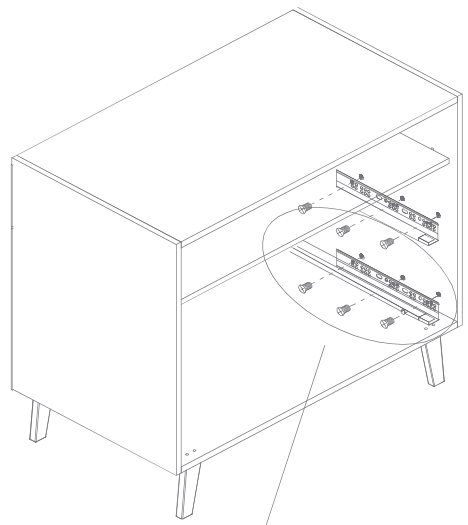
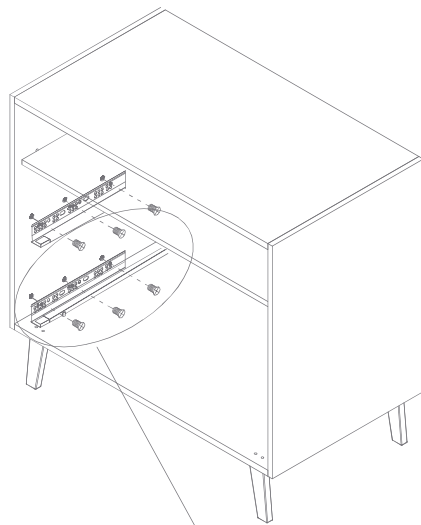


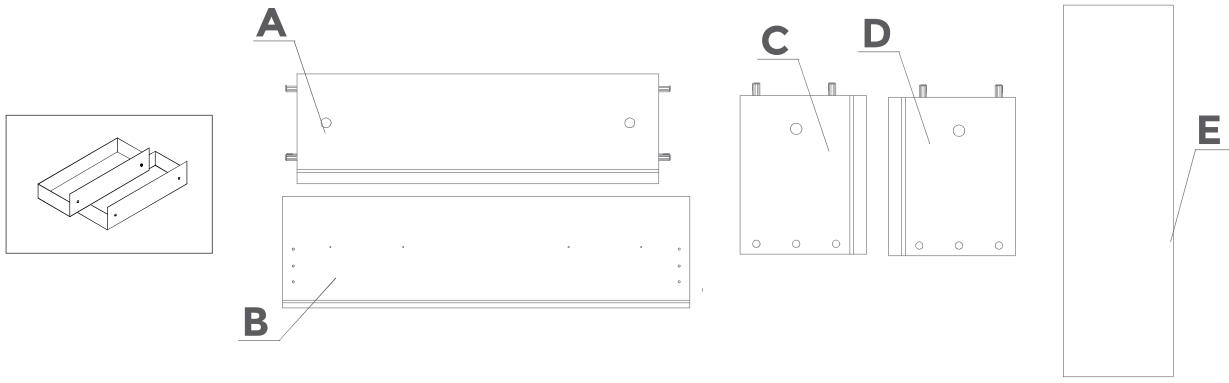



**1x2**

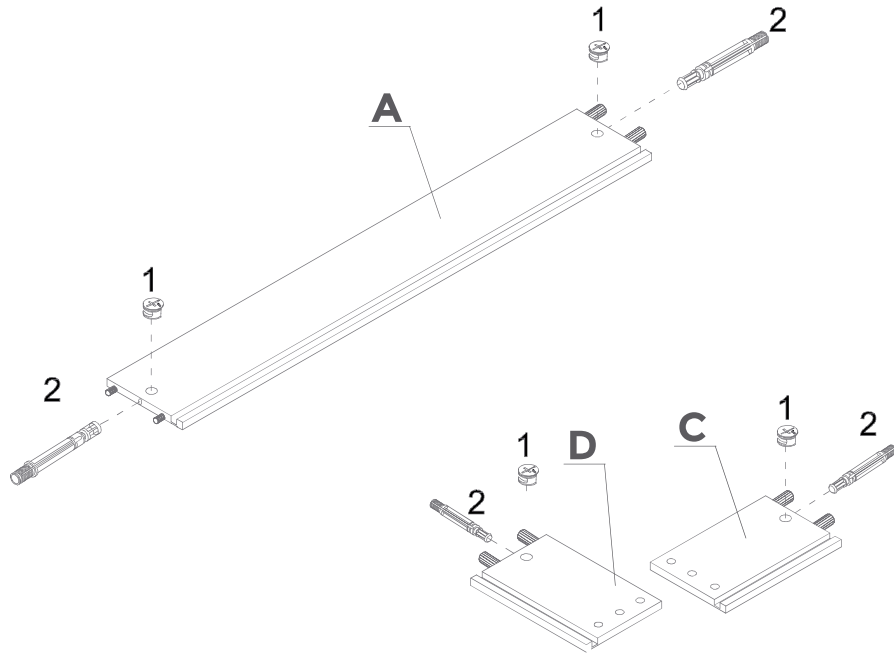





**2x2**

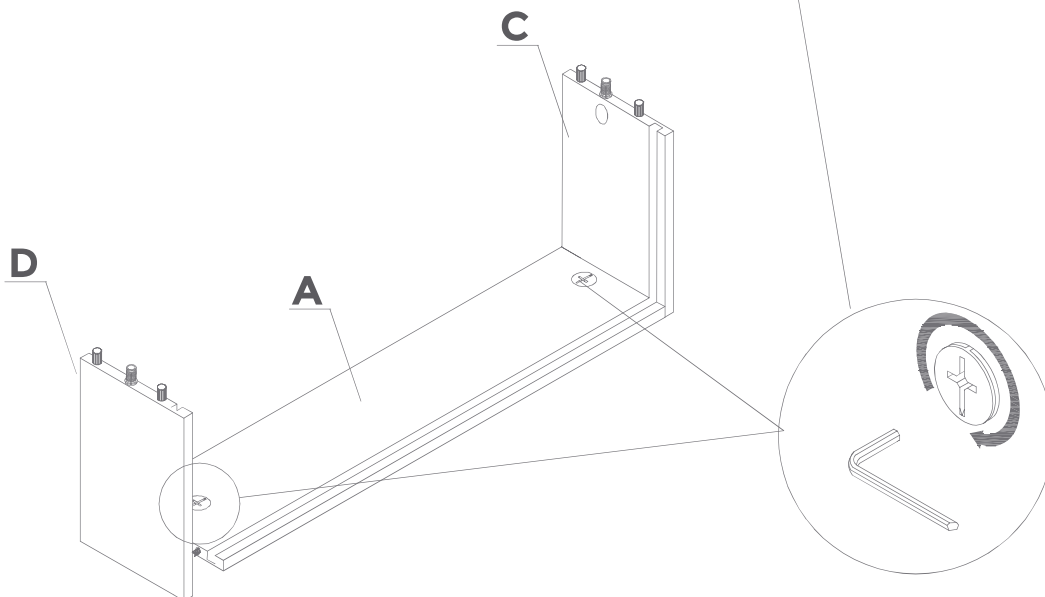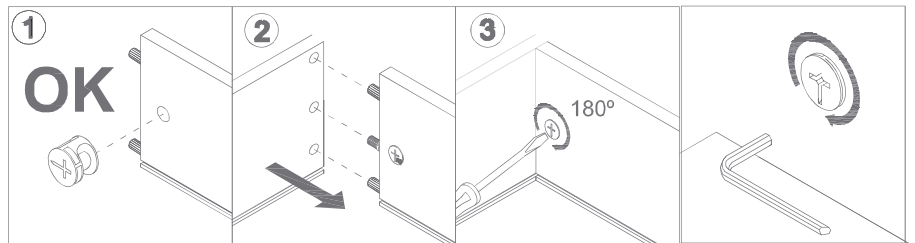

**3 x2**

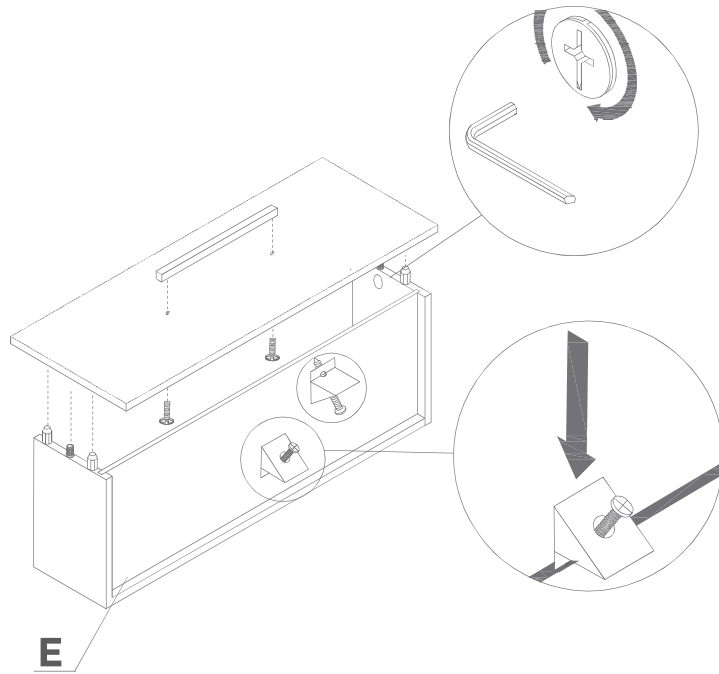


**9**

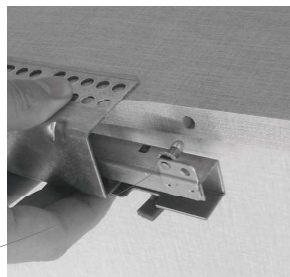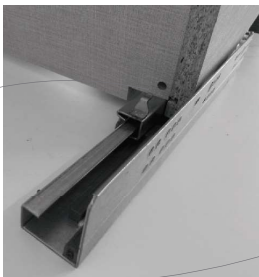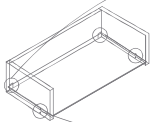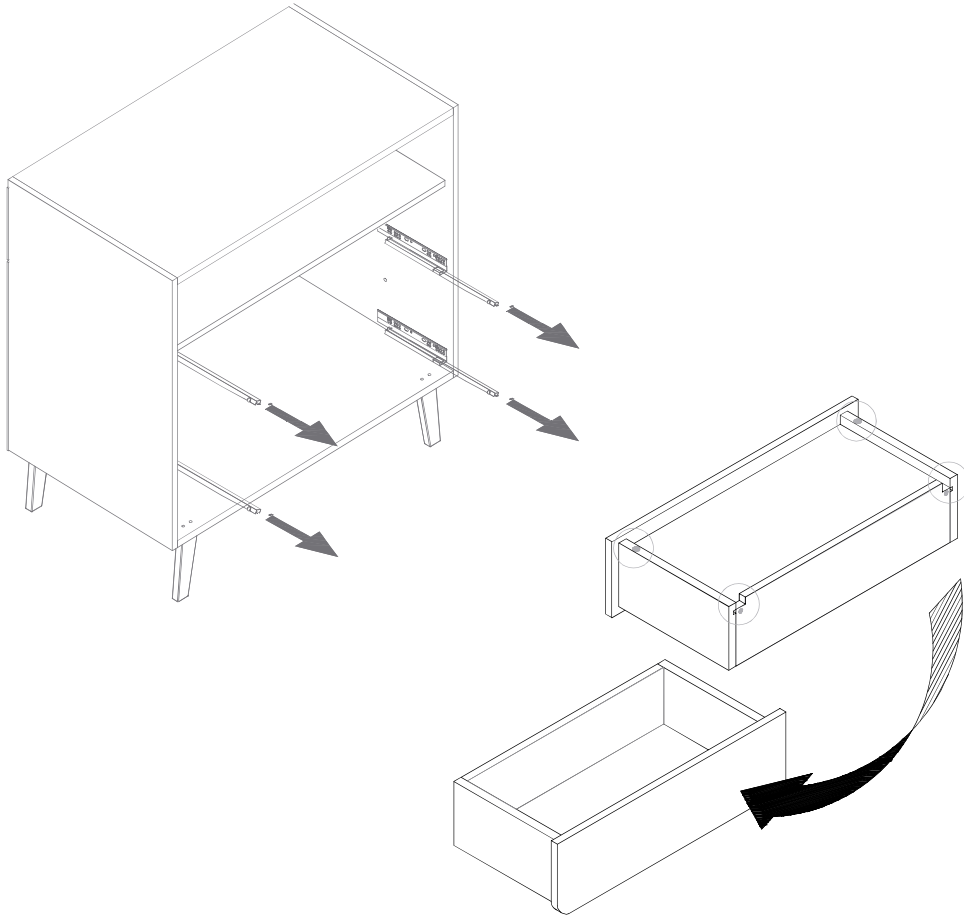





# 10

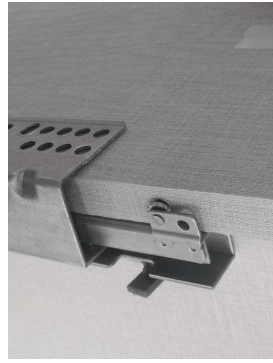


OK

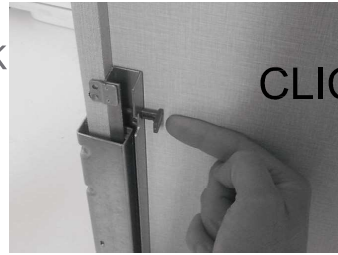

CLICK!

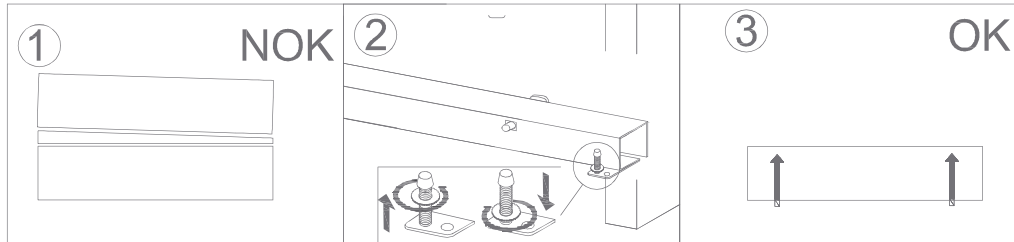


# 11





C00329 x1


C04790 x4



C04790 x6

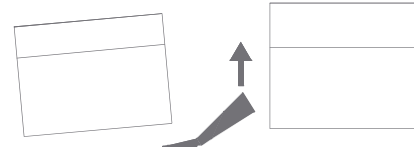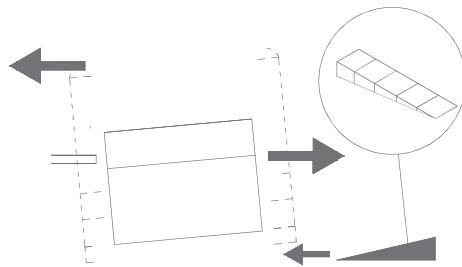


OK

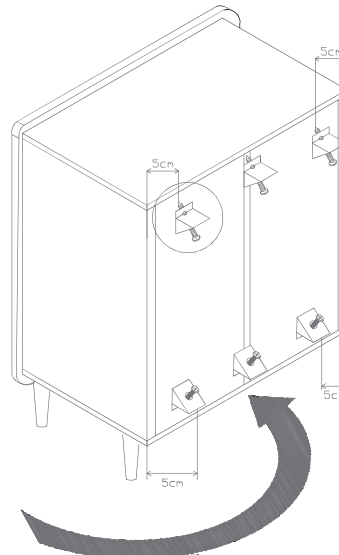


12





C11092 x1



C10392 x1



C00326 x1

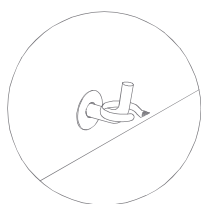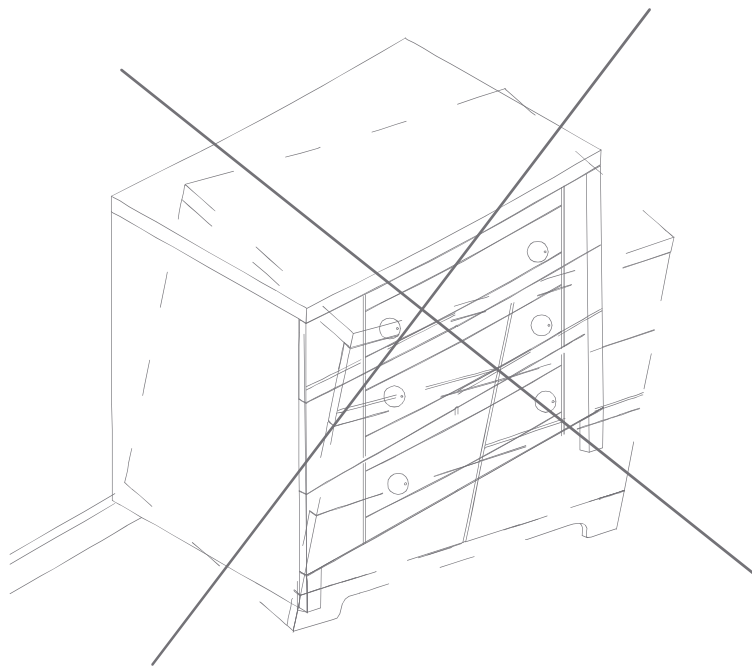

OK