



**C02953**  
**X2**

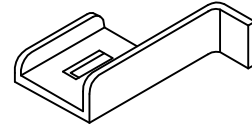

**C02952**  
**X2**

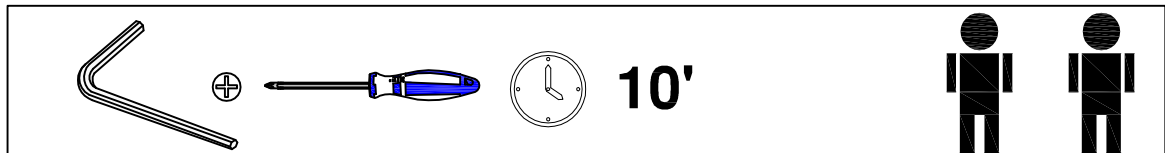

**Complemento Cuna de 120X60**  
**CP-1833 KIT RELAX**  
**Instrucciones de Montaje**  
**Fabricado en Valencia, España**

**-IMPORTANTE: A CONSERVAR PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.**

ES

EN -IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

FR -ATTENTION: CONSERVER POUR CONSULTER AU FUTUR.

IT -IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONE. TENERE PER FUTURE CONSULTAZIONE.


PT -IMPORTANTE: MANTENHA PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.

R -ВАЖНО: СОХРАНИТЕ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ . ВНИМАТЕЛЬНО ПРОЧТИТЕ .


A - ماه. ظرفح اءعجارمئل. أرقا اءي ء لبق لامءءسال









CN -重要事项: 保留以备将来参考, 请仔细阅读。

1

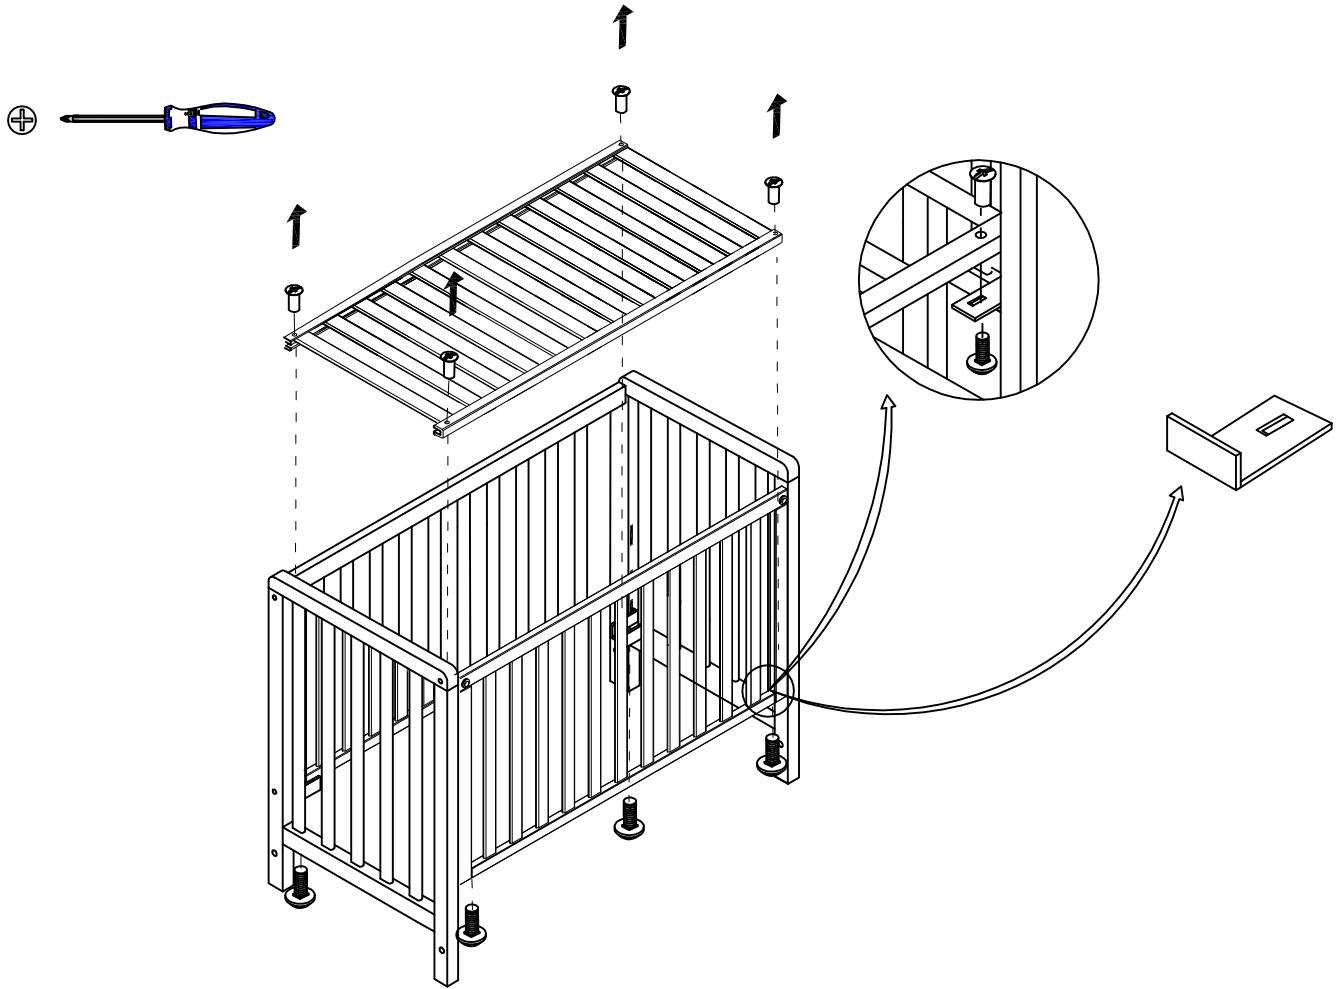


2

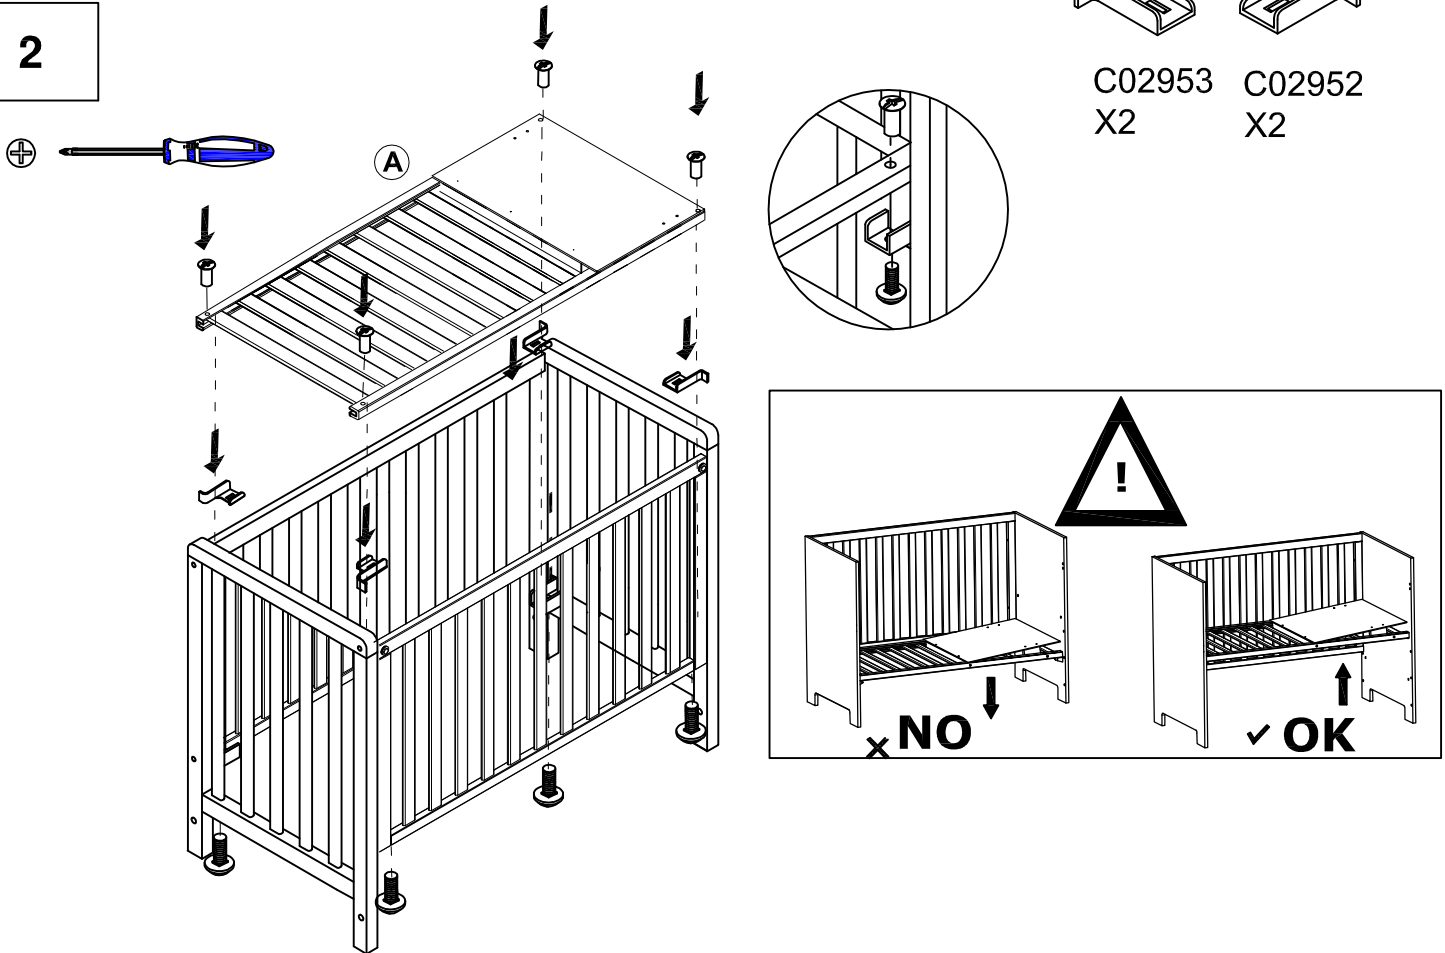

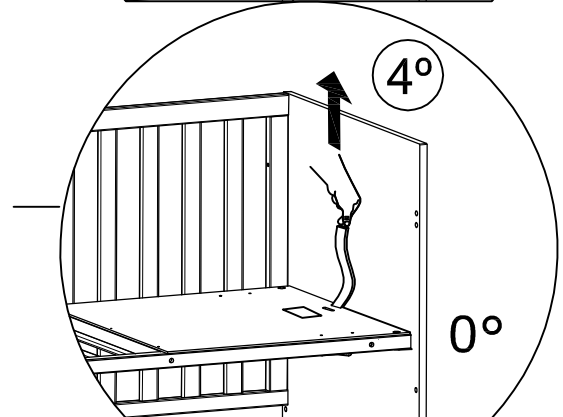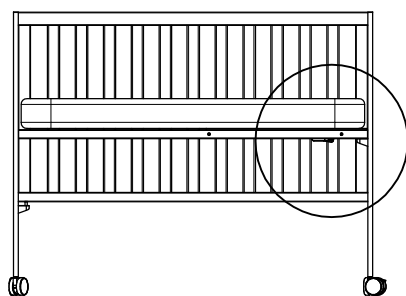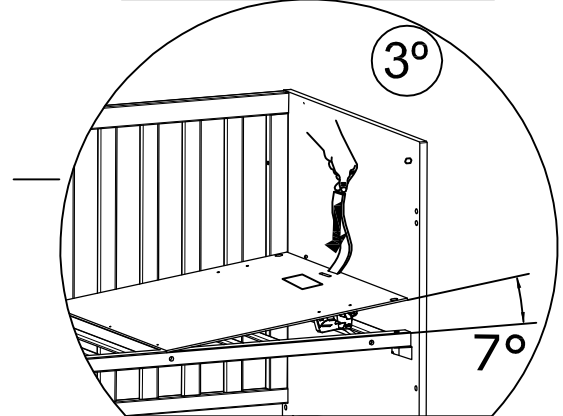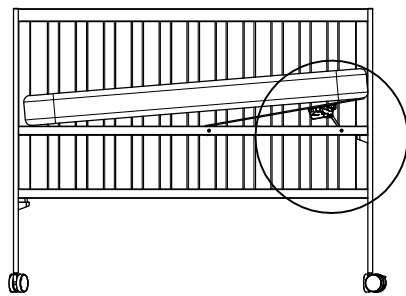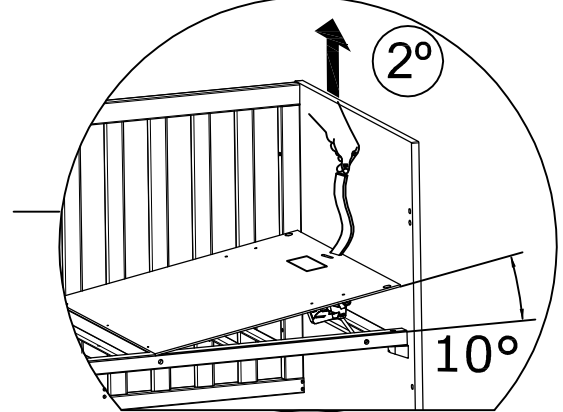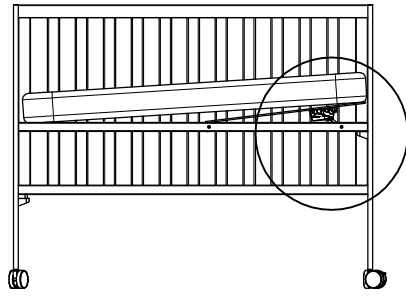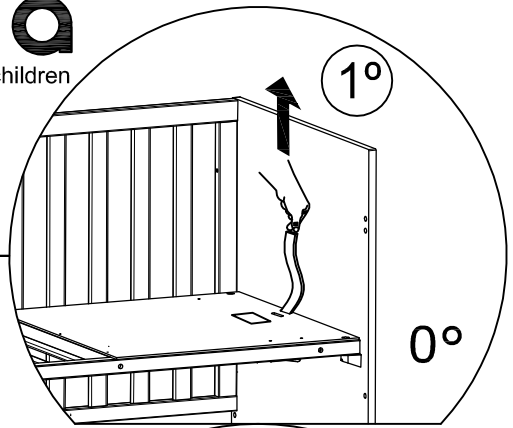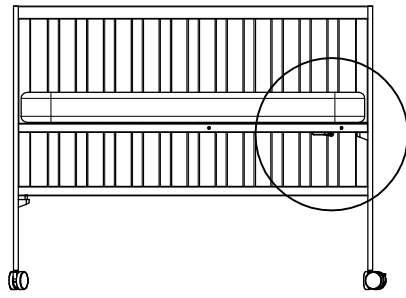

**WARNING !!!**

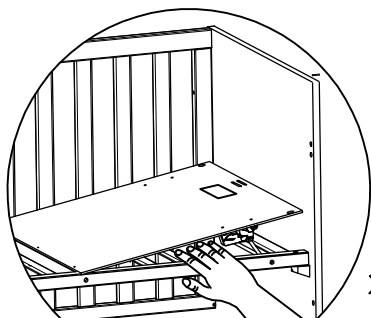

**X NO**