

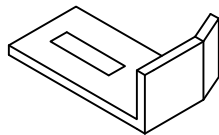


C10823 X2

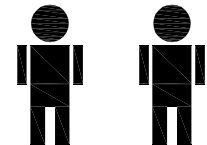

C10824 X2

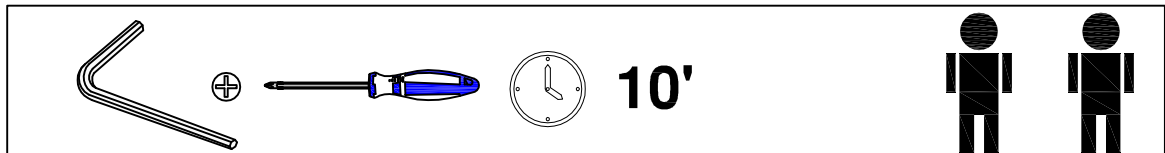

Complemento Cuna de 120X60

CP-1833 KIT RELAX

Instrucciones de Montaje

Fabricado en Valencia, España

-IMPORTANTE: A CONSERVAR PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.

ES

EN -IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

FR -ATTENTION: CONSERVER POUR CONSULTER AU FUTUR.

IT -IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONE. TENERE PER FUTURE CONSULTAZIONE.



PT -IMPORTANTE: MANTENHA PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.

R -ВАЖНО: СОХРАНИТЕ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ . ВНИМАТЕЛЬНО ПРОЧТИТЕ .


A - ماه. ظرفح اةعجارمئل. أرقا اءي ج لقب لامع تسال









CN -重要事项: 保留以备将来参考, 请仔细阅读。

1

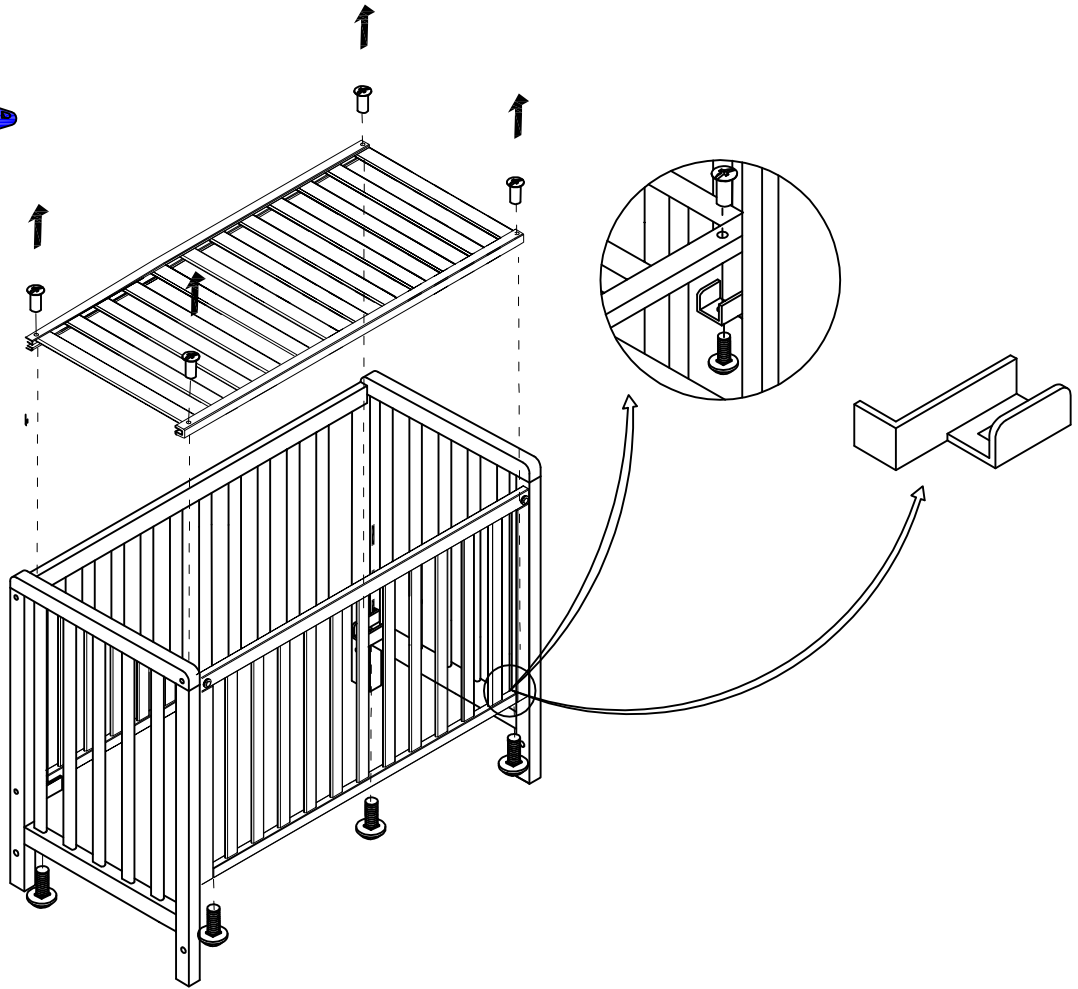

2

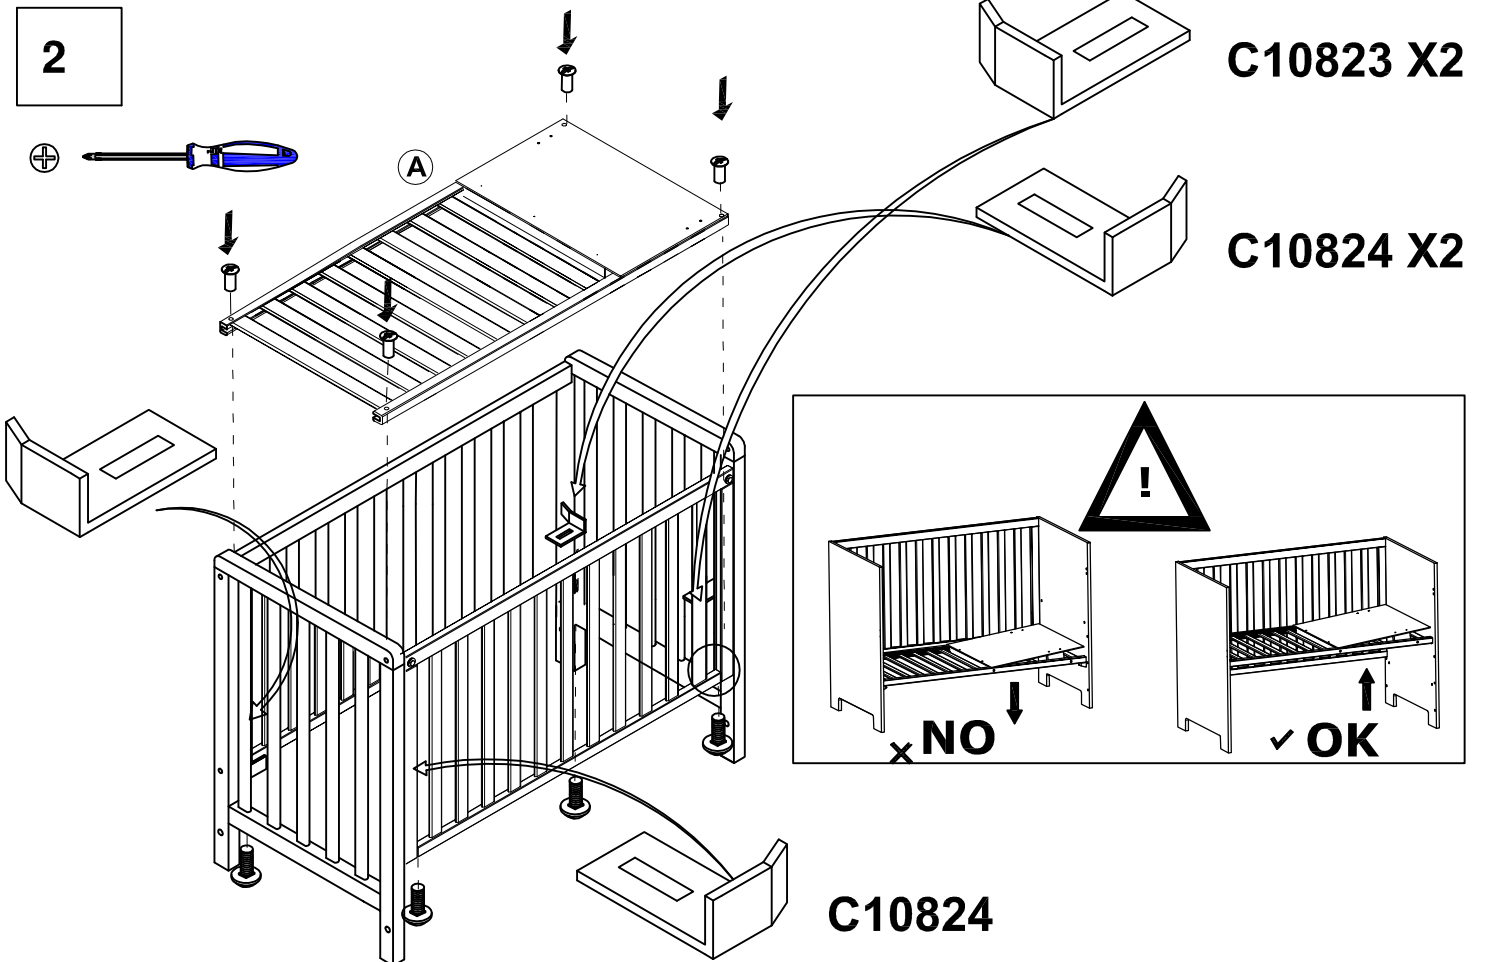

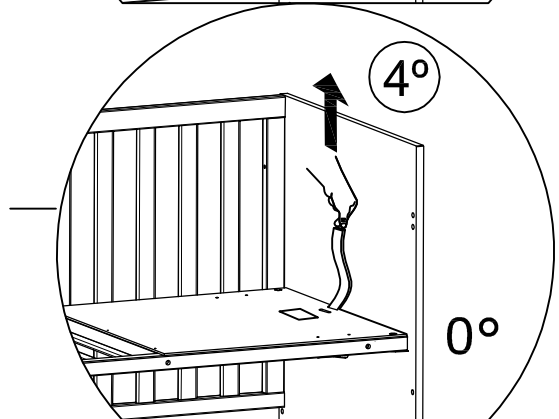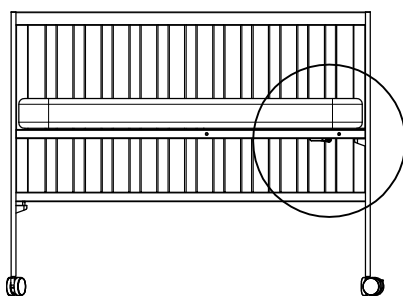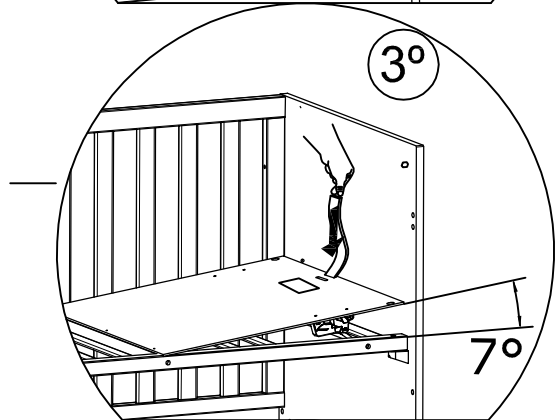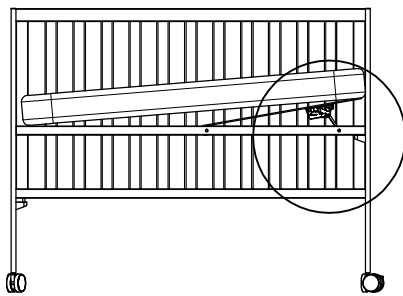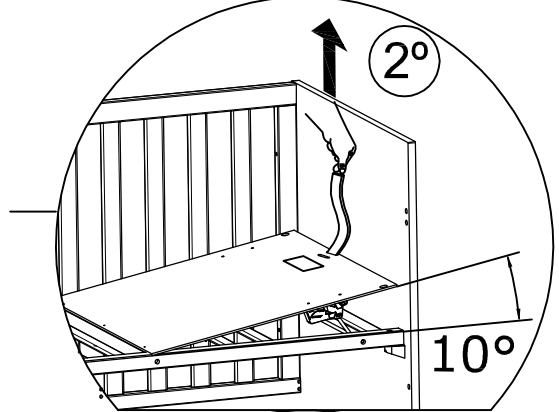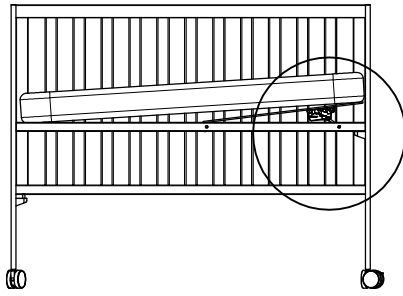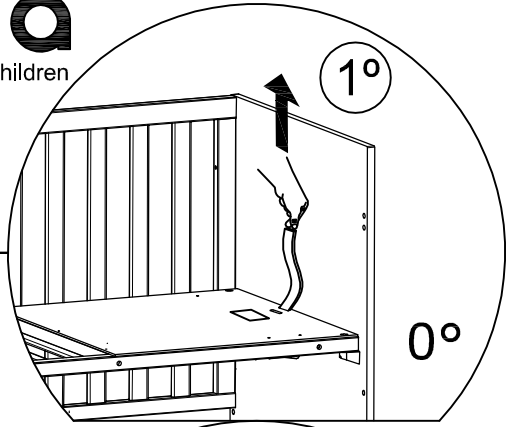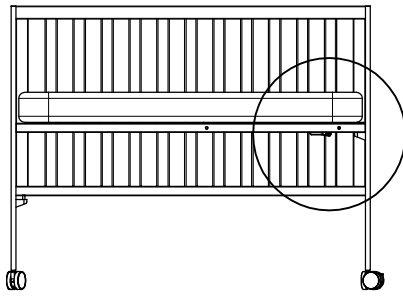

WARNING !!!

