

Instrucciones de montaje · Assembly Instructions

CO-1972



ES · IMPORTANTE: A CONSERVAR PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.

EN · IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

FR · ATTENTION: CONSERVER POUR CONSULTER AU FUTUR.

IT · IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONE. TENERE PER FUTURE CONSULTAZIONE.



PT · IMPORTANTE: MANTENHA PARA FUTURAS CONSULTAS. LÉASE ANTENTAMENTE.

R · ВАЖНО: СОХРАНИТЕ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ. ВНИМАТЕЛЬНО ПРОЧИТИТЕ.


A · — لامعتسالا لابق اديج أرقا. ةعجارم لل ظفح ا ماه

CN · 重要事项：保留以备将来参考，请仔细阅读。



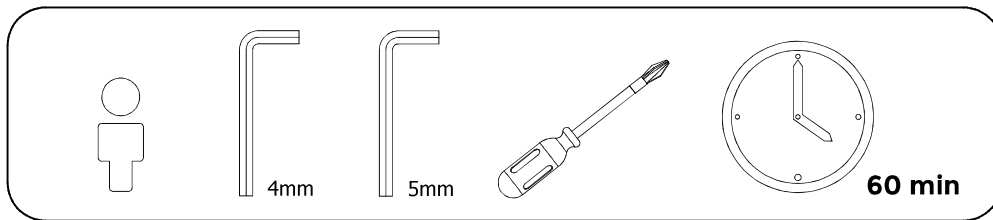

C07914
x1 (4mm)



C07506
x1 (5mm)



C02374
x6 (4x22)




C01538
x24



C01537
x24




C01419
x8 (7.8x25)



C11286
x4



C01235
x12 (euro)

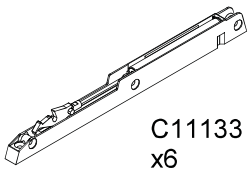


C11133
x6



C11196
x6



C04790
x12




C00329
x1




C11322
x12 (3.5x20)



C01113
x12 (3.5x15)

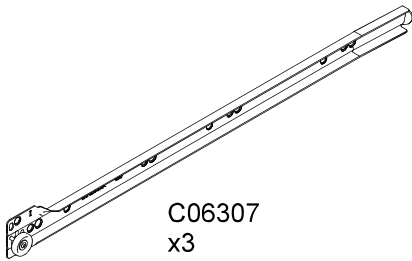


C06307
x3

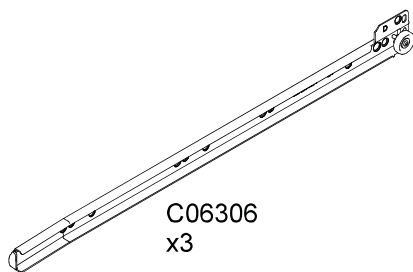

C06306
x3




C00326
x1




C10392
x1



C10987
x4

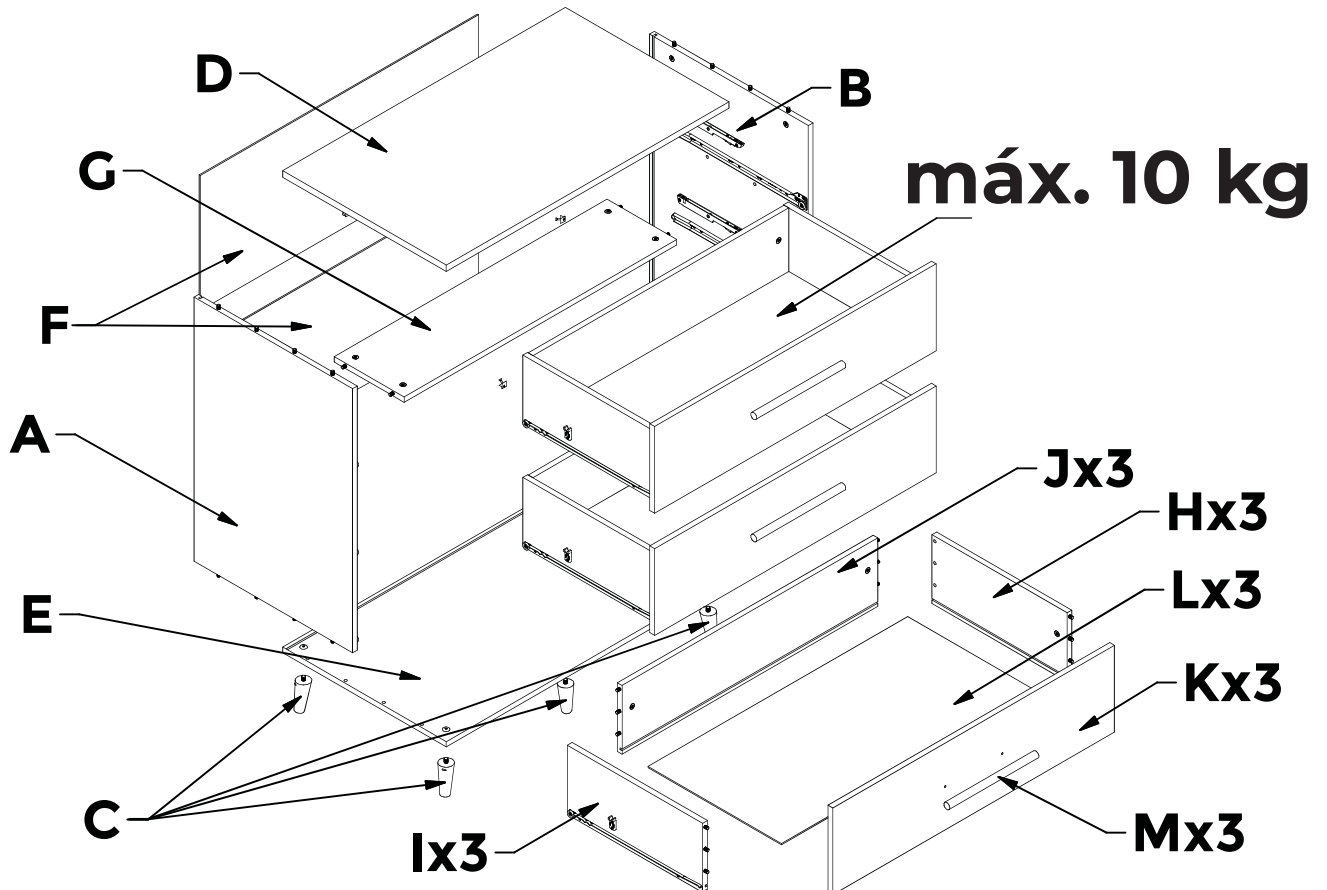

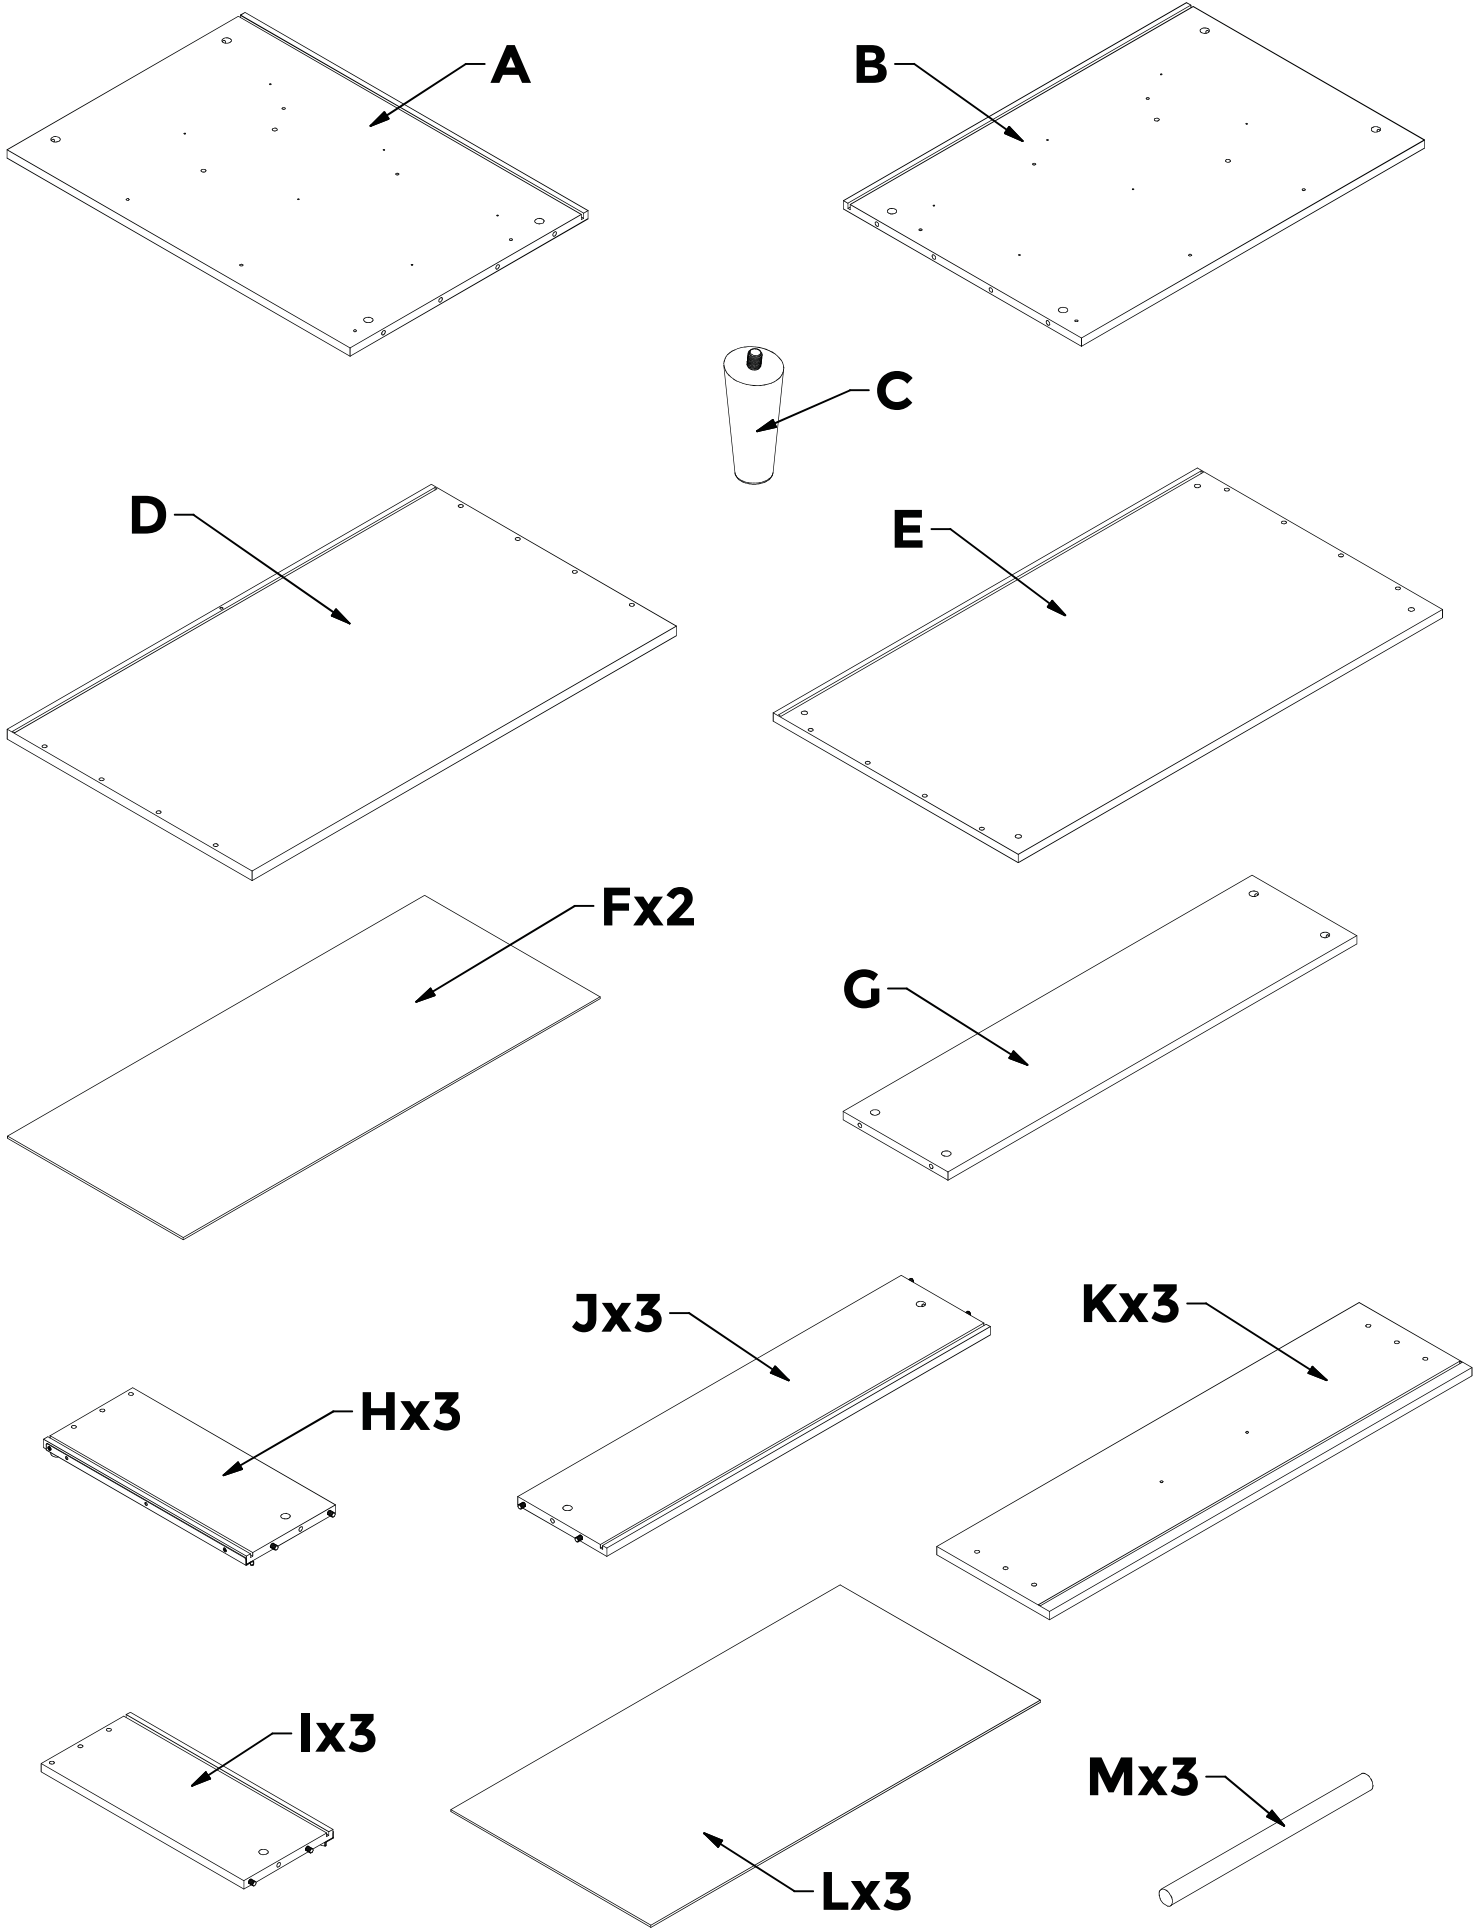


1




C01419
x4 (7.8x25)



C01537
x4





C01538
x24

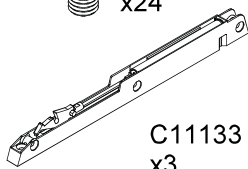


C11133
x3




C11322
x6 (3.5x20)

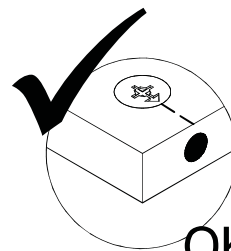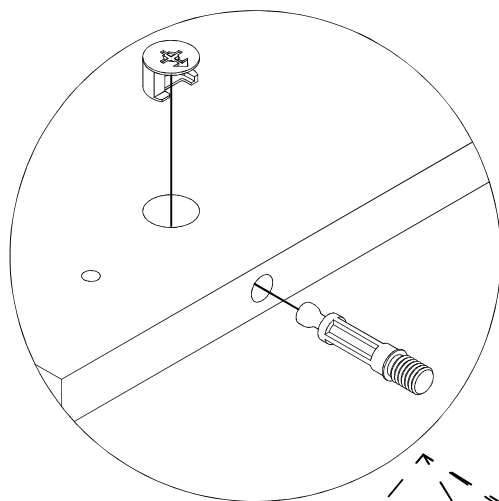


OK

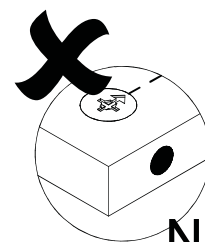




NOK

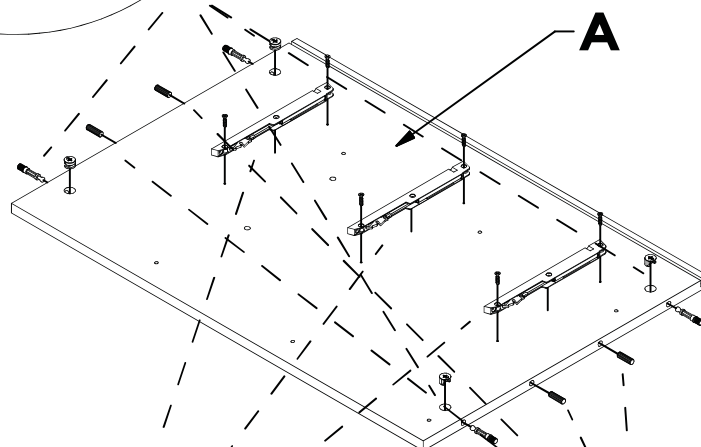


A

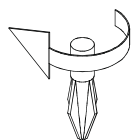

x6

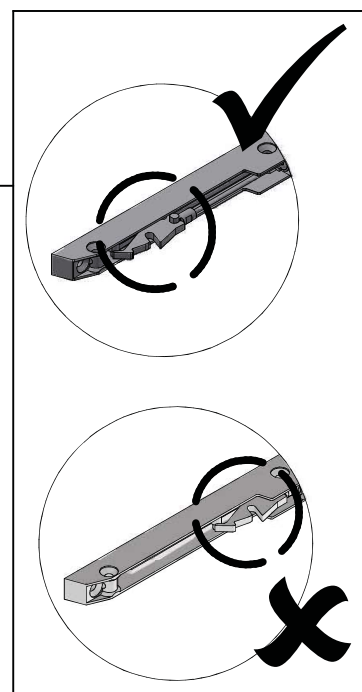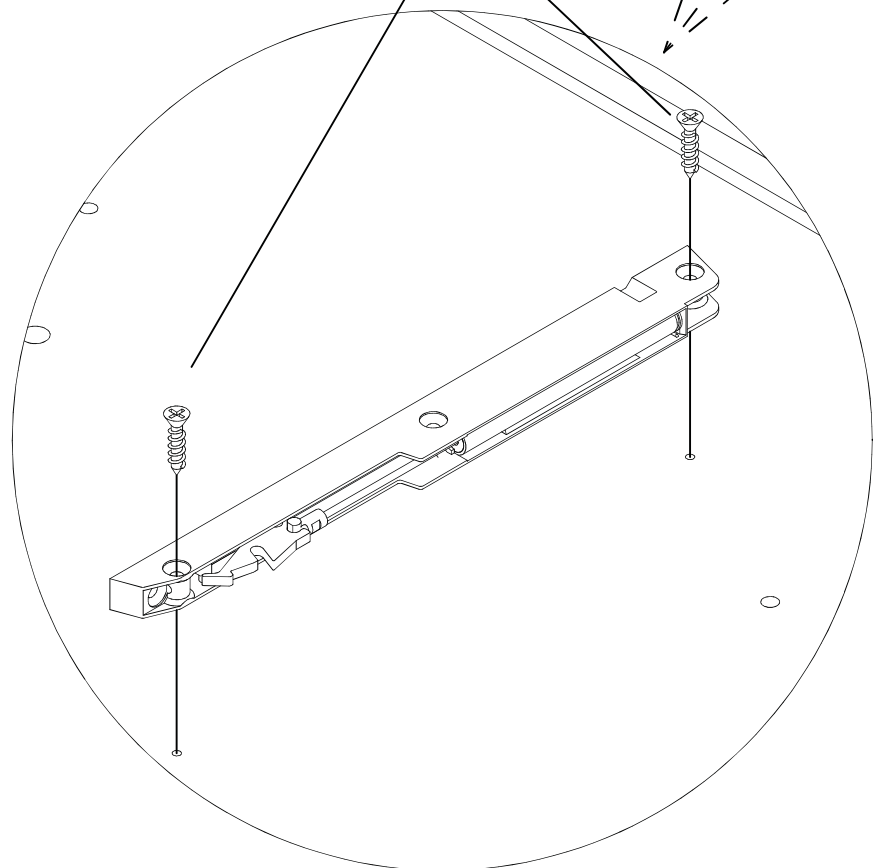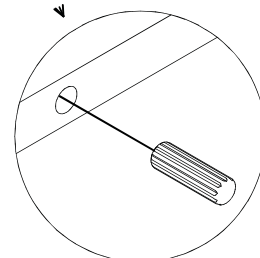

2




C01419
x4 (7.8x25)



C01537
x4





C01538
x24

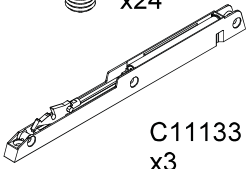


C11133
x3





C11322
x6 (3.5x20)

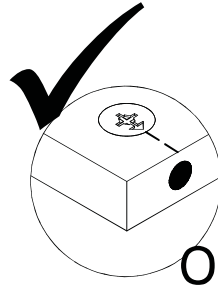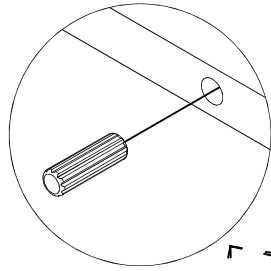



OK

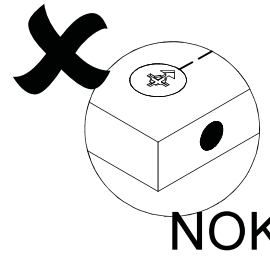


NOK

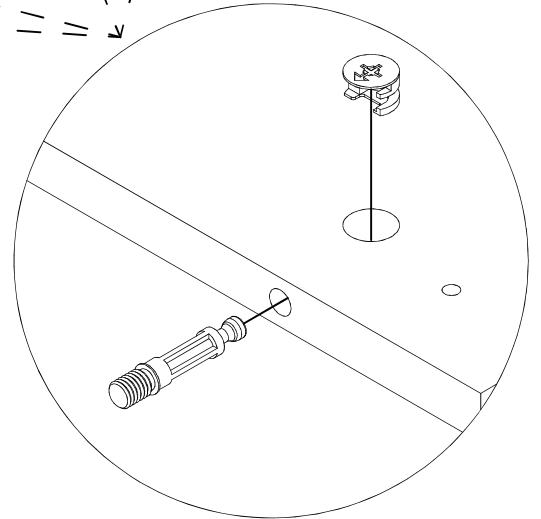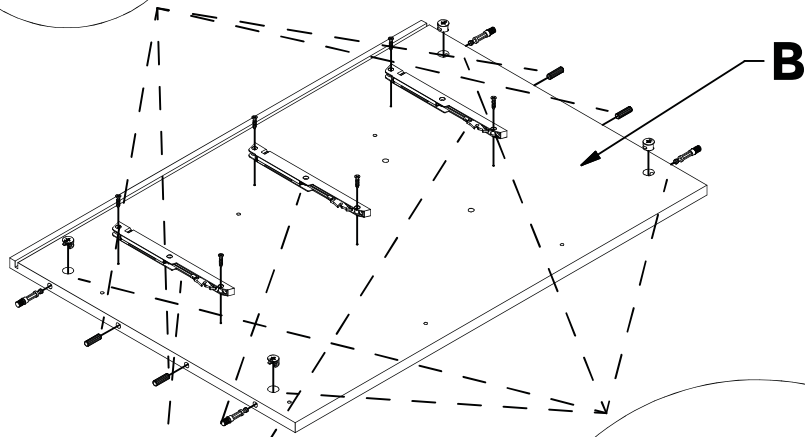

x6

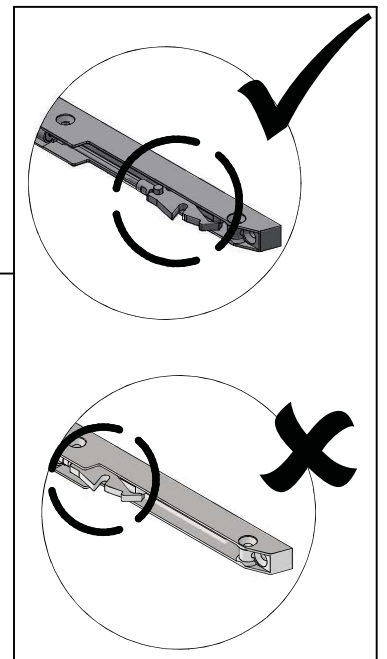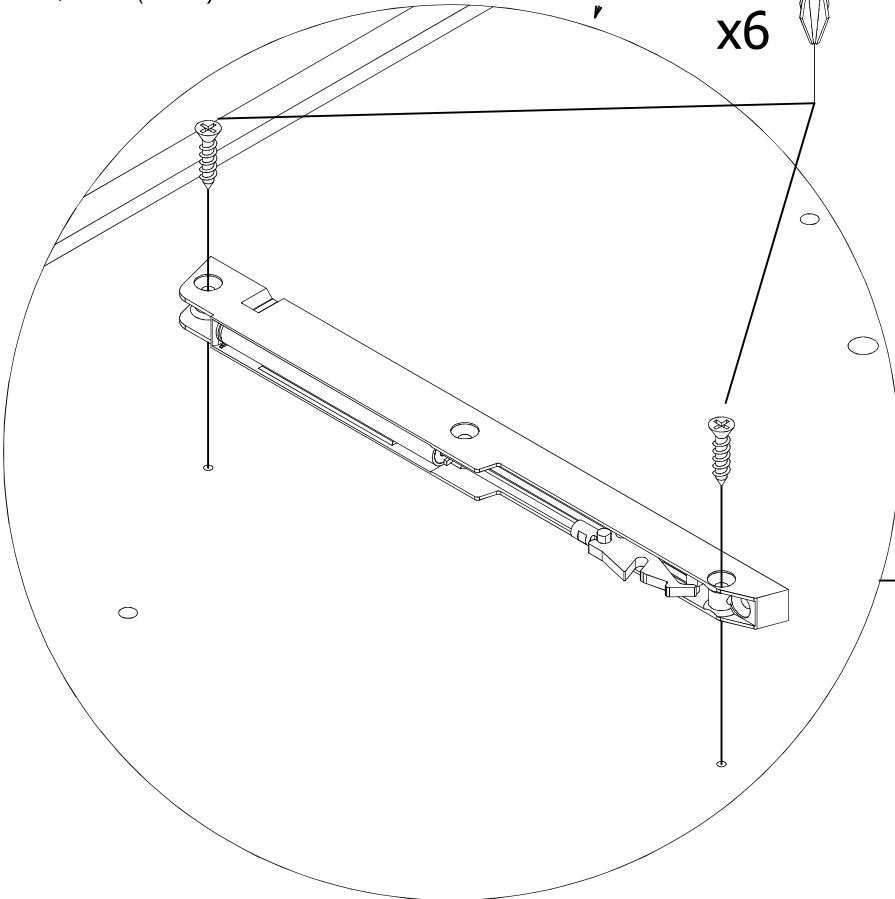


3



C11286
x4




C10987
x4

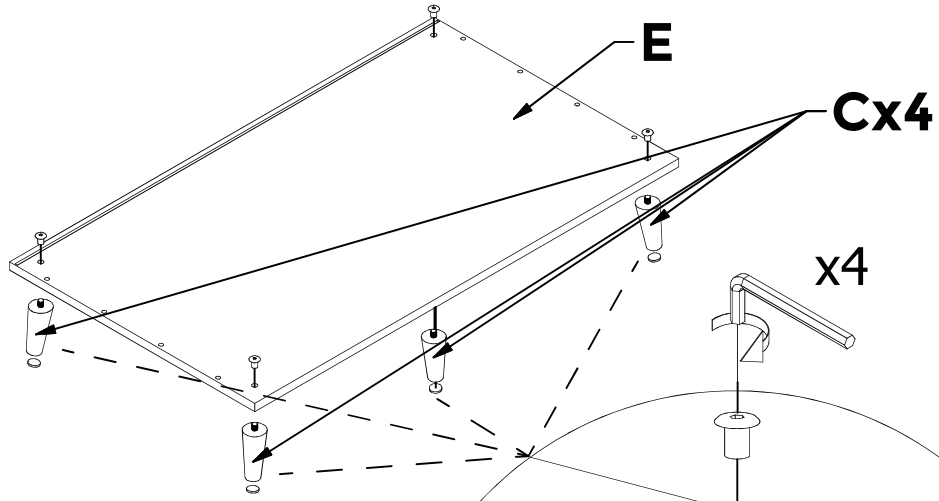




4




C01537
x4




C01538
x4

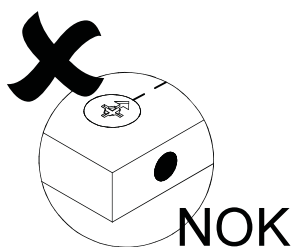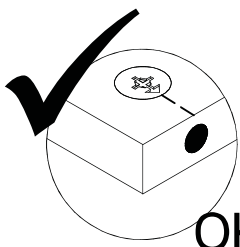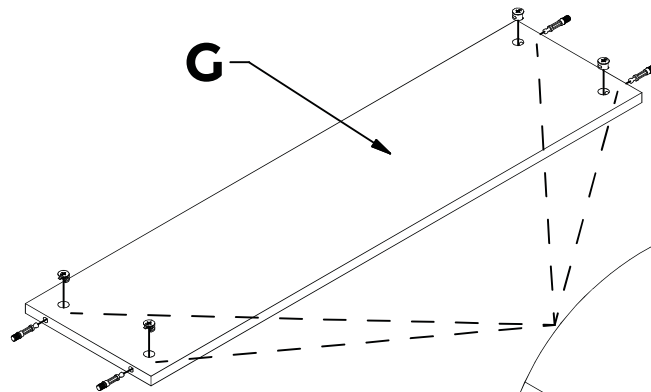


5

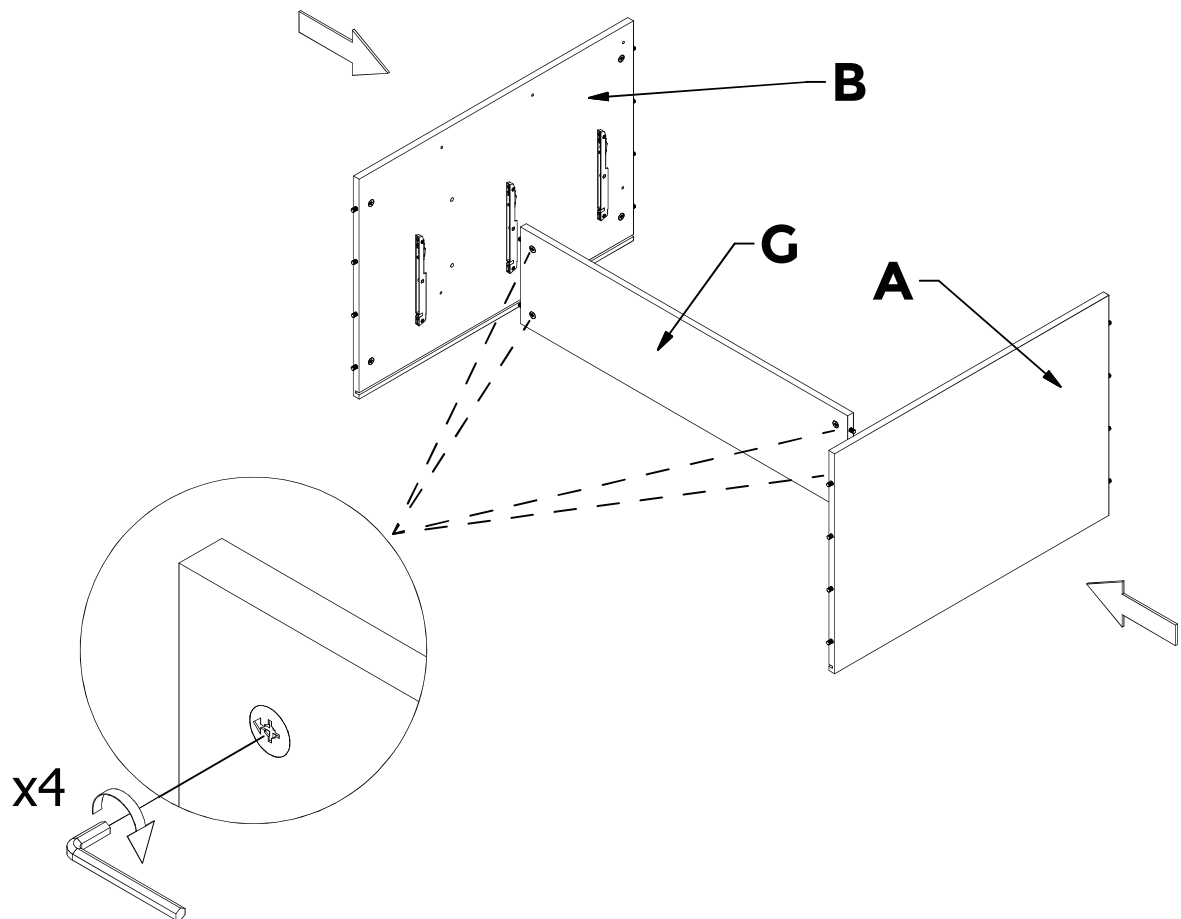



6

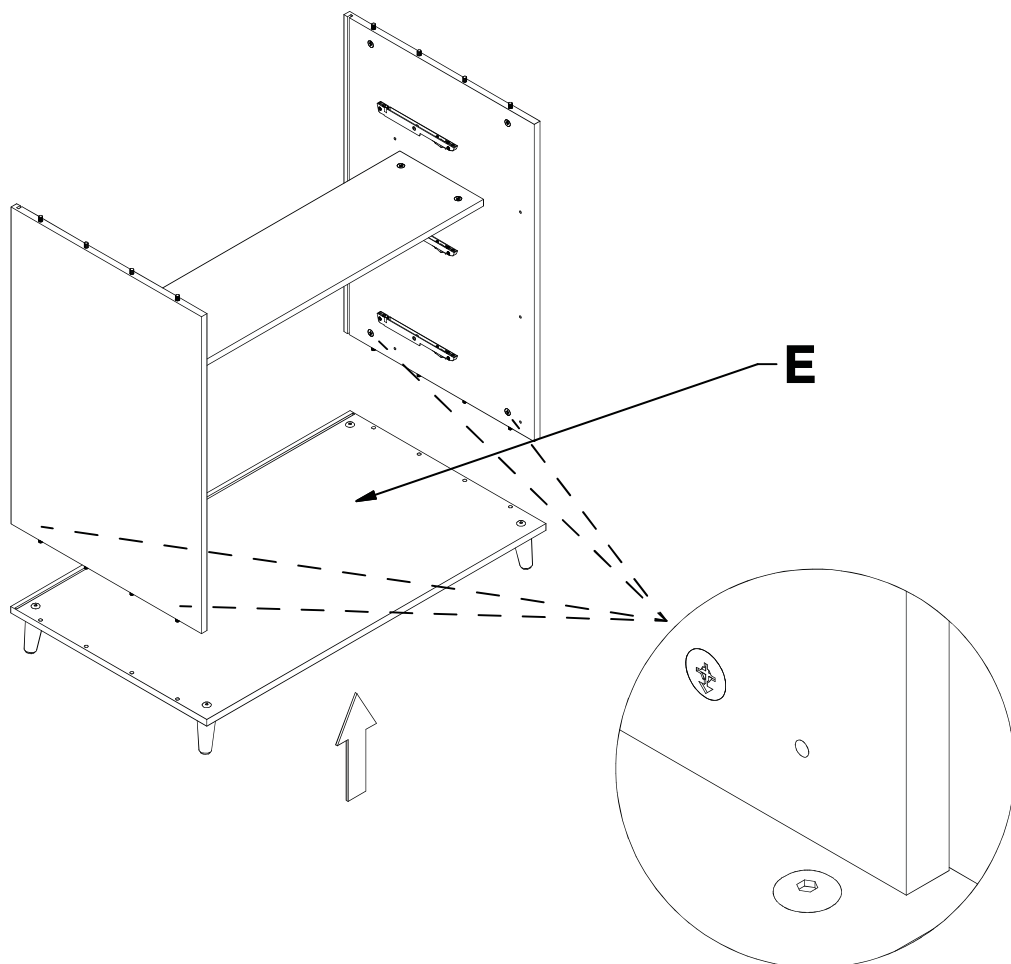


7

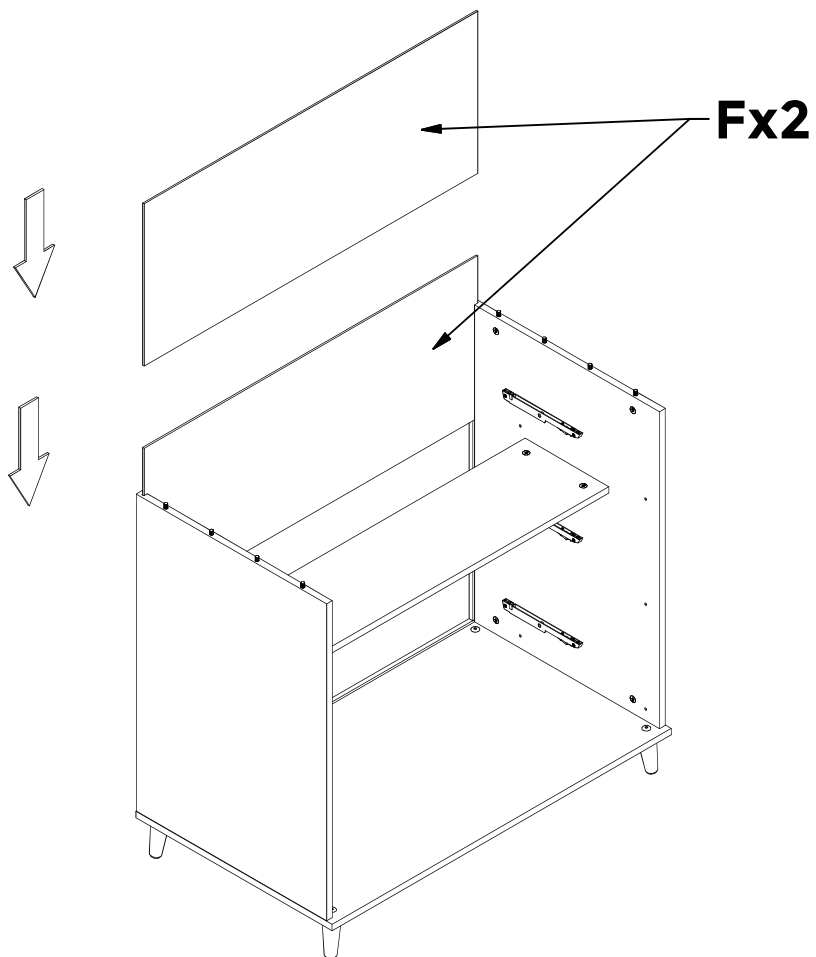



8

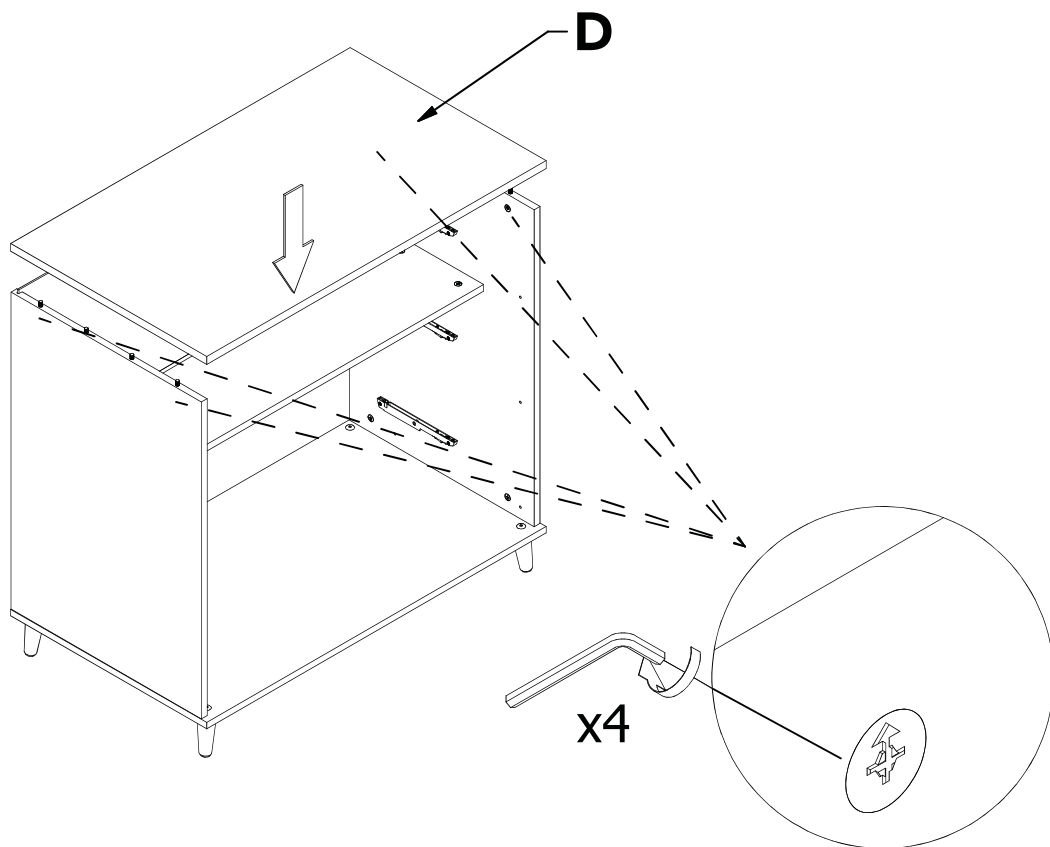

9




C04790
x6

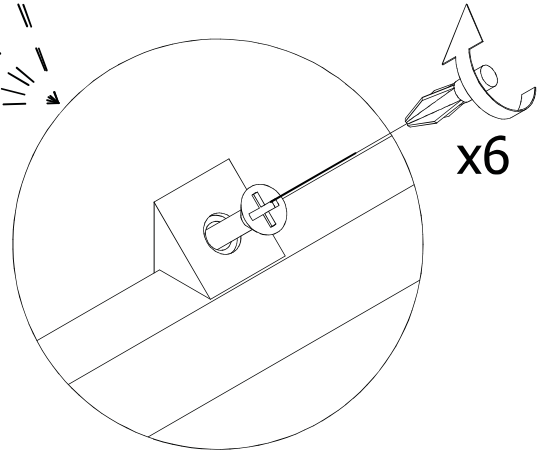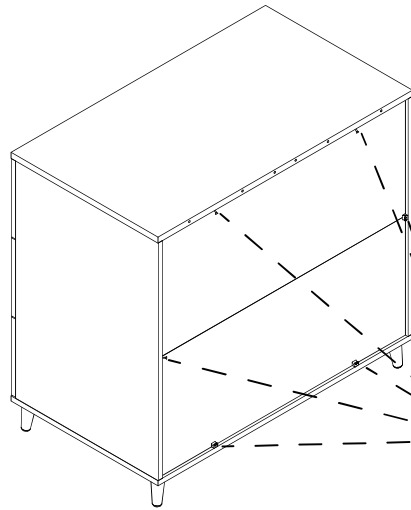

10




C01537
x12




C01538
x12




Ix3

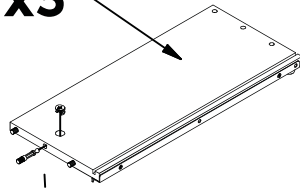


Hx3

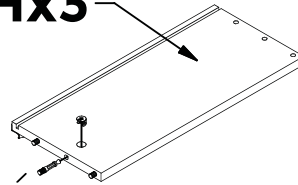

Jx3

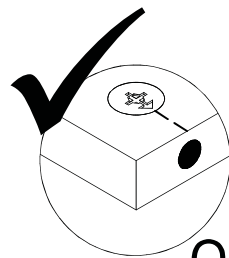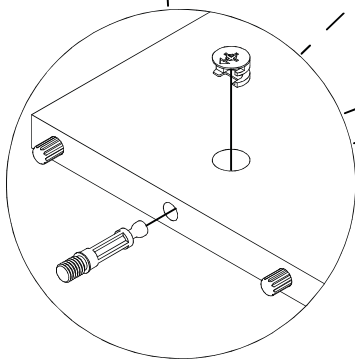
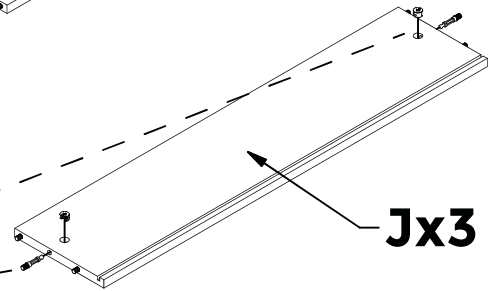


OK

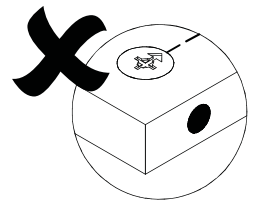


NOK

11

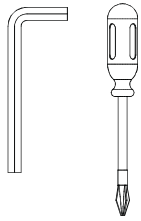

C02374
x6 (4x22)

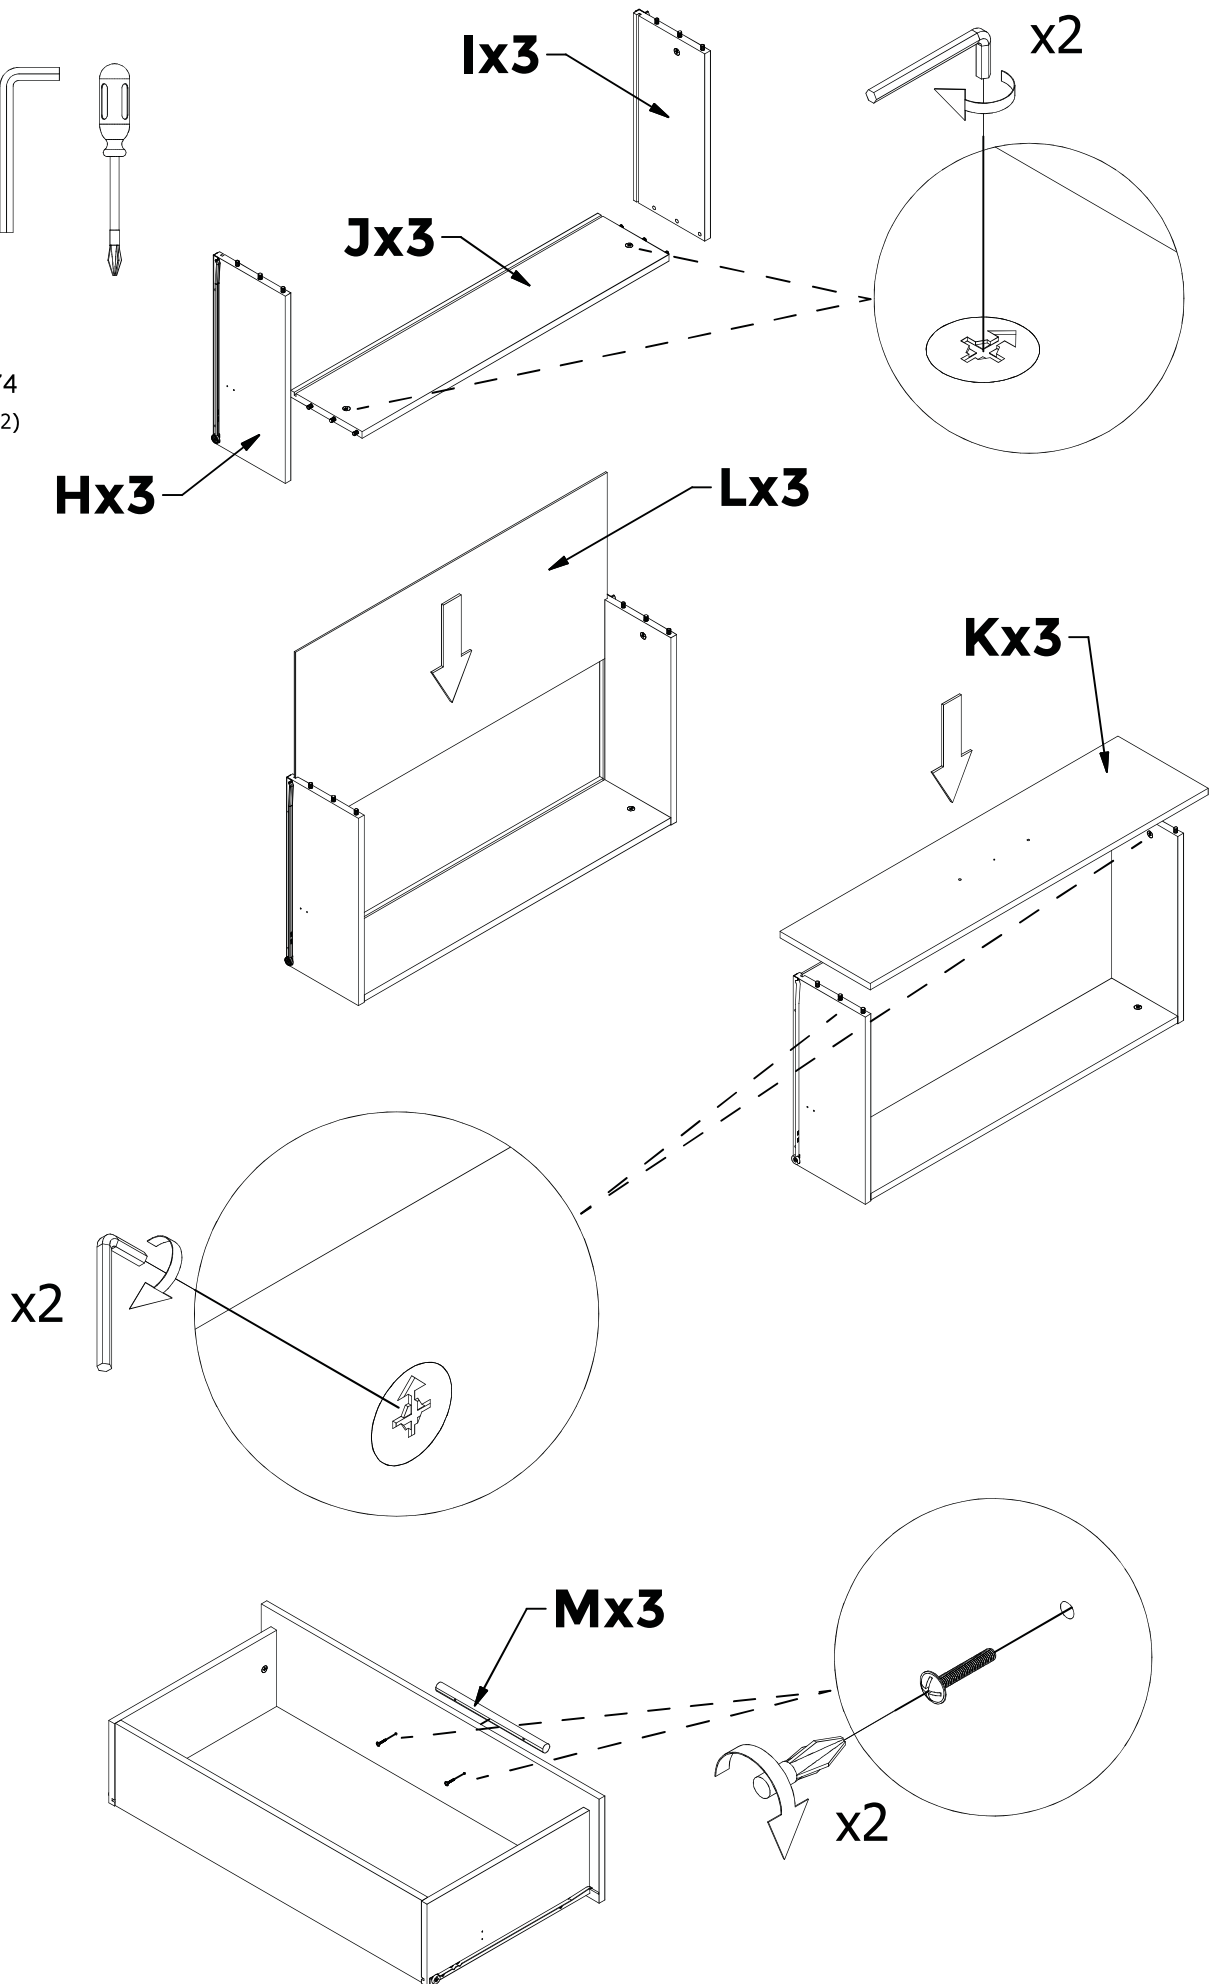





12



C01113
x12 (3.5x15)




C00329
x6

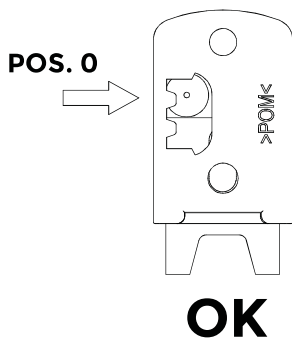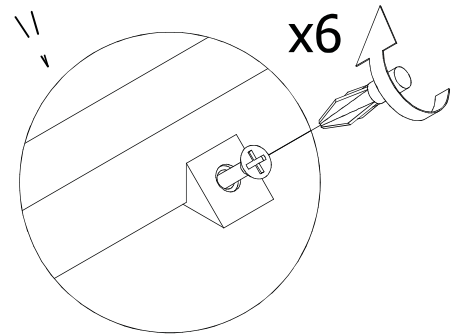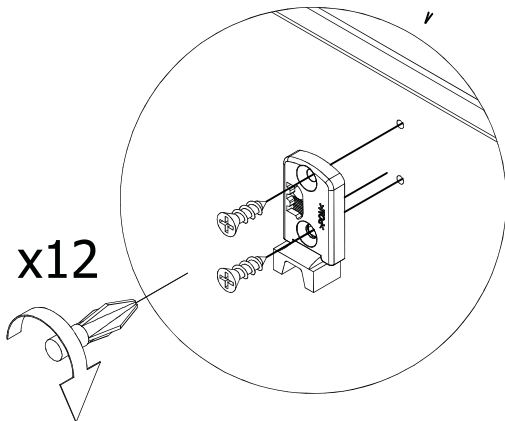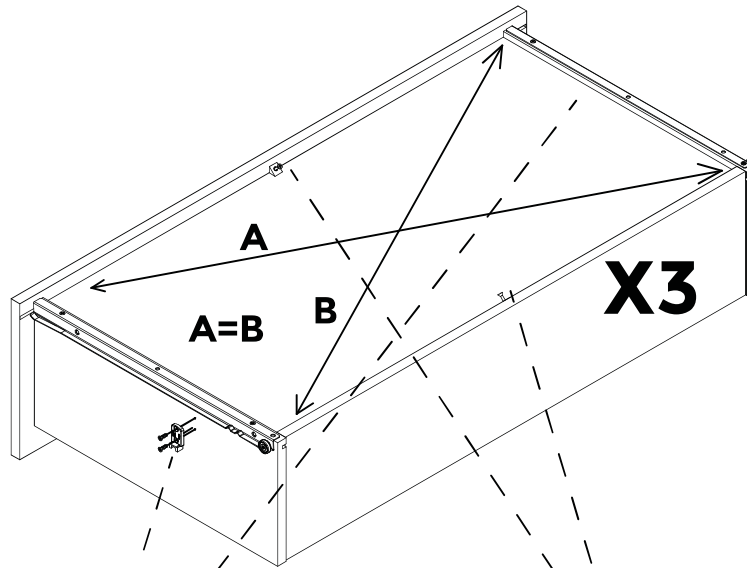


13






C01235
x12 (euro)

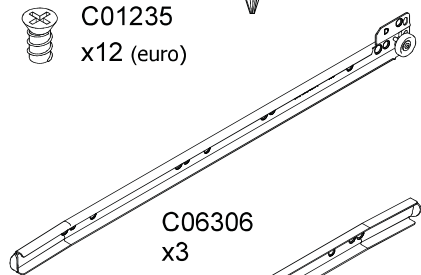


C06306
x3

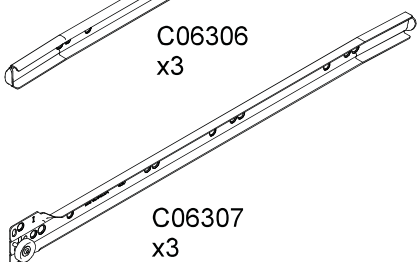


C06307
x3

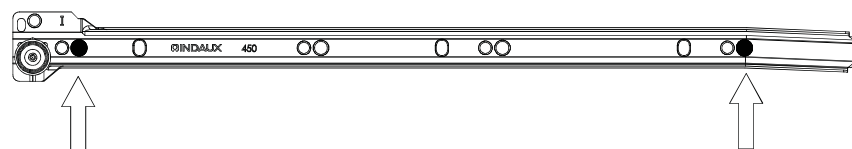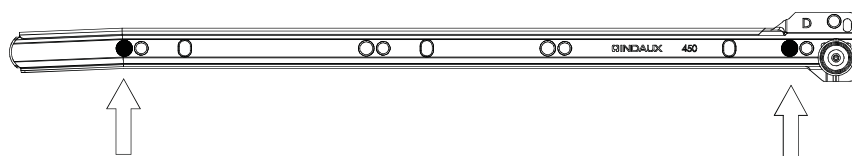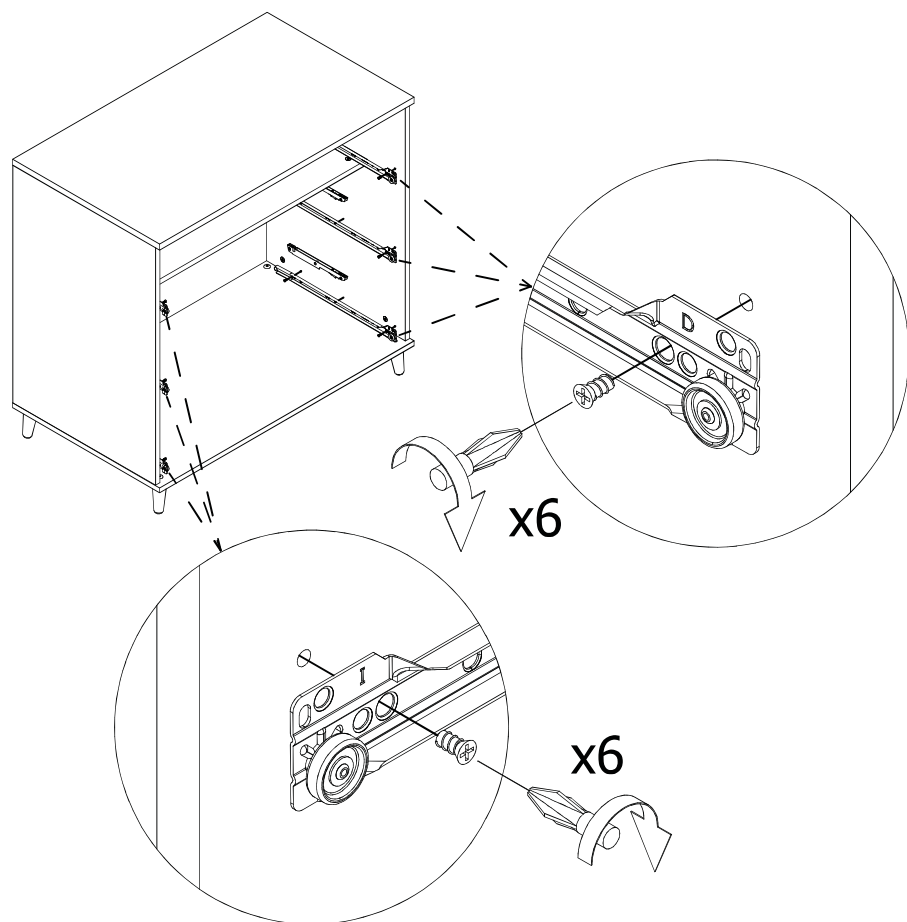


14

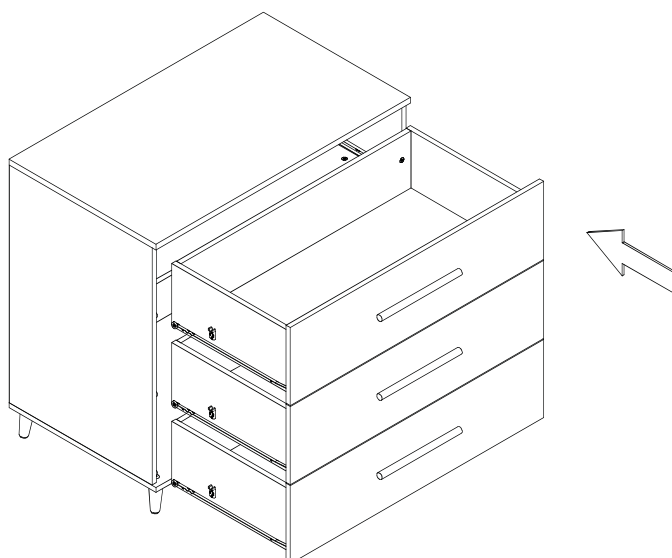



15





C00326
x1




C10392
x1

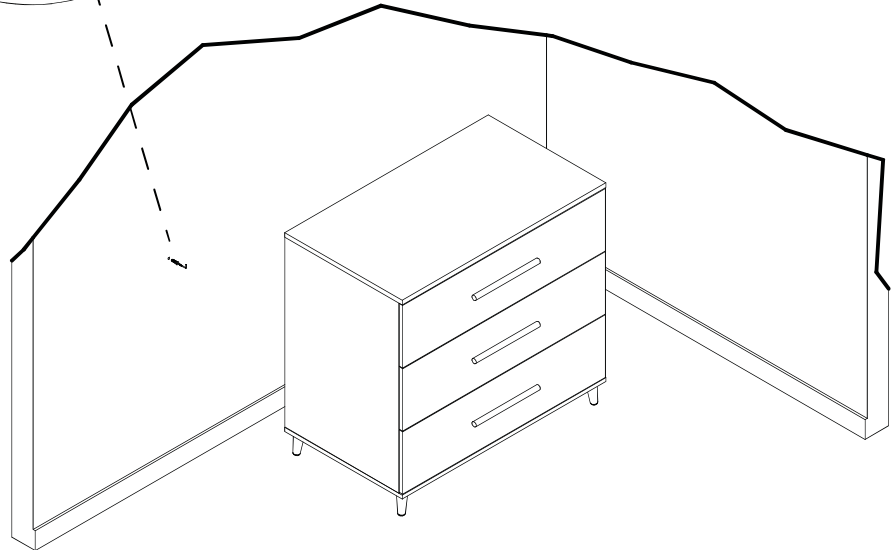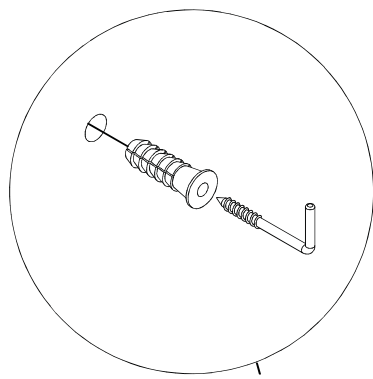





16

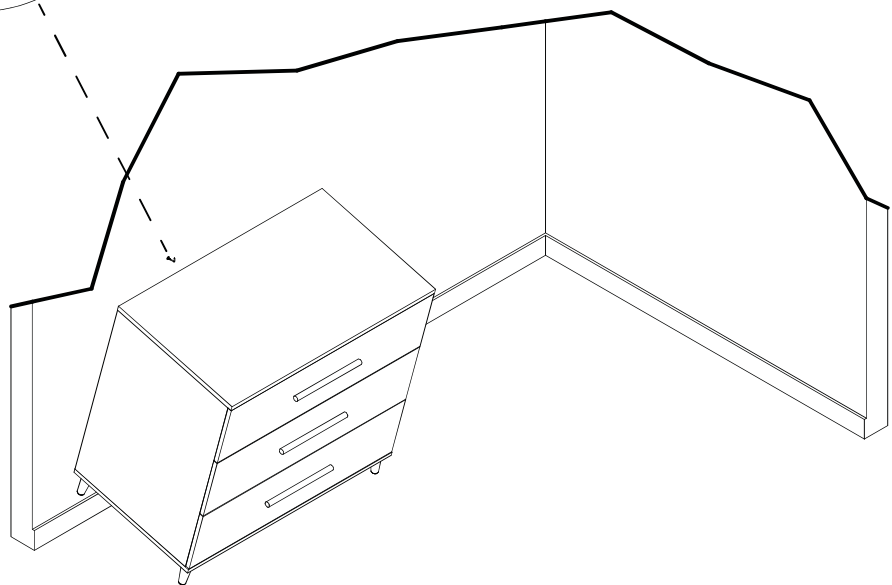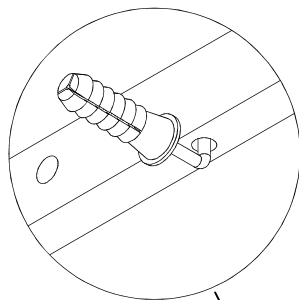

17



C00329
x1

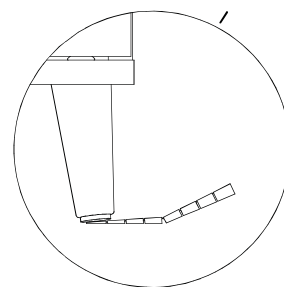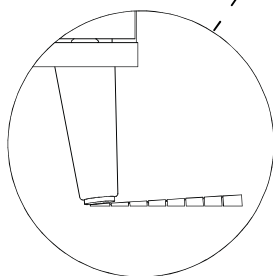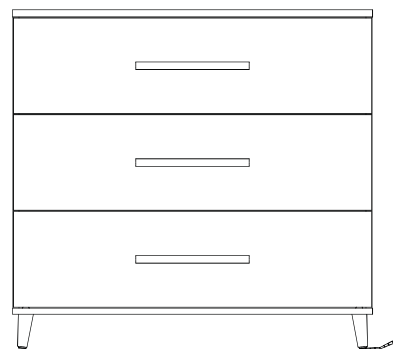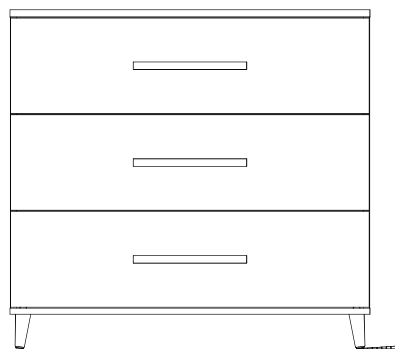

OK!!